

- 24-hour Telephone Number: (937) 847-3200
Use for urgent or emergency needs for technical support, service and/or replacement parts
- Routine Technical Inquiries: techsupport@motoman.com
Allow up to 36 hours for response

YRC1000 OPTIONS INSTRUCTIONS

FOR FUNCTIONAL SAFETY FUNCTION

Upon receipt of the product and prior to initial operation, read these instructions thoroughly, and retain for future reference.

MOTOMAN INSTRUCTIONS

MOTOMAN-□□□ INSTRUCTIONS
YRC1000 INSTRUCTIONS
YRC1000 OPERATOR'S MANUAL (GENERAL) (SUBJECT SPECIFIC)
YRC1000 MAINTENANCE MANUAL
YRC1000 ALARM CODES (MAJOR ALARMS) (MINOR ALARMS)

Please have the following information available when contacting Yaskawa Customer Support:

- System
- Primary Application
- Software Version (*Located on Programming Pendant by selecting: {Main Menu} - {System Info} - {Version}*)
Robot Serial Number (*Located on robot data plate*)
Robot Sales Order Number (*Located on controller data plate*)

Part Number: 178949-1CD
Revision: 4



DANGER

- This manual explains the functional safety function of the YRC1000 system. Read this manual carefully and be sure to understand its contents before handling the YRC1000. Any matter, including operation, usage, measures, and an item to use, not described in this manual must be regarded as “prohibited” or “improper”.
- General information related to safety are described in “Chapter 1. Safety” of the YRC1000 INSTRUCTIONS. To ensure correct and safe operation, carefully read “Chapter 1. Safety” of the YRC1000 INSTRUCTIONS.



CAUTION

- In some drawings in this manual, protective covers or shields are removed to show details. Make sure that all the covers or shields are installed in place before operating this product.
- YASKAWA is not responsible for incidents arising from unauthorized modification of its products. Unauthorized modification voids the product warranty.

NOTICE

- The drawings and photos in this manual are representative examples and differences may exist between them and the delivered product.
- YASKAWA may modify this model without notice when necessary due to product improvements, modifications, or changes in specifications. If such modification is made, the manual number will also be revised.
- If your copy of the manual is damaged or lost, contact a YASKAWA representative to order a new copy. The representatives are listed on the back cover. Be sure to tell the representative the manual number listed on the front cover.

Notes for Safe Operation

Read this manual carefully before installation, operation, maintenance, or inspection of the YRC1000.

In this manual, the Notes for Safe Operation are classified as “DANGER”, “WARNING”, “CAUTION”, or “NOTICE”.



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. Safety Signs identified by the signal word DANGER should be used sparingly and only for those situations presenting the most serious hazards.



WARNING

Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury. Hazards identified by the signal word WARNING present a lesser degree of risk of injury or death than those identified by the signal word DANGER.



CAUTION

Indicates a hazardous situation, which if not avoided, could result in minor or moderate injury. It may also be used without the safety alert symbol as an alternative to “NOTICE”.

NOTICE

NOTICE is the preferred signal word to address practices not related to personal injury. The safety alert symbol should not be used with this signal word. As an alternative to “NOTICE”, the word “CAUTION” without the safety alert symbol may be used to indicate a message not related to personal injury.

Even items described as “CAUTION” may result in a serious accident in some situations.

At any rate, be sure to follow these important items.



To ensure safe and efficient operation at all times, be sure to follow all instructions, even if not designated as “DANGER”, “WARNING” and “CAUTION”.



DANGER

- Before operating the manipulator, make sure the servo power is turned OFF by performing the following operations. When the servo power is turned OFF, the SERVO ON LED on the programming pendant is turned OFF.
 - Press the emergency stop buttons on the front door of the YRC1000, on the programming pendant, on the external control device, etc.
 - Disconnect the safety plug of the safety fence. (when in the play mode or in the remote mode)

If operation of the manipulator cannot be stopped in an emergency, personal injury and/or equipment damage may result.

Fig. : Emergency Stop Button



- Before releasing the emergency stop, make sure to remove the obstacle or error caused the emergency stop, if any, and then turn the servo power ON.

Failure to observe this instruction may cause unintended movement of the manipulator, which may result in personal injury.

Fig. : Release of Emergency Stop



- Observe the following precautions when performing a teaching operation within the manipulator's operating range:
 - Be sure to perform lockout by putting a lockout device on the safety fence when going into the area enclosed by the safety fence. In addition, the operator of the teaching operation must display the sign that the operation is being performed so that no other person closes the safety fence.
 - View the manipulator from the front whenever possible.
 - Always follow the predetermined operating procedure.
 - Always keep in mind emergency response measures against the manipulator's unexpected movement toward a person.
 - Ensure a safe place to retreat in case of emergency.

Failure to observe this instruction may cause improper or unintended movement of the manipulator, which may result in personal injury.

- Confirm that no person is present in the manipulator's operating range and that the operator is in a safe location before:
 - Turning ON the YRC1000 power
 - Moving the manipulator by using the programming pendant
 - Running the system in the check mode
 - Performing automatic operations

Personal injury may result if a person enters the manipulator's operating range during operation. Immediately press an emergency stop button whenever there is a problem. The emergency stop buttons are located on the front panel of the YRC1000 and on the right of the programming pendant.

- Read and understand the Explanation of the Warning Labels before operating the manipulator.



WARNING

- Perform the following inspection procedures prior to conducting manipulator teaching. If there is any problem, immediately take necessary steps to solve it, such as maintenance and repair.
 - Check for a problem in manipulator movement.
 - Check for damage to insulation and sheathing of external wires.
- Always return the programming pendant to the hook on the YRC1000 cabinet after use.

If the programming pendant is left unattended on the manipulator, on a fixture, or on the floor, the Enable Switch may be activated due to surface irregularities of where it is left, and the servo power may be turned ON. In addition, in case the operation of the manipulator starts, the manipulator or the tool may hit the programming pendant left unattended, which may result in personal injury and/or equipment damage.

Definition of Terms Used Often in This Manual

The MOTOMAN is the YASKAWA industrial robot product.

The MOTOMAN usually consists of the manipulator, the controller, the programming pendant, and supply cables.

In this manual, the equipment is designated as follows.

Equipment	Manual Designation
YRC1000 controller	YRC1000
YRC1000 programming pendant	Programming pendant
Cable between the manipulator and the controller	Manipulator cable

Descriptions of the programming pendant keys, buttons, and displays are shown as follows:

Equipment	Manual Designation	
Programming Pendant	Character Keys /Symbol Keys	The keys which have characters or symbols printed on them are denoted with []. e.g. [ENTER]
	Axis Keys /Numeric Keys	[Axis Key] and [Numeric Key] are generic names for the keys for axis operation and number input.
	Keys pressed simultaneously	When two keys are to be pressed simultaneously, the keys are shown with a "+" sign between them, e.g. [SHIFT]+[COORD].
	Mode Switch	Mode Switch can select three kinds of modes that are denoted as follows: REMOTE, PLAY or TEACH. (The switch names are denoted as symbols)
	Button	The three buttons on the upper side of the programming pendant are denoted as follows: START, HOLD, or EMERGENCY STOP. (The button names are denoted as symbols)
	Displays	The menu displayed in the programming pendant is denoted with { }. e.g. {JOB}



Description of the Operation Procedure

In the explanation of the operation procedure, the expression “Select . . .” means that the cursor is moved to the object item and [SELECT] is pressed, or that the item is directly selected by touching the screen.

Registered Trademark

In this manual, names of companies, corporations, or products are trademarks, registered trademarks, or brand names for each company or corporation. The indications of (R) and TM are omitted.

 Contents

1	Overview of the Function	1-1
1.1	Outline	1-1
1.2	List of Safety Functions.....	1-1
1.3	Structure of Configuration Files	1-2
2	System Configuration.....	2-1
2.1	Outline	2-1
2.1.1	Safety Circuit Board (JANCD-ASF01-E).....	2-1
2.1.2	Expansion Safety I/O Board (JANCD-ASF02-E)	2-1
2.1.3	Expansion Safety Terminal Block Board	2-2
2.1.4	Wiring Procedure of the Terminal Block	2-5
2.1.5	Functional Safety General-Purpose Input Signal 1 to 8.....	2-7
2.1.6	Functional Safety General-Purpose Output Signal 1 to 8.....	2-8
2.2	System Configuration for Dual-Arm Manipulator	2-11
3	Common Operation.....	3-1
3.1	Security Mode When Using This Function.....	3-1
3.2	Readback Operation	3-3
3.2.1	Readback Operation of the Configuration File.....	3-3
3.2.2	Operations in Which the READBACK Window Is Shown	3-5
3.2.2.1	Readback Operation of the Function Disable Mode.....	3-6
3.2.2.2	Readback Operation of the Range Combination.....	3-8
3.3	External Memory Device (Saving/Loading).....	3-9
4	Details of Functional Safety Function.....	4-1
4.1	Axis Range Limit Function	4-1
4.1.1	Outline	4-1
4.1.2	Axis Range Limit Function Window	4-3
4.1.3	Axis Range Limit Condition File Setting.....	4-5
4.1.4	Confirming Method of Each Axis Operating Angle	4-8
4.1.5	Confirmation of Safety Range.....	4-12
4.1.6	Start the Axis Range Limit Operation	4-13
4.1.7	Monitoring Status Confirmation Display.....	4-14
4.2	Axis Speed Monitor Function	4-17
4.2.1	Outline	4-17
4.2.2	Axis Speed Monitor Function Window	4-18

 Contents

4.2.3	Axis Speed Monitor Condition File Setting	4-20
4.2.4	Start the Axis Speed Monitor Operation	4-22
4.3	Robot Range Limit Function	4-23
4.3.1	Outline	4-23
4.3.2	Robot Range Limit Function Window	4-26
4.3.3	Robot Range Limit Function Condition File Setting Window	4-29
4.3.4	Confirmation of the Safety Range	4-39
4.3.5	Starting the Robot Range Limit	4-41
4.3.6	Switch the Monitoring Area.....	4-42
4.3.7	Safety Range and Manipulator Position	4-44
4.3.8	Proximity Warning Buzzer Setting.....	4-48
4.3.9	Combining Function of Multiple Monitoring Areas	4-50
4.4	Speed Limit Function.....	4-53
4.4.1	Outline	4-53
4.4.2	Speed Limit Function Window	4-55
4.4.3	Speed Limit Function Condition File Setting Window.....	4-57
4.4.4	Starting the Speed Limit	4-60
4.4.5	Speed Limit in Teach Mode.....	4-60
4.5	Tool Angle Monitor Function.....	4-62
4.5.1	Outline	4-62
4.5.2	Tool Angle Monitor Function Window.....	4-63
4.5.3	Tool Angle Monitor Condition File Setting	4-65
4.5.4	Confirmation of Tool Angle Limit Monitor	4-68
4.5.5	Starting the Tool Angle Monitor	4-69
4.6	Tool Change Monitor Function	4-70
4.6.1	Outline	4-70
4.6.2	Tool Change Monitor Function Window	4-71
4.6.3	Tool Change Monitor Condition File Setting.....	4-73
4.6.4	Confirmation of Tool Change Monitor.....	4-74
4.6.5	Starting the Tool Change Monitor.....	4-74
4.6.6	When Using the Tool Change Monitor Function.....	4-75
4.7	Tool Number Selection Function	4-80
4.7.1	Outline	4-80
4.7.2	Tool Number Selection Function Window	4-82
4.7.3	Tool Number Selection Condition File Setting.....	4-84

 Contents

4.7.4	Confirmation of Tool Number Selection.....	4-85
4.7.5	Starting the Tool Number Selection.....	4-85
4.7.6	When Using the Tool Number Selection Function.....	4-86
4.8	Common Setting Item for the Condition File.....	4-91
5	Safety Signal.....	5-1
5.1	Allocation of Safety Logic Circuit Extended Signal.....	5-2
5.2	Allocation of Safety Fieldbus Signal.....	5-4
5.3	Settings of Safety Function Condition File.....	5-6
5.4	File Switching to Valid/Invalid by the Safety Input Signal.....	5-8
5.5	Safety Signal Output Value.....	5-11
6	Common Settings.....	6-1
6.1	Function Disable Mode Setting.....	6-1
6.1.1	Restrictions While Function Disable Mode Is Enabled.....	6-3
6.1.2	Security Level Setting for Function Disable Mode.....	6-4
6.2	External Axis Coasting Value Setting.....	6-5
6.3	Tool File Setting.....	6-8
6.4	Tool Interference File Setting.....	6-9
6.5	Security Level Setting for Tool File and Tool Interference Files.....	6-13
6.6	Using the PMT Function Together with the Functional Safety Function.....	6-15
6.6.1	How to Use the PMT Function Together with the Functional Safety Function ...	6-15
6.6.2	Monitoring the Amount of Change in the Tool Files.....	6-19
6.6.3	Tool File Verification Check in a System Using the PMT Function Together with the Functional Safety Function.....	6-22
6.7	Disabling Functional Safety by Changing Connection Settings.....	6-23
7	Data Protection.....	7-1
7.1	Saving Dual Data.....	7-1
7.2	FLASH Data Reset.....	7-2
7.3	Change of Condition File by an External Device.....	7-4
7.3.1	Outputting the CRC Value to the External Memory Device.....	7-4
7.3.2	Confirming Method of the CRC Value.....	7-5
7.3.3	Register Output of the CRC Value.....	7-9
7.3.4	Data Monitor on the Total CRC Confirmation Window.....	7-11
8	Specific Output Signal.....	8-1

Contents

9	Restriction	9-1
9.1	Functions Cannot Be Used Concurrently with Functional Safety Function	9-1
9.1.1	Functions Which Modifies Parameter or File during Playback Operation	9-1
9.2	Functions Conditionally Used Concurrently with Functional Safety Function.....	9-2
9.2.1	Conveyor Synchronized Function, COMARC Function.....	9-2
9.2.2	Servo Float Function	9-2
9.2.3	Motor Gun Function.....	9-2
9.2.4	MotoPlus Function and MotoFit Function	9-2
9.2.5	T-axis Endless Function, External Axis Endless Function.....	9-2
9.2.6	Gun Change Function and Group Change Function	9-3
9.2.7	Multi Layer Function	9-3
9.3	Restriction of Operation	9-4
9.3.1	File/Parameter Loading	9-4
10	Error	10-1

1	Overview of the Function
1.1	Outline

1 Overview of the Function

1.1 Outline

By using the functional safety function, each of the two CPUs mounted on the safety circuit board independently acquires the encoder feedback pulse of the manipulator, and, based on this pulse, the position and speed of the manipulator and the posture of its tool are monitored.

The data such as the result of safety monitoring is compared by each of the two CPUs, and the power supply to the motor is suspended and the manipulator is completely stopped when an error is detected.

With this function, improving of the safety of the manipulator's motion and minimizing of the equipment layouts when manipulators are installed are realized.

1.2 List of Safety Functions

To the functional safety function, following six different functions for monitoring purposes are equipped.

- (1) Axis range limit function
Monitors each axis angle to be equal to or in the designated safety area.
- (2) Axis speed monitor function
Monitors each axis speed to be equal or slower than the designated speed.
- (3) Robot range limit function
Monitors the manipulator arm or its tool to be in the designated safety area.
- (4) Speed limit function
Monitors the speed of manipulator TCP (Tool Center Point) and its FCP (Flange Center Point) when the robot control group is monitored.
If the station control group is monitored, it monitors the axis speed.
- (5) Tool angle monitor function
Monitors the manipulator tool angle to be inside the range of limited angle when the angle is centered on the designated standard posture.
- (6) Tool change monitor function
Monitors the tool file used in the functional safety function to be consistent with the user specified tool file. Cannot be used concurrently with the tool number select function.
- (7) Tool number select function
Selects the tool number used in the functional safety function.
Cannot be used concurrently with the tool change monitor function.

These safety functions conform to the following safety standards.

- EN ISO 13849-1: 2015 Cat.3 / PL d
- EN 62061(IEC 61508) SIL CL2

- 1 Overview of the Function
- 1.3 Structure of Configuration Files

1.3 Structure of Configuration Files

Most of the configuration files for the functional safety are listed in the {SAFETY FUNC.} menu under the main menu of the programming pendant.

The files related to the functional safety shown below are expanded from the {SAFETY FUNC.} menu.

Main menu	Sub menu (1st layer)	Sub menu (2nd layer)
SAFETY FUNC.	AXIS RANGE LIMIT status list window	AXIS RANGE LIMIT condition file (32 files/system)
	AXIS SPEED MONITOR status list window	AXIS SPEED MONITOR condition file (32 files/system)
	ROBOT RANGE LIMIT status list window	ROBOT RANGE LIMIT condition file (32 files/system)
	SPEED LIMIT status list window	SPEED LIMIT condition file (32 files/system) TEACH MODE SPEED LIMIT condition file (32 files/system)
	TOOL ANGLE MONITOR status list window	TOOL ANGLE MONITOR condition file (32 files/system)
	TOOL CHANGE MONITOR status list window	TOOL CHANGE MONITOR condition file (16 files/robot group)
	TOOL NUMBER SELECT status list window	TOOL NUMBER SELECT condition file (16 files/robot group)

2 System Configuration

2.1 Outline

The functional safety function is performed by using the safety circuit board. For details on the safety circuit board, refer to “YRC1000 INSTRUCTIONS (RE-CTO-A221)”.


2.1.1 Safety Circuit Board (JANCD-ASF01-E)

For details on the safety circuit board, refer to “YRC1000 INSTRUCTIONS (RE-CTO-A221) 14.6.1 Safety Circuit Board (JANCD-ASF01-E)”.

2.1.2 Expansion Safety I/O Board (JANCD-ASF02-E)

The expansion safety I/O board (JANCD-ASF02-E) is an optional board used to add 8 input points and 8 output points as the safety I/O signals, and connected to the safety circuit board (JANCD-ASF01-E) by using a communication cable.

Fig. 2-1: Expansion Safety I/O Board (JANCD-ASF02-E)

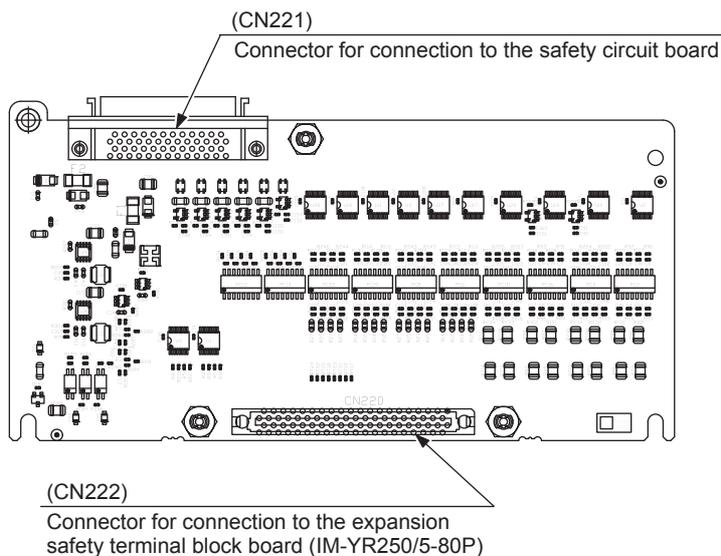

2.1.3 Expansion Safety Terminal Block Board


Safety signals are connected to the expansion safety terminal block board.

The type and main specifications of the expansion safety terminal block board are shown below.

Item	Specification
Unit type	IM-YE250/5-80P
Function	Connects the functional safety general I/O signals.
Signal points	Input: 8 points/station Output: 8 points/station

The following is the external view of the expansion safety terminal block board.

Fig. 2-2: Expansion Safety Terminal Block Board (IM-YE250/5-80P)

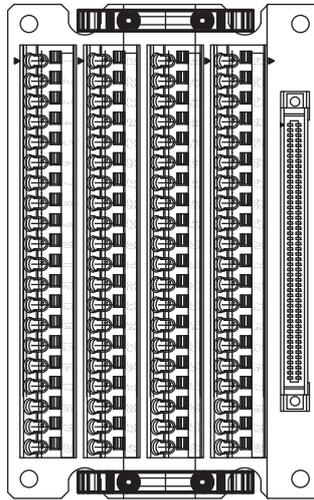

2 System Configuration
2.1 Outline

The following table shows details of the connection terminals.

Table 2-1: Connection Terminals of IM-YE250/5-80P (Sheet 1 of 2)

Signal Name	Connection No.	Dual Signal	Function	Factory Setting
XIN1_1+	1	○	Functional Safety Universal Input 1 (Corresponding FSBIN01)	Open
XIN1_1-	2			
XIN1_2+	3	○	Functional Safety Universal Input 2 (Corresponding FSBIN02)	Open
XIN1_2-	4			
XIN2_1+	5	○	Functional Safety Universal Input 2 (Corresponding FSBIN02)	Open
XIN2_1-	6			
XIN2_2+	7	○	Functional Safety Universal Output 1 (Corresponding FSBOU01)	Open
XIN2_2-	8			
XOUT1_1+	9	○	Functional Safety Universal Output 1 (Corresponding FSBOU01)	Open
XOUT1_1-	10			
XOUT1_2+	11	○	Functional Safety Universal Output 2 (Corresponding FSBOU02)	Open
XOUT1_2-	12			
XOUT2_1+	13	○	Functional Safety Universal Output 2 (Corresponding FSBOU02)	Open
XOUT2_1-	14			
XOUT2_2+	15	○	Functional Safety Universal Input 3 (Corresponding FSBIN03)	Open
XOUT2_2-	16			
XIN3_1+	21	○	Functional Safety Universal Input 3 (Corresponding FSBIN03)	Open
XIN3_1-	22			
XIN3_2+	23	○	Functional Safety Universal Input 4 (Corresponding FSBIN04)	Open
XIN3_2-	24			
XIN4_1+	25	○	Functional Safety Universal Input 4 (Corresponding FSBIN04)	Open
XIN4_1-	26			
XIN4_2+	27	○	Functional Safety Universal Output 3 (Corresponding FSBOU03)	Open
XIN4_2-	28			
XOUT3_1+	29	○	Functional Safety Universal Output 3 (Corresponding FSBOU03)	Open
XOUT3_1-	30			
XOUT3_2+	31	○	Functional Safety Universal Output 4 (Corresponding FSBOU04)	Open
XOUT3_2-	32			
XOUT4_1+	33	○	Functional Safety Universal Output 4 (Corresponding FSBOU04)	Open
XOUT4_1-	34			
XOUT4_2+	35	○	Functional Safety Universal Input 5 (Corresponding FSBIN05)	Open
XOUT4_2-	36			
XIN5_1+	41	○	Functional Safety Universal Input 5 (Corresponding FSBIN05)	Open
XIN5_1-	42			
XIN5_2+	43	○	Functional Safety Universal Input 6 (Corresponding FSBIN06)	Open
XIN5_2-	44			
XIN6_1+	45	○	Functional Safety Universal Input 6 (Corresponding FSBIN06)	Open
XIN6_1-	46			
XIN6_2+	47	○	Functional Safety Universal Input 6 (Corresponding FSBIN06)	Open
XIN6_2-	48			

Table 2-1: Connection Terminals of IM-YE250/5-80P (Sheet 2 of 2)

Signal Name	Connection No.	Dual Signal	Function	Factory Setting
XOUT5_1+ XOUT5_1-	49 50	○	Functional Safety Universal Output 5 (Corresponding FSBOUT05)	Open
XOUT5_2+ XOUT5_2-	51 52			
XOUT6_1+ XOUT6_1-	53 54	○	Functional Safety Universal Output 6 (Corresponding FSBOUT06)	Open
XOUT6_2+ XOUT6_2-	55 56			
XIN7_1+ XIN7_1-	61 62	○	Functional Safety Universal Input 7 (Corresponding FSBIN07)	Open
XIN7_2+ XIN7_2-	63 64			
XIN8_1+ XIN8_1-	65 66	○	Functional Safety Universal Input 8 (Corresponding FSBIN08)	Open
XIN8_2+ XIN8_2-	67 68			
XOUT7_1+ XOUT7_1-	69 70	○	Functional Safety Universal Output 7 (Corresponding FSBOUT07)	Open
XOUT7_2+ XOUT7_2-	71 72			
XOUT8_1+ XOUT8_1-	73 74	○	Functional Safety Universal Output 8 (Corresponding FSBOUT08)	Open
XOUT8_2+ XOUT8_2-	75 76			

Refer to the connection diagram for the connection of each signal.

2.1.4 Wiring Procedure of the Terminal Block

For your safety, appropriate work must be done by following the instructions below.

NOTICE

- If the length of cable between the safety terminal block board and the connected device is longer than 30 m, make sure to use the shielded cable so that the electromagnetic resistant can be properly performed. Then the shield of shielded cable must come into contact with the controller's body.

■ Tool: Screwdriver


For the connection, be sure to use a screwdriver of an applicable size and configuration.

- WAGO standard screwdriver
WAGO 210-119
WAGO 210-119SB (Short, delivered with the product)



■ Applicable Wires



1. The length of the exposed conductor (L) must be as follows:

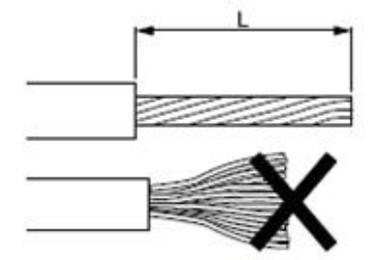

- The length of the exposed conductor for the terminal block (L)
WAGO series 250 (with 5.0 mm pitch): 9-10 mm
 - Applicable wire conductor: 0.5 mm² to 1.5 mm² (AWG20-16)
 - Applicable maximum wire outside diameter: 3.1 mm dia.
2. If the wire is bent or loose, make it straight as illustrated in the figure above.

■ **Wire Connection**

Terminal block: screwless clamp
terminal WAGO series 250

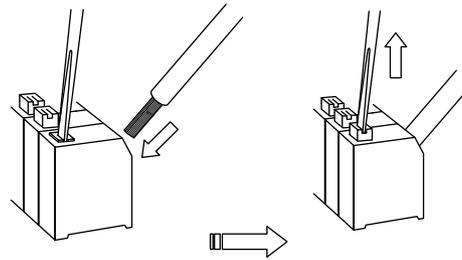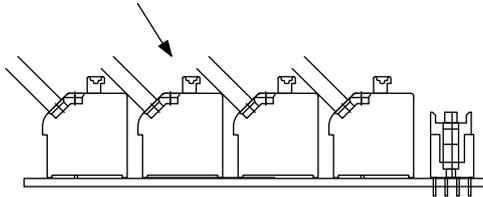

1. Place the screwdriver on the lever upright as shown in the figure above and push it straight down.
2. Insert the wire into the connection hole slowly until its leading end touches the end of the hole.
For thin wires, never insert the wire with force, or the wire jacket may get caught in.
3. Pull out the screwdriver to clamp the conductor with the spring.
4. Check if the wire is connected firmly by pulling the wire softly.

2.1.5 Functional Safety General-Purpose Input Signal 1 to 8

When opening this connection terminal, corresponding FSBIN turns ON(1).

When short circuiting this connection terminal, corresponding FSBIN turns OFF(0).




For safety reasons, dual circuits are used for the functional safety general-purpose input signals.

When state of the input mismatch continues for 500 ms or more, the following alarm occurs.

Alarm 4751: M-SAF GENERAL INPUT SIG. ERROR2

Fig. 2-3: Example of Connecting Functional Safety General-Purpose Input Signal

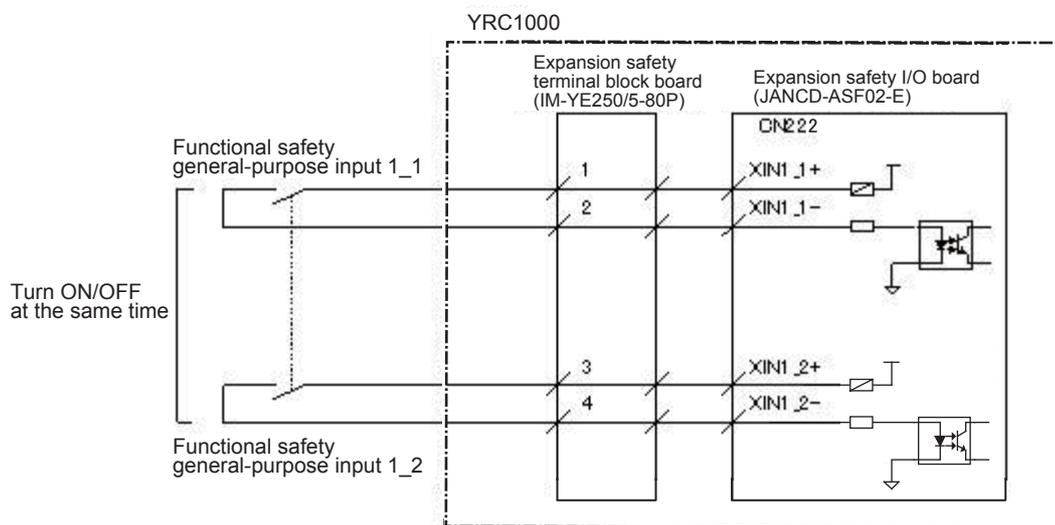

2.1.6 Functional Safety General-Purpose Output Signal 1 to 8

The output from the connection terminal differs depending on the status of FSBOUT.

When FSBOUT is ON(1), the output is 24 VDC.

When FSBOUT is OFF(0), the output is 0 V.

NOTE

- The rated output value is equal to or less than 24 VDC and 50 mA. Do not connect a load exceeding the rated output value.
- When connecting an inductive load, such as a safety relay, with the output circuit, suppress the surge voltage by using an inductive load with a built-in protective circuit or by connecting a flyback diode in parallel to the inductive load.
 Failure to observe this instruction may result in equipment damage.

NOTE

In case the other side of the duplicated functional safety general-purpose output signal is not output normally due to a board trouble, etc., the error is detected by the self-check circuit and following alarm occurs.


Alarm 4923: M-SAF GENERAL OUT SELF CHECK ERR2

NOTE

To conform with Safety Category 3 and PL-d at the whole manipulator system, monitoring of the safety devices (Safety PLC, etc.) in this system is required.

For this reason, to detect malfunction of the safety relay or disconnection of the signal line, etc., execute signal mismatch detection to the functional safety general-purpose output at the external safety device (Safety PLC, etc.) side.


Fig. 2-4: Example of Connecting Functional Safety General-Purpose Output Signal

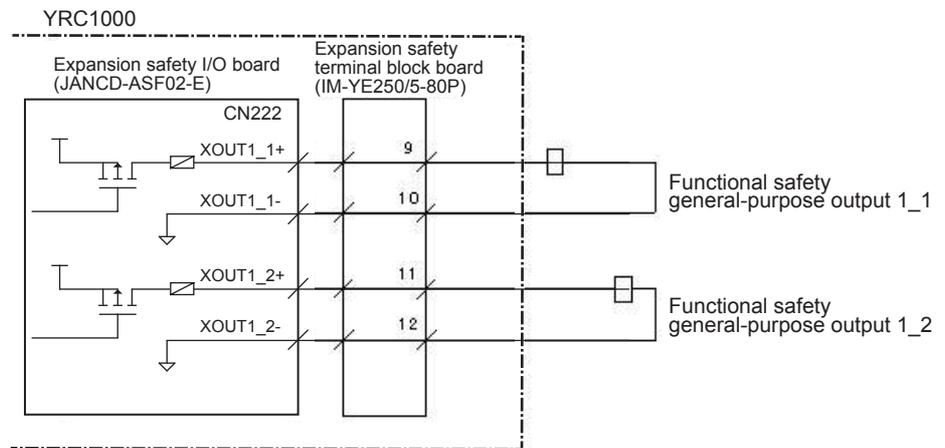

2 System Configuration

2.1 Outline

Fig. 2-5: Example Connection with an External Device (Safety PLC)
 (Connect the functional safety general-purpose output signal to the Safety PLC via the safety relay)

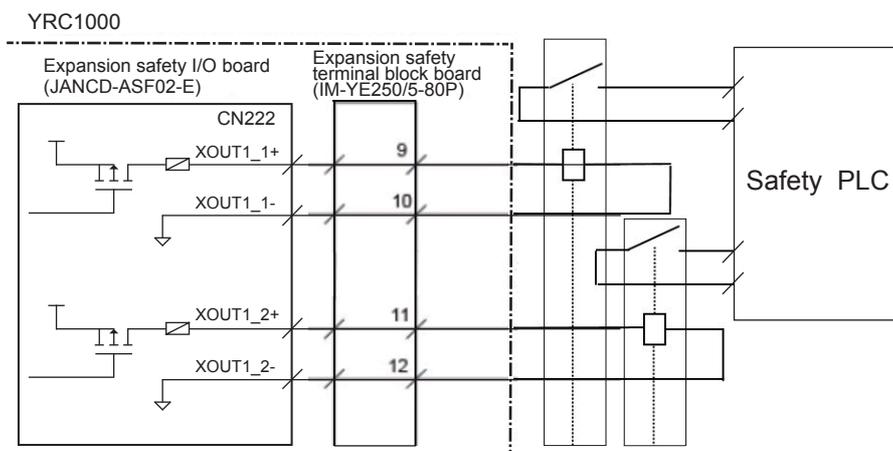


At the PLC side, monitor the contacting status of the duplicated safety relay, which is for connecting the safety general-purpose output signal with the Safety PLC, and connecting status of the signal line.

However, by using the general-purpose safety input signal which is equipped to the YRC1000, the duplicated safety relay can be monitored by the YRC1000.
 (As for the connecting status of the signal line, monitor it at the external device side.)

2 System Configuration
 2.1 Outline

Fig. 2-6: Example of Safety Relay Monitoring Circuit Board Using the General-Purpose Safety Input Signal
 (Example: GSIN signal is used)

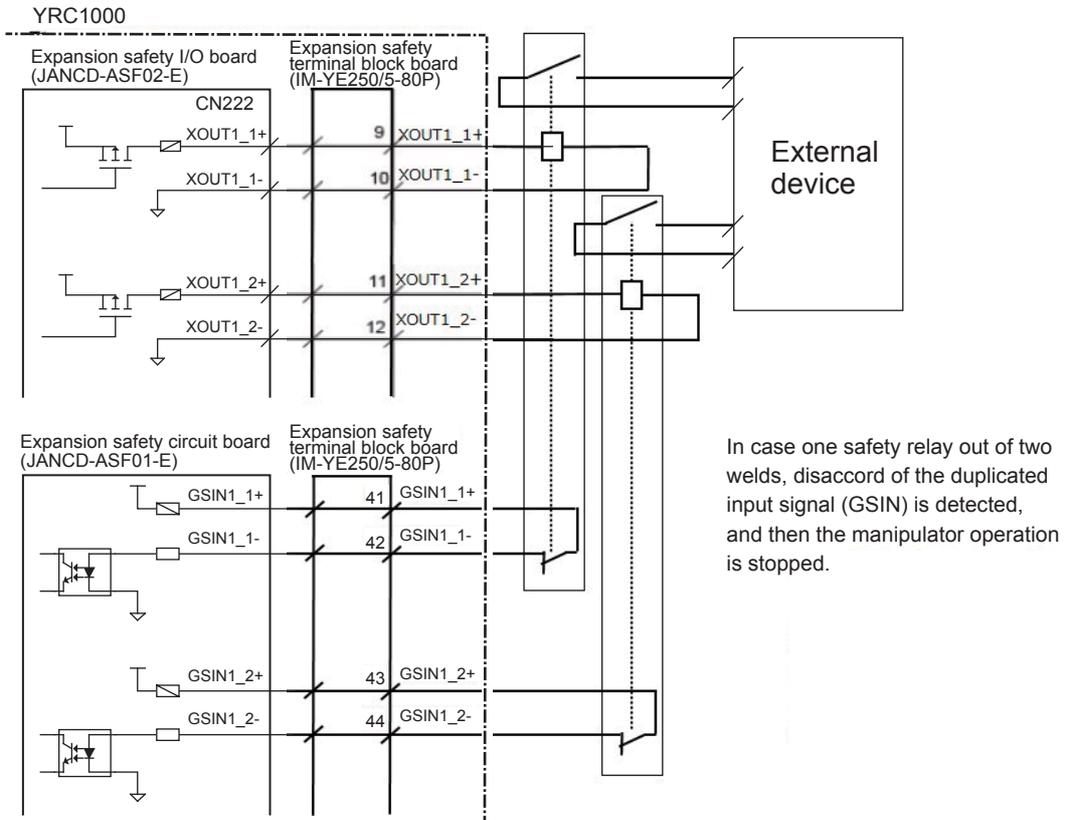

-
- 2 System Configuration
 - 2.2 System Configuration for Dual-Arm Manipulator
-

2.2 System Configuration for Dual-Arm Manipulator

Like dual-arm manipulator (SDA model) system, a system where the robot group (arm) and the base group (base) exist separately and individually arranged on the different servo board exists.

In this system, for the safety monitoring, the encoder feedback pulse information of the axis which does not exist in its own station should be acquired from other servo station. Thus, the following restrictions apply.



When using dual-arm type configuration manipulators, the maximum number of connecting axis for the servo station at the encoder data receiving side decreases.

Maximum numbers of connecting axis
= (9 axes - the number of axes whose encoder data was
acquired from other servo station)

3 Common Operation


Common operations when using the functional safety function are described in this chapter.

3.1 Security Mode When Using This Function

When using the functional safety function, settings of the condition file for this function is necessary. And this settings must be performed when the security mode is in the safety mode. For this reason, this file settings must be performed by the person who has a safety license.


Followings are the procedures for changing the security mode.

1. Select {SYSTEM INFO} under the main menu, and then select {SECURITY} in the sub menu.

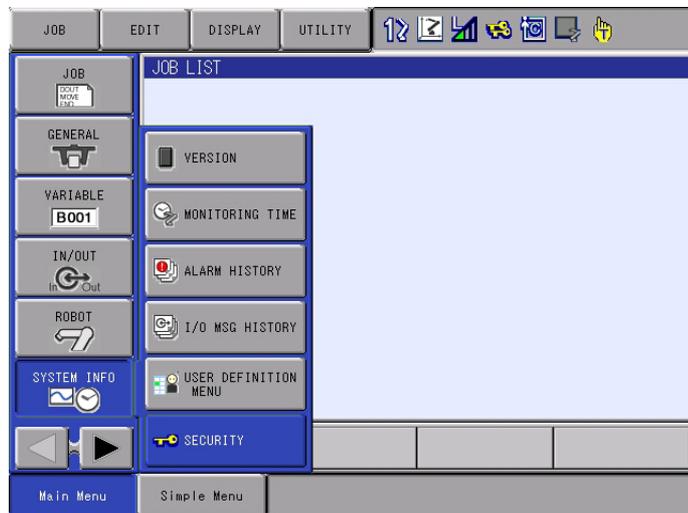

2. Change the security mode to the SAFETY MODE.

- Press [SELECT], move the cursor to the SAFETY MODE, and press [SELECT] again.

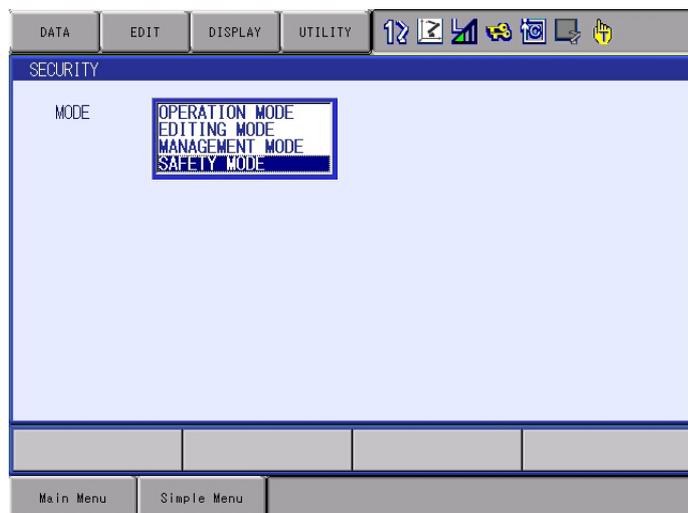

3 Common Operation

3.1 Security Mode When Using This Function

3. Enter the password for the SAFETY MODE, and then press [ENTER].
 - The security mode is changed to the SAFETY MODE.



Depending on the level of the security mode, available operations are different as shown in the following table.

Security level	Available operations
Operation, Edit, Management	Only browsing of the data related to the functional safety is available. Editing is not available.
Safety	Both browsing and editing of the data related to the functional safety are available.

3.2 Readback Operation

When the functional safety is enabled and if data are modified in the condition file setting window or the tool file window of the functional safety, the readback operation is performed.

The readback operation is used to check whether the data to be set in the safety circuit board are correct.


3.2.1 Readback Operation of the Configuration File

The readback operation is performed for the configuration files in the settings window of the submenus shown below.

Main menu	Submenu
ROBOT	TOOL
	TOOL INTERFERENCE
	HOME POSITIONING
SAFETY FUNCTION	AXIS RANGE LIMIT
	AXIS SPEED MONITOR
	ROBOT RANGE LIMIT
	SPEED LIMIT
	TOOL ANGLE MONITOR
	TOOL CHANGE MONITOR
	TOOL NUMBER SELECT

1. Edit a file in the settings window of the data related to the functional safety.

After editing the data, {READBACK} and {CANCEL} appear in the lower part of the window.

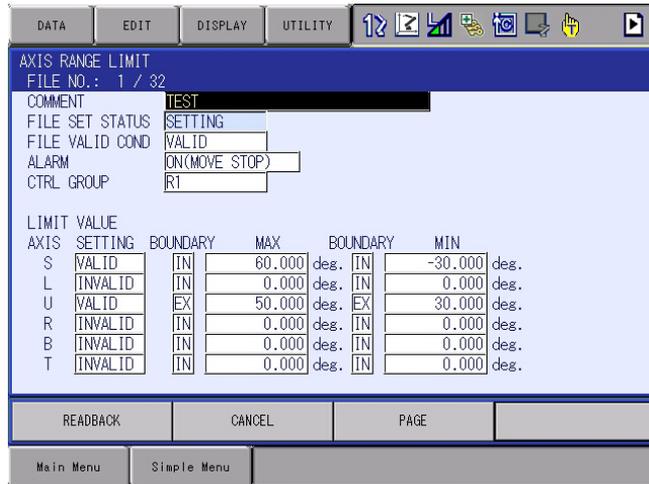


{READBACK} : Transmits the settings of the edited file to the safety circuit board.

{CANCEL} : Deletes the edited file and returns to the previous settings.

3 Common Operation

3.2 Readback Operation


2. To set the data of the edited file, press {READBACK}. By pressing {READBACK}, the data are transmitted to the safety circuit board, and {WRITE} and {CANCEL} appear in the lower part of the window.

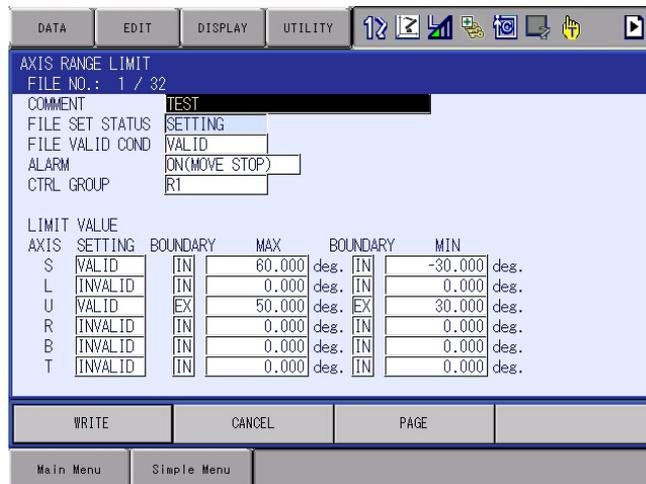

{WRITE} : Stores the settings of the edited file in the safety circuit board.

{CANCEL} : Deletes the edited file and returns to the previous settings.

3. To update the settings of the safety circuit board, press {WRITE}. By pressing {WRITE}, a confirmation dialog "Update the file?" appears.
- Select "YES", and if the data transmitted to the safety circuit board match the data in the edited file, the settings of the edited file are stored in the safety circuit board.
 - Select "NO", and the settings of the file are not stored in the safety circuit board.

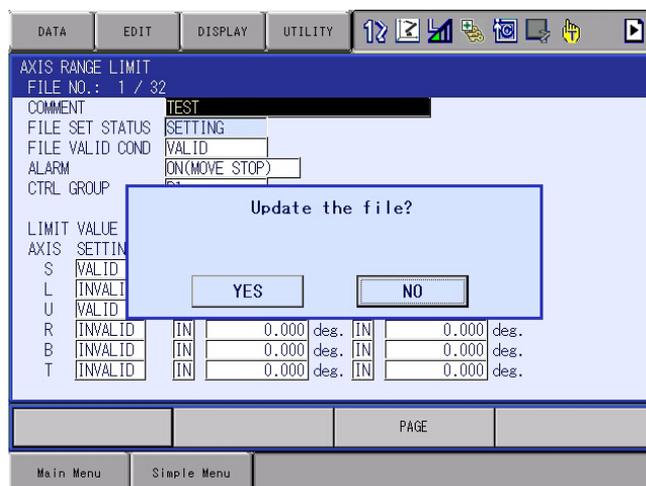

Note that the edited data will not be stored until {WRITE} is pressed and "YES" is selected in the confirmation dialog "Update the file?". The data will be deleted if the {WRITE} procedure is not completed in the following cases:

- When {CANCEL} is pressed
- When another menu is selected and its window is opened
- When the page is switched
- When the mode is switched
- When an alarm occurs

3.2.2 Operations in Which the READBACK Window Is Shown

When one of the following items is edited, the READBACK window appears immediately after the edition, and the readback is performed.

Window	Setting item
AXIS RANGE LIMIT	FUNCTION DISABLE MODE
ROBOT RANGE LIMIT	FUNCTION DISABLE MODE
TOOL ANGLE MONITOR	FUNCTION DISABLE MODE
TOOL CHANGE MONITOR	FUNCTION DISABLE MODE
TOOL NUMBER SELECT	FUNCTION DISABLE MODE
RANGE COMBINATION	INPUT FILE 1
	INPUT FILE 2
	LOGIC
	OUTPUT FILE

Only the readback operation is described here.

For the function disable mode, refer to *chapter 6.1 “Function Disable Mode Setting”*.


For the range combination function, refer to *chapter 4.3.9 “Combining Function of Multiple Monitoring Areas”*.

3 Common Operation
 3.2 Readback Operation


3.2.2.1 Readback Operation of the Function Disable Mode

Perform settings of FUNCTION DISABLE MODE in the STATUS listing window. In the following, the STATUS listing window of the axis range limit function is shown.

1. Select {SAFETY FUNCTION} under the main menu, and then select {AXIS RANGE LIMIT}. The STATUS listing window of AXIS RANGE LIMIT appears.

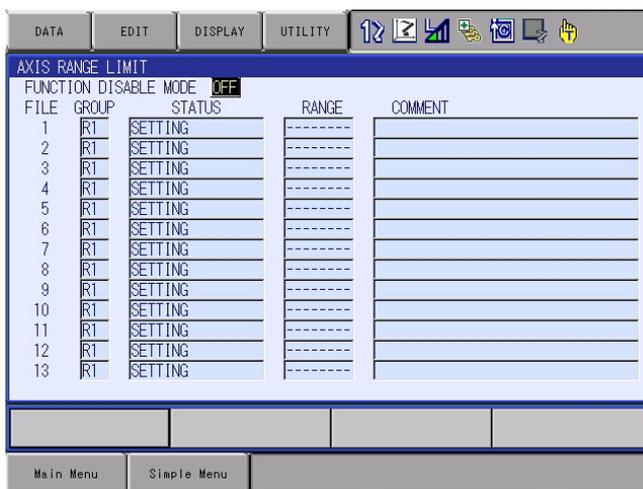

2. Select "ON(1)" under FUNCTION DISABLE MODE.

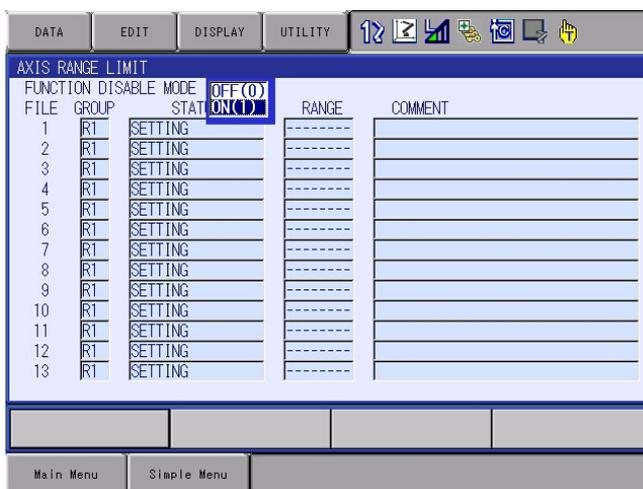


3 Common Operation

3.2 Readback Operation

3. The READBACK window appears.

- The READBACK window is used to check whether the data to be set in the safety circuit board are correct.

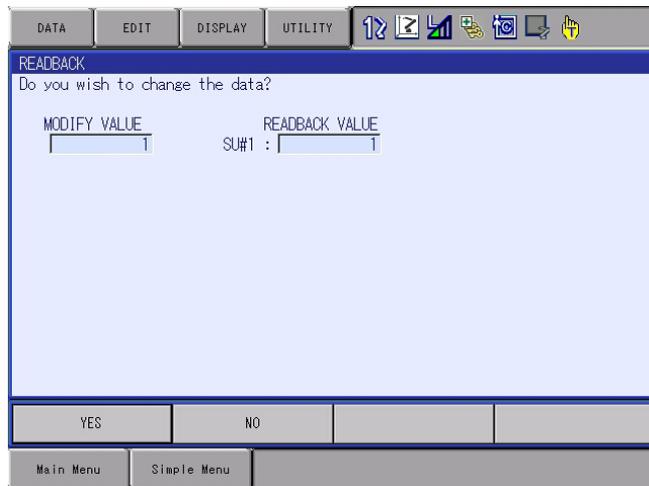

- Confirm the values in MODIFY VALUE and READBACK VALUE, and then press {YES}. If {NO} is pressed, the settings return to the previous values.

4. When {YES} is pressed, the settings are modified.



3 Common Operation
3.2 Readback Operation

3.2.2.2 Readback Operation of the Range Combination

After editing settings of INPUT FILE 1, INPUT FILE 2, LOGIC, or OUTPUT FILE in the RANGE COMBINATION window, confirmation in the READBACK window is necessary.

After the readback operation, {WRITE} and {CANCEL} appear in the lower part of the window.

{WRITE} : Stores the settings of the edited file in the safety circuit board.

{CANCEL} : Cancels the settings of the edited file and returns to the previous settings.

When multiple setting items are modified, the readback operations are performed multiple times; however, those data will not be stored until {WRITE} is pressed. The data will be deleted if the {WRITE} procedure is not completed in the following cases:

- When {CANCEL} is pressed
- When another menu is selected and its window is opened
- When the mode is switched
- When an alarm occurs

- 3 Common Operation
- 3.3 External Memory Device (Saving/Loading)

3.3 External Memory Device (Saving/Loading)

The files related to the functional safety can be saved to or loaded from an external memory device.

Saving of the files can be performed in any security mode.

Loading of the files can be performed only when the security mode is in the safety mode.

File name	Security mode for loading
AXIS RANGE LIMIT DATA	Safety
AXIS SPEED MONITOR DATA	Safety
ROBOT RANGE DATA	Safety
SPEED LIMIT DATA	Safety
TOOL ANGLE MONITOR DATA	Safety
TOOL CHANGE MONITOR DATA (Common to TOOL NUMBER SELECT DATA)	Safety
APPR WARNING BUZZER DATA	Safety



When a file related to the functional safety is loaded, a message "Select 'Safety Board FLASH Reset' in the maintenance mode." appears.

For the details, please refer to *chapter 7.2 "FLASH Data Reset"*.

4 Details of Functional Safety Function

In this chapter, details of the functional safety function are described.

4.1 Axis Range Limit Function

4.1.1 Outline

Axis range limit function is a function which sets each axis range of motion for the manipulator, base and station group and monitors whether each axis is inside the already-fixed range of motion using a software.


This function specifies the upper limit and the lower limit of the range of motion to those axes and the range inside the limits is defined as the safety range.

While an axis is in operation, based on the axis motion speed, this function calculates the coasting value in case of the immediate stop by the alarm, and then, including this value, it monitors the safety range. With this monitoring operation, the axes would not exceed the safety range even if a motion error is detected.

In case an error is detected, the power supply to the motor is stopped using the machine safety. And the error is notified using an alarm.

Thirty two files are prepared to this function and all axes motion range of any one control group is set to one file. When a control group is set to several files, the control group can be monitored by switching conditions.

Fig. 4-1: Limit of Motion Range at Each Axis

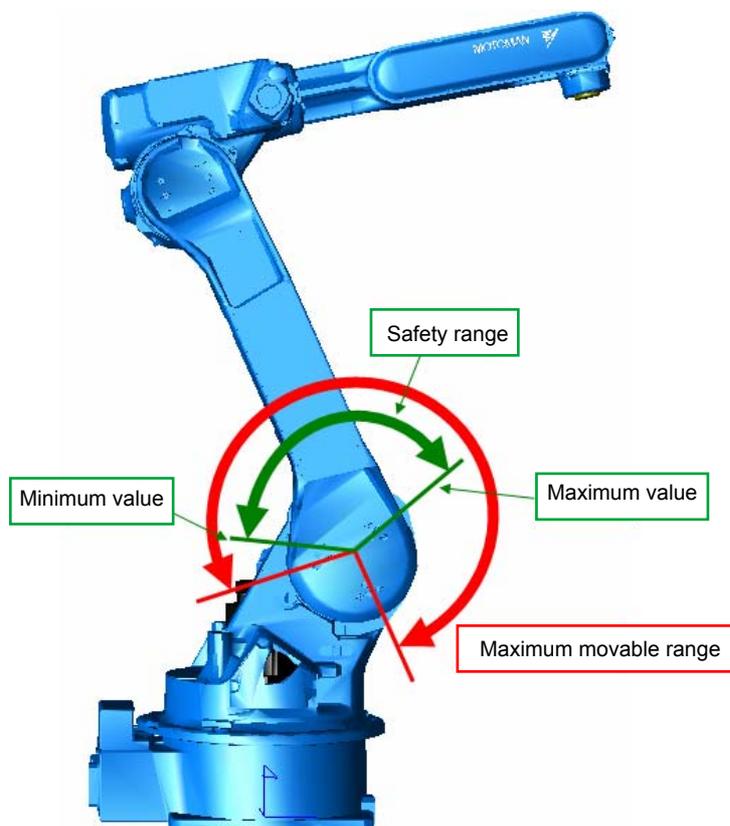

4 Details of Functional Safety Function

4.1 Axis Range Limit Function

Follow the procedures below when starting the axis range limit function.


1. Set the coasting value.
(Before using this function, set the coasting value by following the procedures described in *chapter 6.2 "External Axis Coasting Value Setting"* in case the base axis or the station axis exits in the system.)
2. Set the condition file of the axis range limit function.
3. Confirm the safety range.
4. Start the axis range limit function.

4 Details of Functional Safety Function
 4.1 Axis Range Limit Function


4.1.2 Axis Range Limit Function Window

Followings are the setting procedures for the axis range limit function.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.

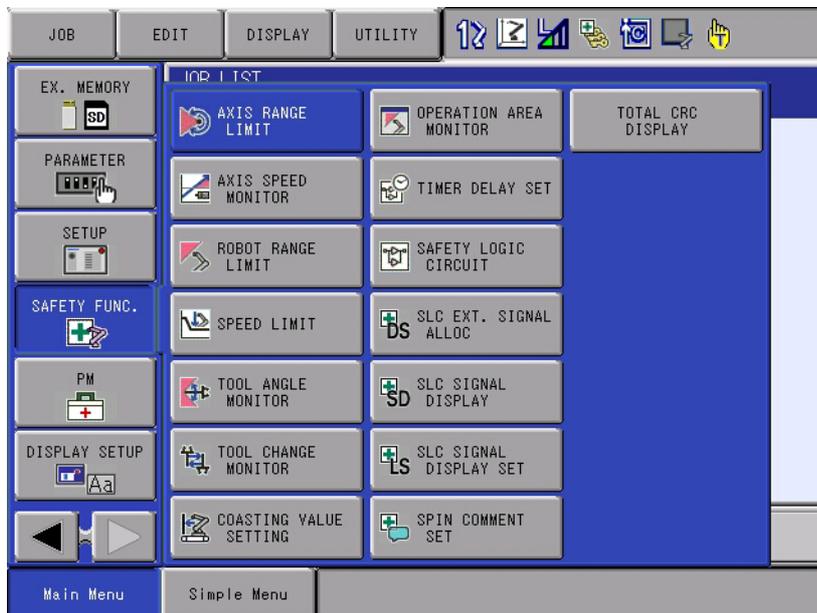

2. Select {AXIS RANGE LIMIT} in the sub menu.
 - The list of the axis range limit status appears.

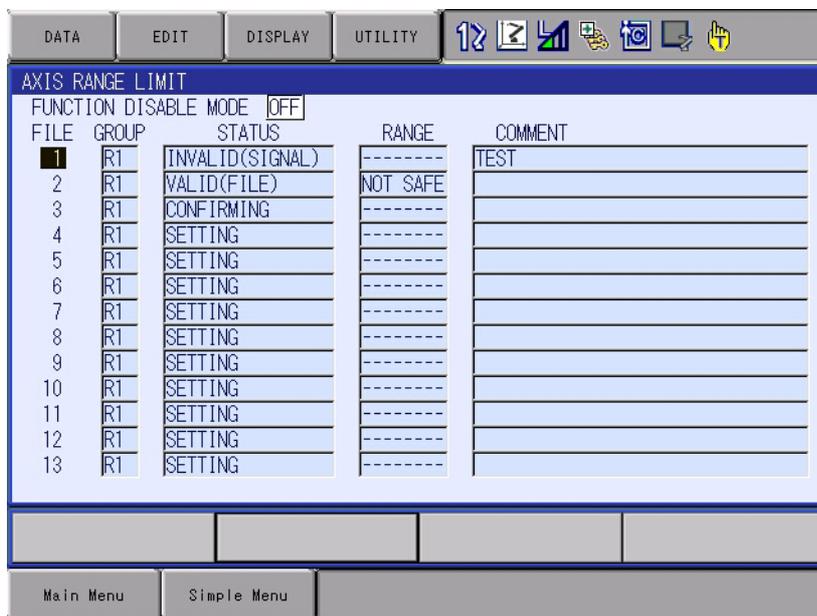

On the status list window, the 32 configuration files for the axis range limit function are arranged so that their status can be confirmed. By scrolling down the window, all the list can be seen.

Followings are the details of the item on the window.

4 Details of Functional Safety Function
4.1 Axis Range Limit Function

<Details of the Window>

1. FUNCTION DISABLE MODE

Valid/invalid the axis range limit function. When “ON” is selected, this function becomes invalid temporarily.

Value	Description
OFF	The axis range limit function is valid.
ON	The axis range limit function is invalid. The play back, test run, forward/backward operation become prohibited.

For the details, please refer to *chapter 6.1 “Function Disable Mode Setting”*.

2. FILE

The number of the condition file is displayed.

Move the cursor to any number and press [SELECT]. The individual setting window for the selected condition file appears.

3. GROUP

The control group to be monitored specified by the condition file is indicated.

4. STATUS

Monitoring status of the present condition file is indicated.

Value	Description
SETTING	The condition file is in the initial status or in the data setting status. Monitoring is not performed.
CONFIRMING	Confirming the area after the data is set. The status of the monitoring operation depends on the valid condition of the condition file.
VALID (FILE)	Data setting is completed and monitoring status of the file is in valid status.
INVALID (FILE)	Data setting is completed and monitoring status of the file is in invalid status.
VALID (SIGNAL)	Data setting is completed and monitoring status of the file is in valid status by the establishment of the safety signal condition.
INVALID (SIGNAL)	Data setting is completed and monitoring status of the file is in invalid status by the disestablishment of the safety signal condition.

5. RANGE

Result of the present monitoring is displayed.

Value	Description
SAFE	Result of the object file monitoring is safe (inside the safety range).
NOT SAFE	Result of the object file monitoring is not-safe (outside the safety range)
-	The object file is in monitoring invalid status.

6. COMMENT

The comment input is displayed.

4 Details of Functional Safety Function

4.1 Axis Range Limit Function

4.1.3 Axis Range Limit Condition File Setting

On the status list window, select a file number with the cursor, and then press [SELECT].

- The settings window for the selected condition file of the axis range limit function appears.

LIMIT VALUE					
AXIS	SETTING	BOUNDARY	MAX	BOUNDARY	MIN
S	INVALID	IN	10.000 deg.	EX	-15.000 deg.
L	INVALID	IN	0.000 deg.	EX	0.000 deg.
U	VALID	IN	50.000 deg.	EX	30.000 deg.
R	INVALID	IN	0.000 deg.	EX	0.000 deg.
B	INVALID	IN	0.000 deg.	EX	0.000 deg.
T	INVALID	IN	0.000 deg.	EX	0.000 deg.

INPUT SIGNAL		SET	STATUS
bit0	FSBIN01(#1)	ON	<input checked="" type="radio"/>
bit1	FSBIN02(#1)	OFF	<input type="radio"/>
bit2	MS-OUT01	ON	<input type="radio"/>
bit3	-----	***	<input type="radio"/>
bit4	-----	***	<input type="radio"/>

OUTPUT SIGNAL	STATUS
FSBOUT01(#1)	<input type="radio"/>

By scrolling down the window with the cursor, all the items can be seen.

<Details of the Window>

In this section, only the items inherent to the axis range limit function are explained. For the items not mentioned here, please refer to *chapter 4.8 "Common Setting Item for the Condition File"*.

1. AXIS

All the axis existing in a control group selected at {GROUP} item are indicated. (8 axes at maximum)

2. SETTING

To one object axis, validating/invalidating of the monitoring can be set. This setting is referred when the condition file is valid for monitoring, and is not referred when it is invalid for monitoring. Followings show the combination of conditions.

File monitoring status	Axis monitoring status	Result
Valid	Valid	Monitoring of the object axis is valid.
Valid	Invalid	Monitoring of the object axis is invalid.
Invalid	Valid	Monitoring of the object axis is invalid.
Invalid	Invalid	Monitoring of the object axis is valid.

4 Details of Functional Safety Function

4.1 Axis Range Limit Function

3. MAX, MIN

Values for maximum/minimum range of motion can be input for the object axis.

As their inputting range, with the axis's home position defined as 0, the position value limited by the soft limit switch of the manipulator can be input.

When the axis is a rotating axis, it is measured in [deg], and is [mm] when the axis is a direct acting axis.


Value	Description
Minimum value	Expresses the limited range in which an axis moves in the negative direction. In case the following inequality is true, adding a positive value to the minimum value is possible. The minimum value < The maximum value
Maximum value	Expresses the limited range in which an axis moves in the positive direction. In case the following inequality is true, adding a negative value to the minimum value is possible. The minimum value < The maximum value

To a T-axis or to a positioner to which a mechanical stopper is not equipped, there may be a case where a value which exceeds ± 360 [deg] can be input.

In this case, the maximum/minimum range are limited by the basis of numerical range but not by the basis of visual range.

For example, when 420 [deg] is set as the maximum value, the axis positions at 60 [deg] and 420 [deg] visually look as they are at the same position. However, even if the axis passed through the 60 [deg] position it will not be defined as an error and an error is detected when the axis reaches just before the 420 [deg] position.

Fig. 4-2: When the Axis Limit Value Exceeds ± 360 [deg]

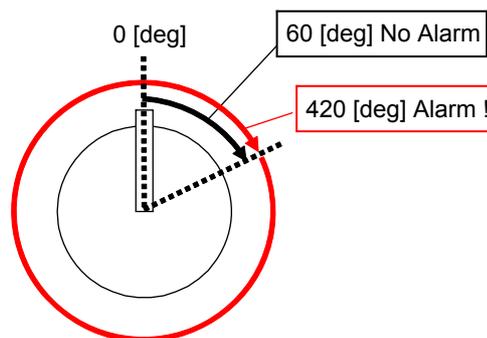

4 Details of Functional Safety Function
 4.1 Axis Range Limit Function

4. BOUNDARY

Specifies whether the range of motion of the axis includes or excludes the maximum value and/or the minimum value.

The maximum value and the minimum value of each axis can be specified independently. To include the value in the range, select IN. To exclude the value from the range, select EX.

Value	Description
IN	Range of motion is set including the maximum/minimum value of the axis. <ul style="list-style-type: none"> • When including the maximum value: (Range of motion of the axis \leq Maximum value) • When including the minimum value: (Minimum value \leq Range of motion of the axis)
EX	Range of motion is set excluding the maximum/minimum value of the axis. <ul style="list-style-type: none"> • When excluding the maximum value: (Range of motion of the axis $<$ Maximum value) • When excluding the minimum value: (Minimum value $<$ Range of motion of the axis)


4 Details of Functional Safety Function
 4.1 Axis Range Limit Function

4.1.4 Confirming Method of Each Axis Operating Angle

Each axis angle information can be confirmed on the CURRENT POSITION window.


Follow the procedures below when confirming the manipulator's present angle.

1. Set the security mode to the management mode or higher.
 Select {SETUP} under the main menu.

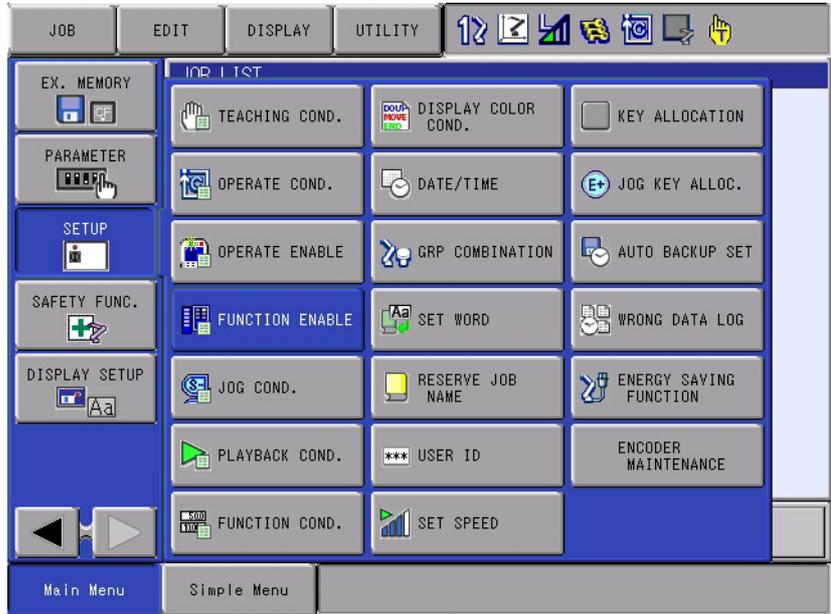


2. Select {FUNCTION ENABLE} in the sub menu.

– The FUNCTION ENABLE SETTING window appears.

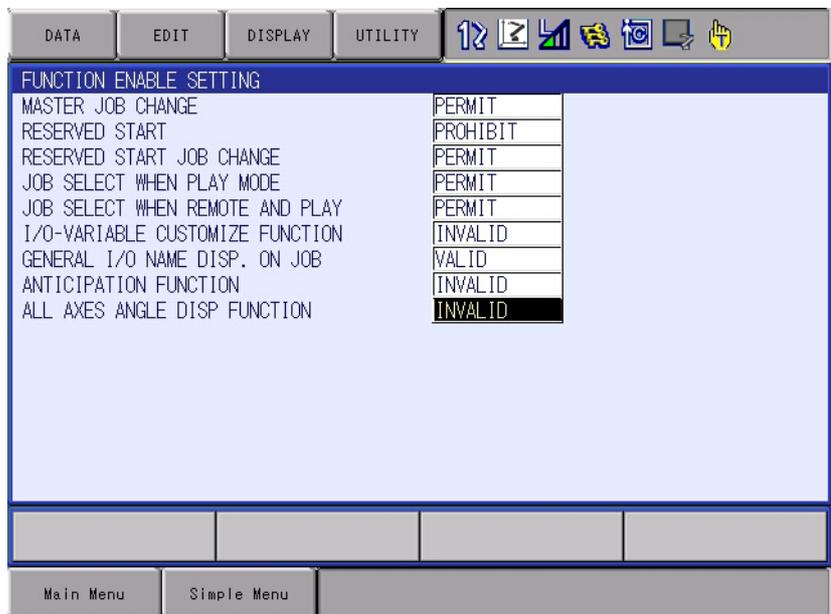


4 Details of Functional Safety Function
 4.1 Axis Range Limit Function

3. Set "VALID" to {ALL AXES ANGLE DISP FUNCTION}.

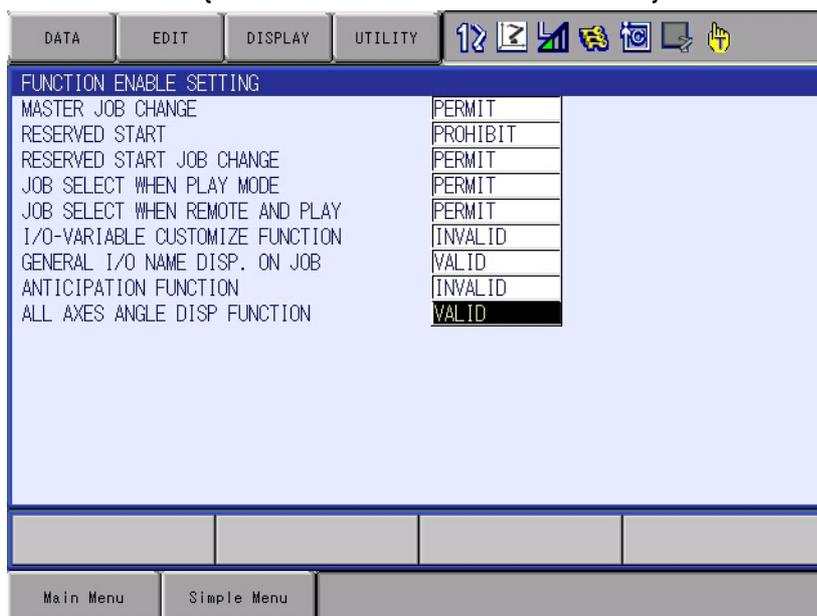


4. Select {ROBOT} under the main menu.

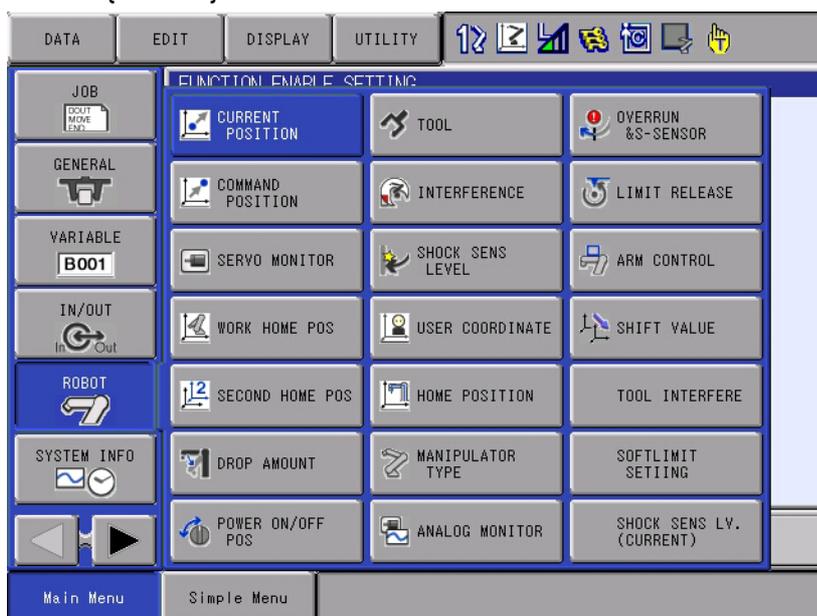


4 Details of Functional Safety Function
 4.1 Axis Range Limit Function

5. Select {CURRENT POSITION} in the sub menu.

– CURRENT POSITION window opens.

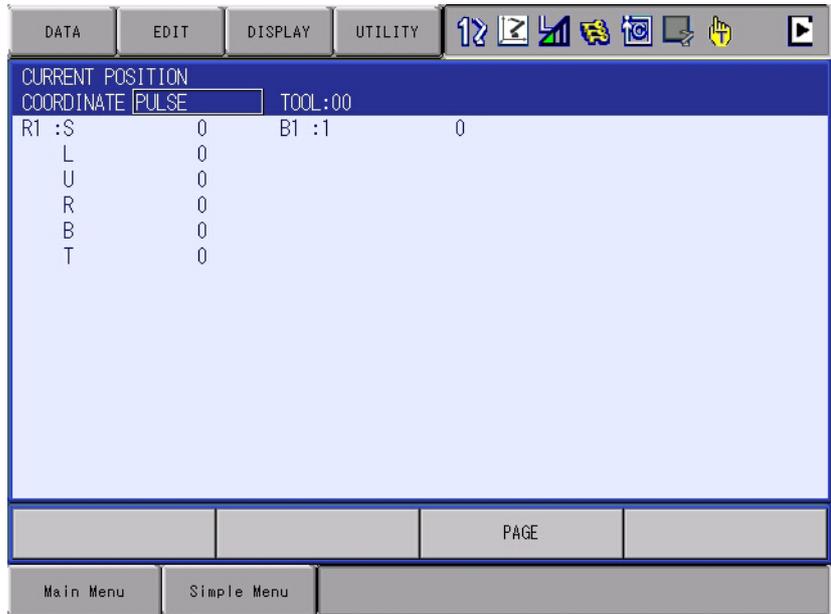


6. While CURRENT POSITION window is appeared, select {DISPLAY} tab at the upper left side of the window.

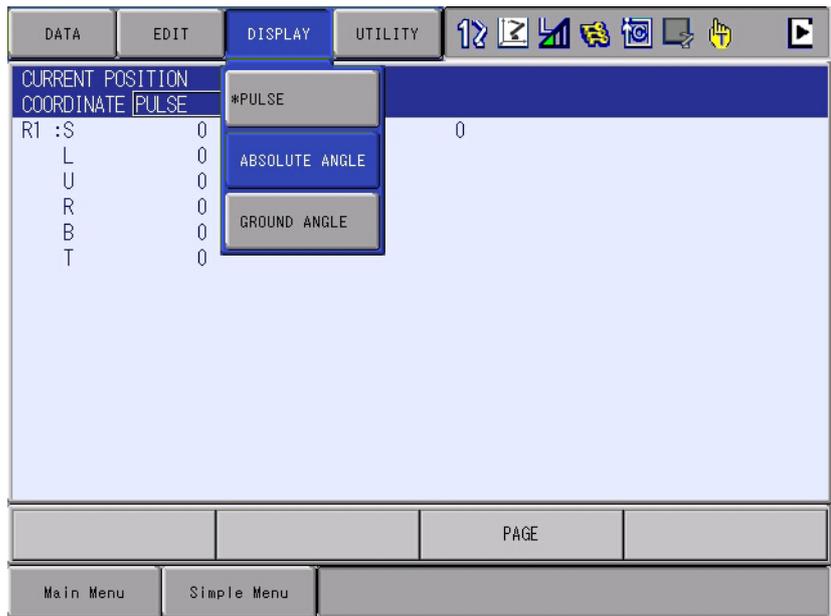

4 Details of Functional Safety Function
4.1 Axis Range Limit Function

7. Select {ABSOLUTE ANGLE} in the list under the {DISPLAY} tab.
– On {CURRENT POSITION} window, absolute angles of the axes which exist in the present system is displayed.

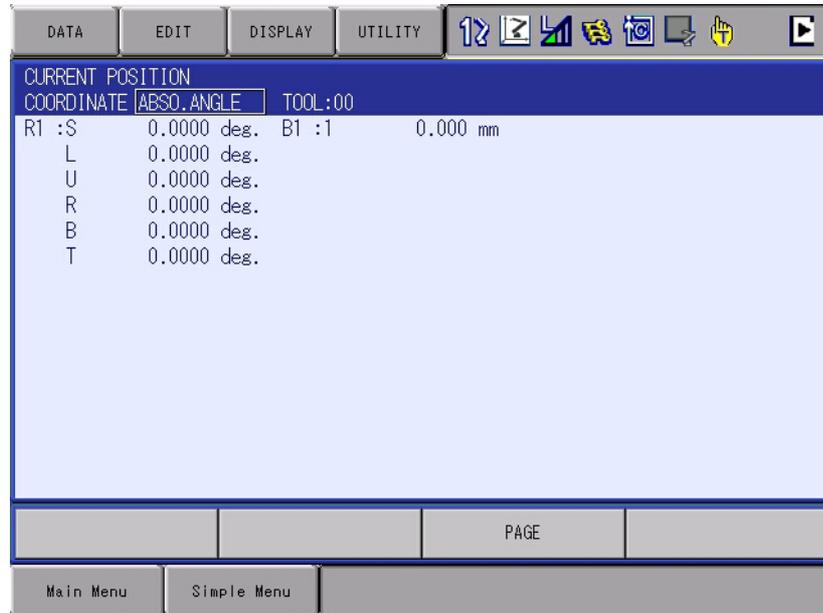

4 Details of Functional Safety Function

4.1 Axis Range Limit Function

4.1.5 Confirmation of Safety Range

Confirmation of the monitoring operation to be appropriately performed inside the specified safety range is required after values are set to both {MAX} and {MIN} and {WRITE} is executed.

“CONFIRMING” is indicated to the status of the condition file on the axis range limit window. Move the axes of the object group to confirm that they stop within the specified safety range.

When confirming the safety range, move the axes of the object group into the safety range, and then activate the monitoring operation of the condition file by either setting “VALID” for the FILE VALID COND or by inputting a selected safety signal to the condition file.

Fig. 4-3: Display When Confirming

AXIS RANGE LIMIT							
FILE NO.: 1 / 32							
COMMENT TEST							
FILE SET STATUS CONFIRMING							
FILE VALID COND INVALID							
ALARM ON(MOVE STOP)							
CTRL GROUP RT							
LIMIT VALUE							
AXIS	SETTING	BOUNDARY	MAX		BOUNDARY	MIN	
S	VALID	IN	60.000	deg.	EX	0.000	deg.
L	INVALID	IN	0.000	deg.	EX	0.000	deg.
U	INVALID	IN	0.000	deg.	EX	0.000	deg.
R	INVALID	IN	0.000	deg.	EX	0.000	deg.
B	INVALID	IN	0.000	deg.	EX	0.000	deg.
T	INVALID	IN	0.000	deg.	EX	0.000	deg.



In the functional safety function, the range of motion is monitored by calculating the coasting values of the manipulator or the external axis. (Refer to *chapter 6.2 “External Axis Coasting Value Setting”*.) For this reason, the manipulator stops just before exceeding the safety range in case it moves to the teaching point near the safety range.

4	Details of Functional Safety Function
4.1	Axis Range Limit Function

4.1.6 Start the Axis Range Limit Operation

After confirming that the object axis moves to reach the edge of the specified safety range, select {CONFIRM} on the window. "COMPLETE" appears in "FILE SET STAUTS", and the axis range limit can be performed.

Execute playback operation to confirm the manipulator's motion. An alarm may occur in case the teaching point or the settings are inappropriate.

When "Alarm 4780: F-SAFE AXIS RANGE LIMIT INTF" or "Alarm 4781: AXIS RANGE LIMIT INTF" appeared

<Cause>

The position of the axis is out of the safety range or a range of motion error is detected when the axis moved.

In the functional safety function, the axis position is monitored on the basis of the feedback pulse from the motor. In this case, taking the axis speed or coasting value into consideration, calculation of the movement is executed so that the manipulator would not come out from the safety range.

For this reason, in case a teaching point is set close to the edge of the safety range, and when the teaching speed is high, this alarm occurs.

<Countermeasure>

Confirm the safety range.

Modify the teaching point so that it moves not to close to the safety range border.


Decrease the manipulator's teaching speed when it passes by the border of the safety range.

4 Details of Functional Safety Function
 4.1 Axis Range Limit Function


4.1.7 Monitoring Status Confirmation Display

Settings of the configuration files (32 files) of the AXIS RANGE LIMIT can be checked as the list of the set values for each axis of the specified control group.

1. Select {SAFETY FUNC.} under the main menu, and then select {AXIS RANGE LIMIT}.

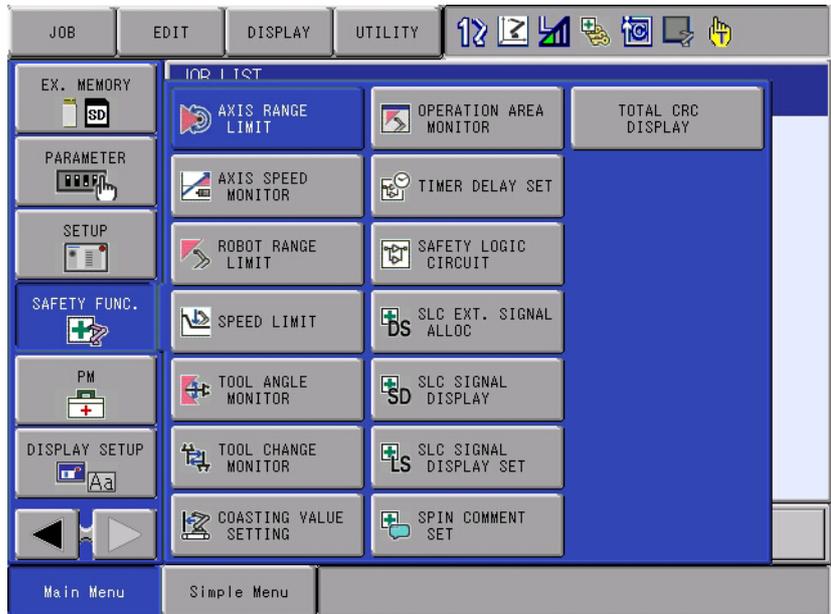

2. Select {DISPLAY}, and then select {MONITOR}.

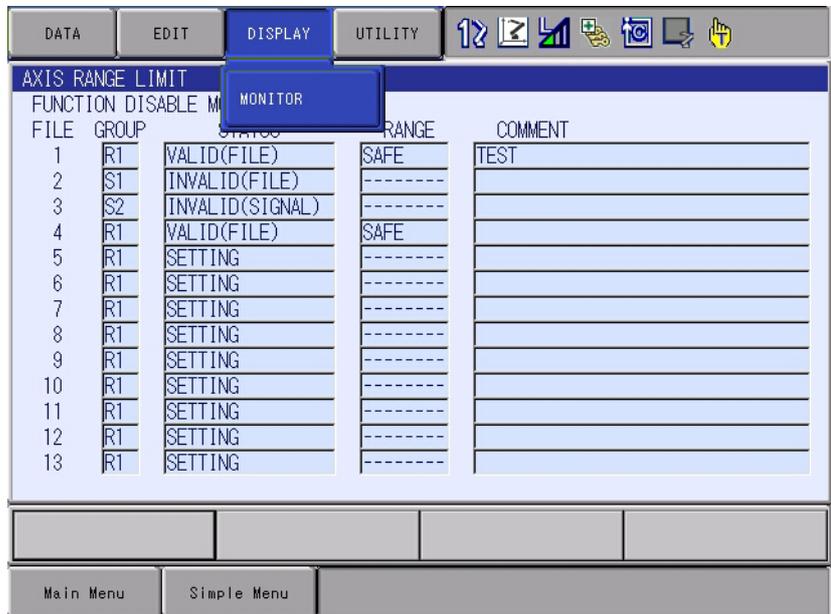


4 Details of Functional Safety Function

4.1 Axis Range Limit Function

3. The AXIS RANGE LIMIT MONITOR window appears.

– Scroll the window to the right to see the rest of the items.

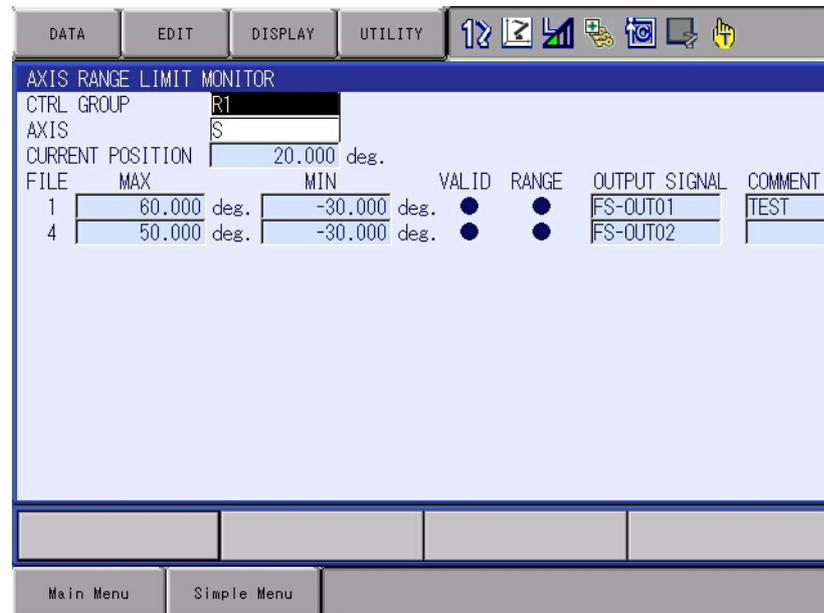

4. Items shown in the window are described below.

1. CTRL GROUP

Select the control group which includes the axis to be checked.

2. AXIS

Select the axis to be checked.

3. CURRENT POSITION

Indicates the manipulator's current position.

4. FILE

Indicates the file number for the axis range limit function.

5. MAX/MIN

Indicates the maximum/minimum value set for the file.

6. VALID

Indicates the monitoring status of the file. (○: invalid, ●: valid)

7. RANGE

Indicates whether the axis is located within the range set in the file.

(○: out of the range, ●: within the range)



WARNING

- This indication is not a safety signal. To confirm the safety status, make sure to use the safety output signal.

- 4 Details of Functional Safety Function
 - 4.1 Axis Range Limit Function
-

8. OUTPUT SIGNAL

Indicates the output signal set in the file.

9. COMMENT

Indicates the comment set in the file.

This window displays only the file(s) in which the selected axis is set as "valid". If no file for the axis range limit function is set, this window displays nothing.

4.2 Axis Speed Monitor Function


4.2.1 Outline

Axis speed monitor function is a function which sets the upper limit of the speed to each axis motion speed for the manipulator, base and station group, and then monitors whether each axis is inside the already-fixed speed using a software. When "0" is set, it is called stop position monitoring. This monitors the axis whether it does not move to exceed the limit of specified range from the point where the monitoring is started.

In case an error is detected, the power supply to the motor is stopped using the machine safety. And the error is notified using an alarm.

Thirty two files are prepared to this function and all axes motion range of any one control group is set to a file. When a control group is set to several files, the control group can be monitored by switching conditions.

Fig. 4-4: Monitoring of Motion Speed at Each Axis

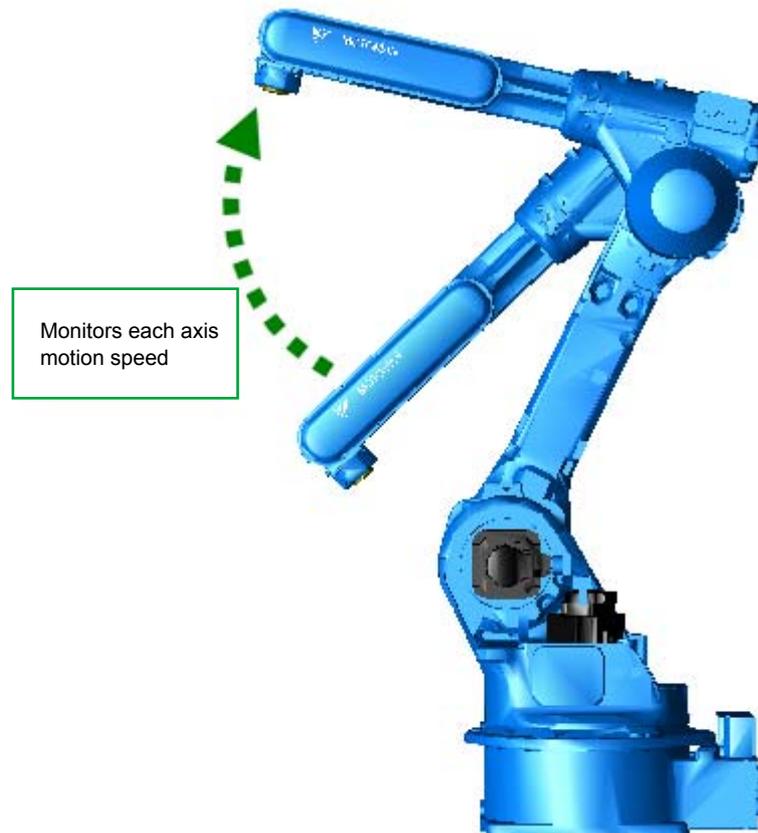

Follow the procedures below when starting the axis speed monitor function.


1. Set the axis speed monitor condition file.
2. Start monitoring the axis speed.

4 Details of Functional Safety Function
 4.2 Axis Speed Monitor Function


4.2.2 Axis Speed Monitor Function Window

Followings are the setting procedures for the axis speed monitor function.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.

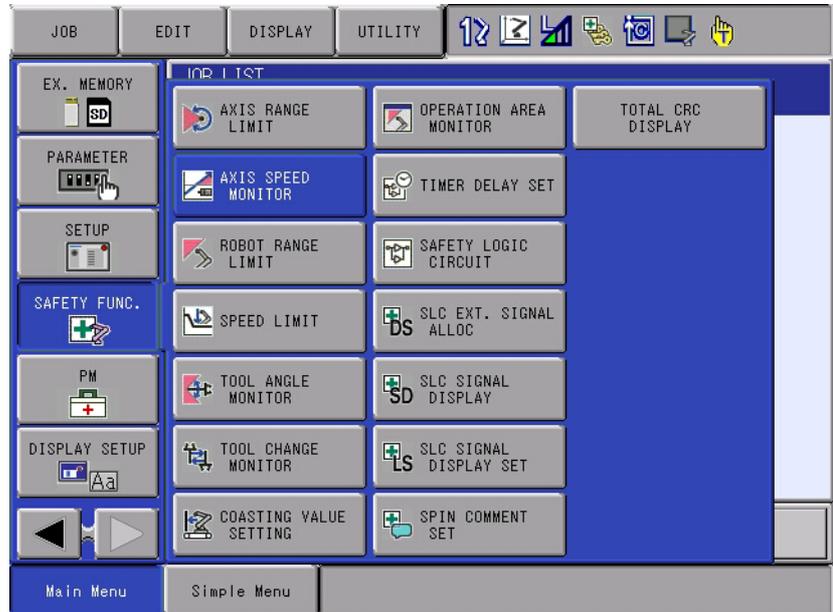

2. Select {AXIS SPEED MONITOR} in the sub menu.
 - The list of the axis speed monitor status appears.

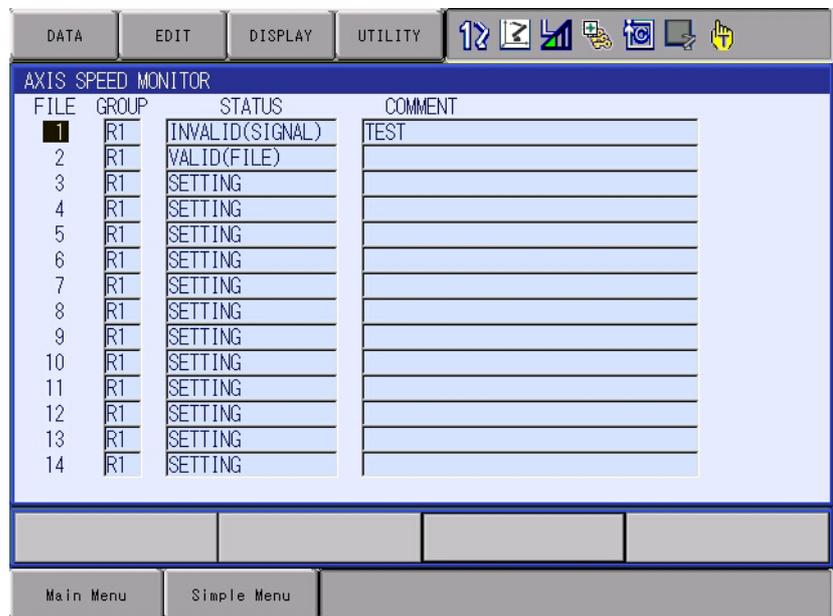

On the status list window, the 32 configuration files for the axis speed limit function are arranged so that their status can be confirmed. By scrolling down the window, all the list can be seen.

-
- 4 Details of Functional Safety Function
 - 4.2 Axis Speed Monitor Function
-

Followings are the details of the item on the window.

<Details of the Window>

1. FILE

The number of the condition file is displayed.

Move the cursor to any number and press [SELECT]. The individual setting window for the selected condition file appears.

2. GROUP

The control group to be monitored set by the condition file

3. STATUS

Monitoring status of the present condition file

Value	Description
SETTING	The condition file is in the initial status or in the data setting status. Monitoring is not performed.
VALID (FILE)	Data setting is completed and monitoring status of the file is in valid status.
INVALID (FILE)	Data setting is completed and monitoring status of the file is in invalid status.
VALID (SIGNAL)	Data setting is completed and monitoring status of the file is in valid status by the establishment of the safety signal condition.
INVALID (SIGNAL)	Data setting is completed and monitoring status of the file is in invalid status by the disestablishment of the safety signal condition.

4. COMMENT

The comment input is displayed.

4 Details of Functional Safety Function
 4.2 Axis Speed Monitor Function

4.2.3 Axis Speed Monitor Condition File Setting

On the status list window, select a file number with the cursor, and then press [SELECT].

- The settings window for the selected condition file of the axis speed monitor function appears.

<When the unit of the speed is deg/sec>

AXIS SPEED MONITOR
 FILE NO.: 1 / 32

COMMENT TEST
 FILE SET STATUS COMPLETED
 FILE VALID COND SIGNAL

CTRL GROUP R1
 SPEED UNIT deg/sec

LIMIT VALUE

AXIS	SETTING	SPEED	ACCEP. RNG
S	VALID	0.0 deg/s	0.200 deg.
L	VALID	30.0 deg/s	***** deg.
U	INVALID	0.0 deg/s	0.200 deg.
R	INVALID	0.0 deg/s	0.200 deg.
B	INVALID	0.0 deg/s	0.200 deg.
T	INVALID	0.0 deg/s	0.200 deg.

INPUT SIGNAL

bit	SIGNAL	SET	STATUS
bit0	FSBIN01(#1)	ON	<input type="radio"/>
bit1	FSBIN02(#1)	OFF	<input type="radio"/>
bit2	MS-OUT01	ON	<input type="radio"/>
bit3	-----	****	<input type="radio"/>
bit4	-----	****	<input type="radio"/>

OUTPUT SIGNAL FSBOUT06(#1)

PAGE

<When the unit of the speed is %>

AXIS SPEED MONITOR
 FILE NO.: 1 / 32

COMMENT TEST
 FILE SET STATUS COMPLETED
 FILE VALID COND SIGNAL

CTRL GROUP R1
 SPEED UNIT %

LIMIT VALUE

AXIS	SETTING	SPEED	ACCEP. RNG
S	VALID	0.0 %	0.200 deg.
L	VALID	20.0 %	***** deg.
U	INVALID	0.0 %	0.200 deg.
R	INVALID	0.0 %	0.200 deg.
B	INVALID	0.0 %	0.200 deg.
T	INVALID	0.0 %	0.200 deg.

INPUT SIGNAL

bit	SIGNAL	SET	STATUS
bit0	FSBIN01(#1)	ON	<input type="radio"/>
bit1	FSBIN02(#1)	OFF	<input type="radio"/>
bit2	MS-OUT01	ON	<input type="radio"/>
bit3	-----	****	<input type="radio"/>
bit4	-----	****	<input type="radio"/>

OUTPUT SIGNAL FSBOUT06(#1)

PAGE

By scrolling down the window with the cursor, all the items can be seen.

4 Details of Functional Safety Function

4.2 Axis Speed Monitor Function

<Details of the Window>

In this section, only the items inherent to AXIS SPEED MONITOR are explained. For the items not mentioned here, please refer to *chapter 4.8 "Common Setting Item for the Condition File"*.

1. AXIS

All the axis existing in a control group selected at {GROUP} item.

2. SETTING

To one objective axis, validating/invalidating of the monitoring can be set.

This setting is referred when the condition file is valid for monitoring, and is not referred when it is invalid for monitoring.

Followings show the combination of conditions.

File monitoring status	Axis monitoring status	Result
Valid	Valid	Monitoring of the object axis is valid.
Valid	Invalid	Monitoring of the object axis is invalid.
Invalid	Valid	Monitoring of the object axis is invalid.
Invalid	Invalid	Monitoring of the object axis is valid.

3. Unit of the speed

The unit of the speed can be specified in the settings file.

When "deg/s" is set as the unit of the speed, [deg/sec] is used for a rotating axis, and [mm/sec] is used for a linear-motion axis.

When "%" is set as the unit of the speed, percentage is used.

4. SPEED

To each object axis, set the upper limit of motion speed.

When "deg/s" is set as the unit of the speed, [deg/sec] is used for a rotating axis, and [mm/sec] is used for a linear-motion axis.

When "%" is set as the unit of the speed, calculate and set the upper limit by considering the maximum speed as 100%. This unit [%] is the same as the unit of the set value used when the object axis is independently operated by MOVJ=xx%.

5. ACCEP. RNG

When "0" is set to {SPEED}, setting a value to this item becomes possible.

This item is used when the axis is in the stop position monitoring status.

The stop position monitoring operation judges that the axis is not moving by monitoring the object axis position difference between the stop position monitoring starting position and the present position.

To avoid any alarms from occurring due to tiny motions such as turning ON of the servo during the monitoring, this item is set.

An alarm occurs when {ACCEP.RNG} is set in \pm direction from the stop position monitoring starting position and the axis moves to exceed the position.

When the axis is a rotating axis, the unit is [deg], and when the axis is a linear-motion axis, the unit is [mm].

- 4 Details of Functional Safety Function
 - 4.2 Axis Speed Monitor Function
-

4.2.4 Start the Axis Speed Monitor Operation

After values are input to "SPEED" and {WRITE} on the window is selected, "COMPLETED" appears in "FILE SET STATUS". After that, the axis speed monitor can be performed.

4.3 Robot Range Limit Function

4.3.1 Outline

The robot range limit function is a function which carries out following monitoring using software.

1. Define the manipulator's range of motion with polygonal prism or cuboid, and then monitors the manipulator arm or its tool to be inside the range of motion.
→Inside the range monitoring
2. Define the manipulator's approach-prohibited area with polygonal prism or cuboid, and then monitors whether the manipulator arm or its tool does not move inside the area.
→Outside the range monitoring
3. Limit the manipulator's range of motion with a large enough plane (wall), and then monitors the manipulator arm or its tool so as not to interfere with the plane.
→Planar interference monitoring

<Inside the range monitoring>


The manipulator's range of motion can be defined using the prism from triangular prism to 16-prisms. The space inside the prism is defined as the safety range.

There are two ways of specifying the prism as follows:

- A polygon on the XY plane with a height in Z-axis direction.
- A cuboid consists of two points on a diagonal line.

When the result of the monitoring is safe, the object arm and the tool of the manipulator are inevitably inside the safety range.

Fig. 4-5: Inside the Range Monitoring

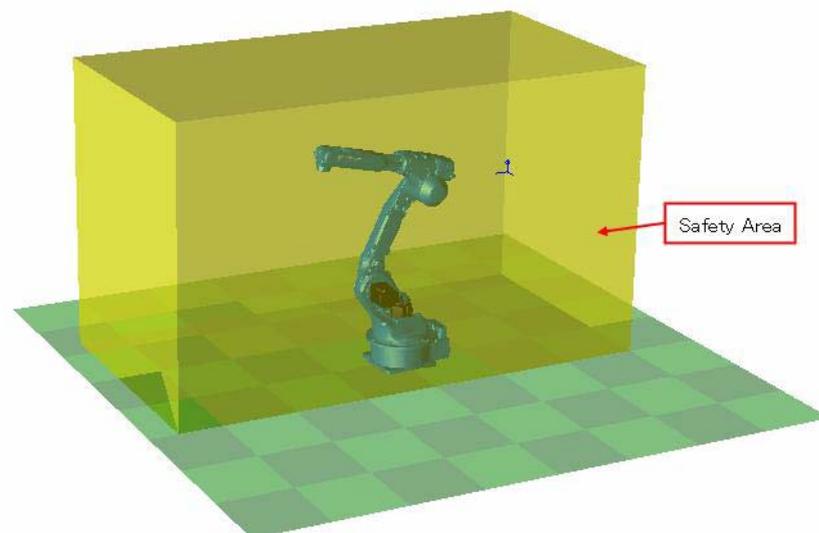

4 Details of Functional Safety Function

4.3 Robot Range Limit Function

<Outside the range monitoring>

The manipulator's range of motion can be defined using the prism with triangular prism and quadrangular prism. The space outside the prism is defined as the safety range.


There are two ways of specifying the prism as follows.

-A polygon on the XY plane with a height in Z-axis direction.

-A cuboid consists of two points on a diagonal line.

When the result of the monitoring is safe, the object arm and tool of the manipulator are inevitably outside the safety range.


Fig. 4-6: Outside the Range Monitoring

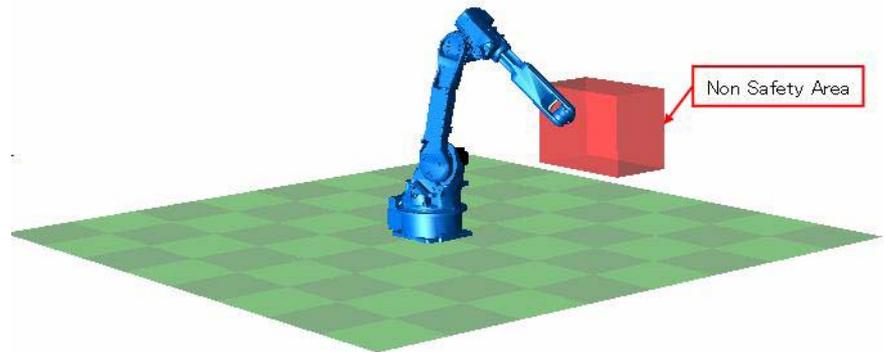

<Planar interference monitoring>

Draw a line on either XY, YZ or ZX coordinate plane, and then, along the line, set a plane (wall) in the vertical direction. A plane, which is large enough to the manipulator, is specified. Regarding the plane as a boarder, the area where the manipulator exists is defined as the safety range. The plane is defined by specifying a coordinate plane and two points for drawing a line.

Fig. 4-7: Outside the Range Monitoring

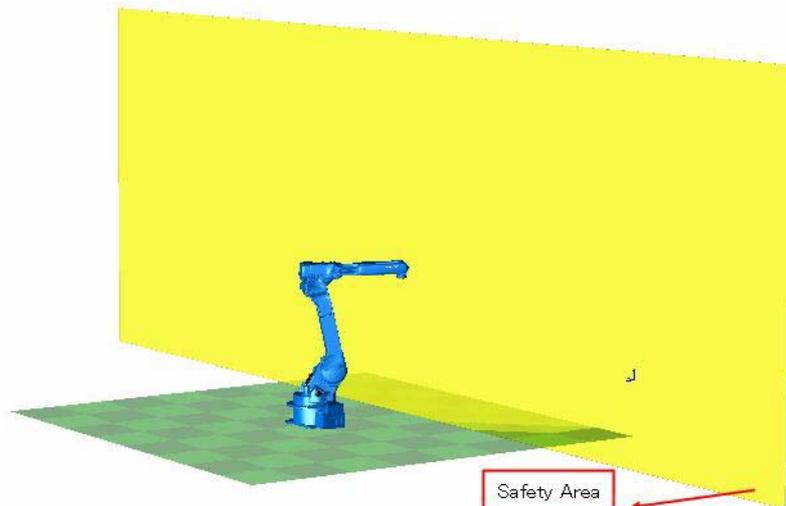

4 Details of Functional Safety Function

4.3 Robot Range Limit Function

While a manipulator is in operation, based on the manipulator motion speed, this function calculates the coasting value in case of the immediate stop by the alarm, and then, including this value, this function monitors the safety range. With this monitoring operation, the axes would not exceed the safety range even if a motion error is detected.

In case an error is detected, the power supply to the motor is stopped using the machine safety. And the error is notified using an alarm.

Thirty two files are prepared to this function and any one control group and a safety range is set to a file. When a control group is set to several files, the control group can be monitored by switching conditions.

Follow the procedures below when starting the robot range limit function.


1. Set the coasting value.
(Before using this function, set the coasting value by following the procedures described in *chapter 6.2 "External Axis Coasting Value Setting"* in case the base axis or the station axis exists in the system.)
2. Set the tool file.
(Before using this function, execute tool file setting by referring to *chapter 6.3 "Tool File Setting"* .)
3. Set the tool interference file.
(Before using this function, execute tool interference file setting by referring to *chapter 6.4 "Tool Interference File Setting"* .)
4. Set the robot range limit function.
5. Confirm the safety range.
6. Start the robot range limit function.

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function


4.3.2 Robot Range Limit Function Window

Followings are the setting procedures for the axis range limit function.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.

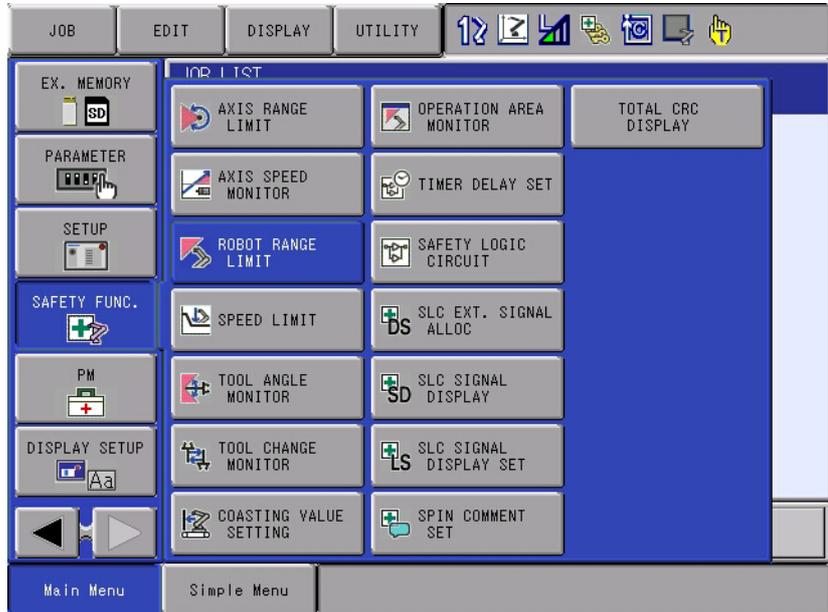

2. Select {ROBOT RANGE LIMIT} in the sub menu.
 - The list of the robot range limit status appears.

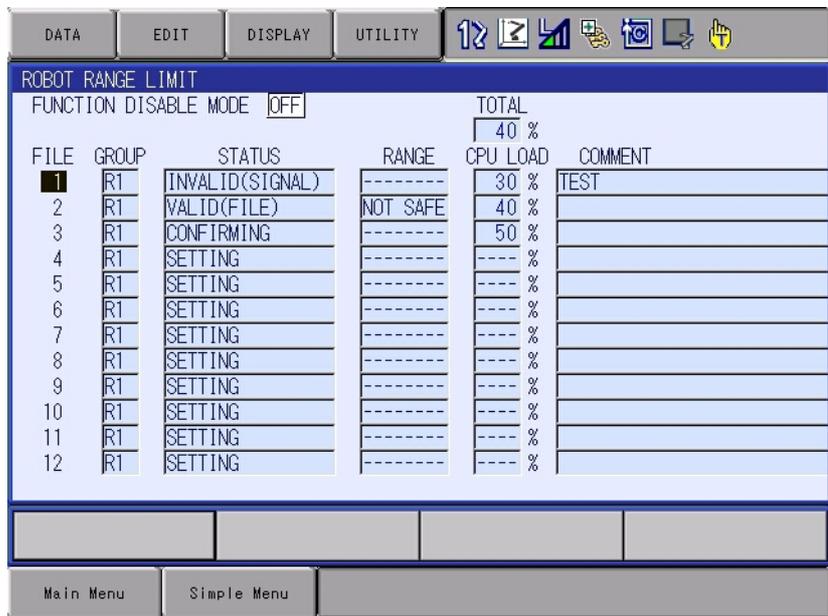

On the status list window, the 32 configuration files for the axis range limit function are arranged so that their status can be confirmed. By scrolling down the window, all the list can be seen.

4 Details of Functional Safety Function

4.3 Robot Range Limit Function

Followings are the details of the item on the window.

<Details of the Window>

1. FUNCTION DISABLE MODE

Valid/invalid the robot range limit function. When "ON" is selected, the condition files of the 32 files of this function can be set to invalid temporarily.

Value	Description
OFF	The robot range limit function is valid.
ON	The robot range limit function is invalid. The play back, test run, forward/backward operation become prohibited.

For the details, please refer to *chapter 6.1 "Function Disable Mode Setting"*.

2. FILE

The number of the condition file is displayed.

Move the cursor to any number and press [SELECT]. The individual setting window for the selected condition file appears.

3. GROUP

The control group to be monitored specified by the condition file is indicated.

4. STATUS

Monitoring status of the present condition file is indicated.

Value	Description
SETTING	The condition file is in the initial status or in the data setting status. Monitoring is not performed.
CONFIRMING	Confirming the area after the data is set. The status of the monitoring operation depends on the valid condition of the condition file.
VALID (FILE)	Data setting is completed and monitoring status of the file is in valid status.
INVALID (FILE)	Data setting is completed and monitoring status of the file is in invalid status.
VALID (SIGNAL)	Data setting is completed and monitoring status of the file is in valid status by the establishment of the safety signal condition.
INVALID (SIGNAL)	Data setting is completed and monitoring status of the file is in invalid status by the disestablishment of the safety signal condition.

5. RANGE

Result of the present monitoring is displayed.

Value	Description
Safe	Result of the object file monitoring is safe (inside the safety range) is safe (inside the safety range)
Not-safe	Result of the object file monitoring is not-safe (outside the safety range)
-	The object file is in monitoring invalid status.

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

6. CPU LOAD

The robot range limit function can, to some extent, freely define the shape as its range of motion. However, the time period needed for processing the monitoring varies depending on the shape or the method of monitoring.

Regard the allocated processing time for robot range limit function as 100%, the ratio of necessary processing time for the area created in the object area is indicated to this item.

Followings are processing time for each area created in the object area.

Monitoring method	Numbers of point	Processing time
Inside the area	4	20%
	8	23%
	16	30%
Outside the area	3	18%
	4	20%
	4 (Cuboid)	18%
Plane (X-Y)	-	8%
Plane (Y-Z)	-	8%
Plane (X-Z)	-	8%

7. TOTAL

Total {CPU LOAD} of the files to which monitoring is validated.



When executing the robot range limit function even after the total cpu load exceeded over 100%, following alarms may occur due to insufficient processing time.

Alarm 500 SEGMENT PROC NOT READY

Alarm 1899 F-SAFE MONITOR EXECUTE TIMEOVER

When an alarm occurred, reduce the area where the monitoring is simultaneously validated to avoid the cpu load from exceeding 100%.

8. COMMENT

The comment input is displayed.

4 Details of Functional Safety Function

4.3 Robot Range Limit Function

4.3.3 Robot Range Limit Function Condition File Setting Window

On the status list window, select a file number with the cursor, and then press [SELECT].

A setting window for the selected condition file of the ROBOT RANGE LIMIT function appears.

On this window, the indication pattern on the window changes depending on the selection of {MONITOR TARGET} or {SHAPE TYPE}. For the details of the indication, please refer to the table below.

MONITOR TARGET	SHAPE TYPE	Indication
INSIDE, OUTSIDE	PRISM	Pattern A
	CUBOID	Pattern B
Plane (X-Y), (Y-Z), (X-Z)	-	Pattern C

■ Pattern A

Following is the pattern A of the indication of condition file setting window.

By scrolling down the window with the cursor, all the indication can be seen.

ROBOT RANGE LIMIT
FILE NO.: 1 / 32

COMMENT TEST
FILE SET STATUS COMPLETED
FILE VALID COND SIGNAL
ALARM ON(MOVE STOP)
CTRL GROUP R1

MONITOR TARGET INSIDE
COORD ROBOT
SHAPE TYPE PRISM
CPU LOAD 20 %
USED POINT NUM 4

	<X> (mm)	<Y> (mm)
POINT1	1000	1000
POINT2	1000	-1000
POINT3	-1000	-1000
POINT4	-1000	1000
<Z UPPER> (mm)	1500	
<Z LOWER> (mm)	-500	

INPUT SIGNAL	SET	STATUS
bit0 FSBIN01(#1)	OFF	●
bit1 FSBIN02(#1)	ON	○
bit2 MS-OUT01	OFF	○
bit3 -----	****	○
bit4 -----	****	○

OUTPUT SIGNAL FSBOUT03(#1) ○


PAGE

On this window, the polygonal prism is defined with the following two steps.

STEP 1: Define a polygonal prism on the X-Y plane.

STEP 2: Specify 2 points on the Z-axis to define them as the height for the polygonal prism on the X-Y plane.

Fig. 4-8: Image of Robot Limit Range: Pattern A

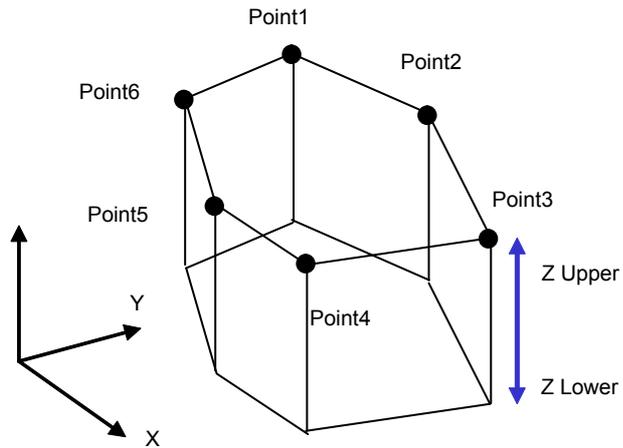

<Details of the Window>

In this section, only the items inherent to robot range limit functions are explained. For the items not mentioned here, please refer to *chapter 4.8 "Common Setting Item for the Condition File"*.

1. MONITOR TARGET

To the area of the object file, set the monitoring method.

Value	Method
INSIDE	Set the inside range monitoring.
OUTSIDE	Set the outside range monitoring.
Plane (X-Y)	Set the planar interference monitoring (X-Y)
Plane (Y-Z)	Set the planar interference monitoring (Y-Z)
Plane (X-Z)	Set the planar interference monitoring (X-Z)

2. COORD


Specify the coordinates system to be monitored.

Value	Method
ROBOT	Define the monitoring area on the robot Cartesian coordinate system.
BASE	Define the monitoring area on the base Cartesian coordinate system.

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

Setting Example of Coordinate “Robot”: When setting the area shown in fig. 4-9 “Area Setting (Robot)” .

Fig. 4-9: Area Setting (Robot)

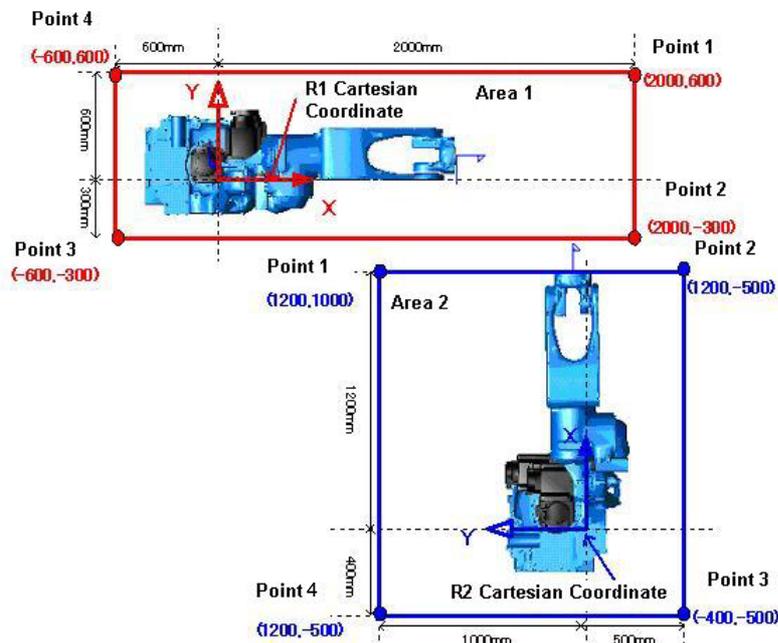

For the area 1, as shown in fig. 4-10 “Example of Condition File Setting (R1: Robot)”, select R1 to CTRL GROUP and ROBOT to COORD. Also, to each POINT, set positions which are on the R1 Cartesian coordinates.

For the area 2, as shown in fig. 4-11 “Example of Condition File Setting (R2: Robot)”, select R2 to CTRL GROUP and ROBOT to COORD. Also, to each POINT, set each position which are on the R2 Cartesian coordinates.

Fig. 4-10: Example of Condition File Setting (R1: Robot)

CTRL GROUP	R1	
MONITOR TARGET	INSIDE	
COORD	ROBOT	
SHAPE TYPE	PRISM	
CPU LOAD	20 %	
USED POINT NUM	4	
	<X> (mm)	<Y> (mm)
POINT1	2000	600
POINT2	2000	-300
POINT3	-600	-300
POINT4	-600	600
<Z UPPER> (mm)	0	
<Z LOWER> (mm)	0	

Fig. 4-11: Example of Condition File Setting (R2: Robot)


CTRL GROUP	R2	
MONITOR TARGET	INSIDE	
COORD	ROBOT	
SHAPE TYPE	PRISM	
CPU LOAD	20 %	
USED POINT NUM	4	
	<X> (mm)	<Y> (mm)
POINT1	1200	1000
POINT2	1200	-500
POINT3	-400	-500
POINT4	-400	1200
<Z UPPER> (mm)	0	
<Z LOWER> (mm)	0	

4 Details of Functional Safety Function


4.3 Robot Range Limit Function

When setting a position to a POINT, confirm the position following the procedures below.

1. Select {ROBOT} → {CURRENT POSITION} under the main menu.
 - The CURRENT POSITION window appears.

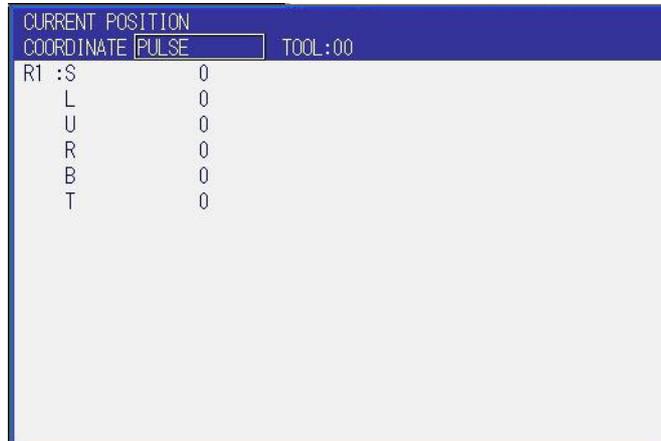

2. Select {ROBOT} at {COORDINATE}.

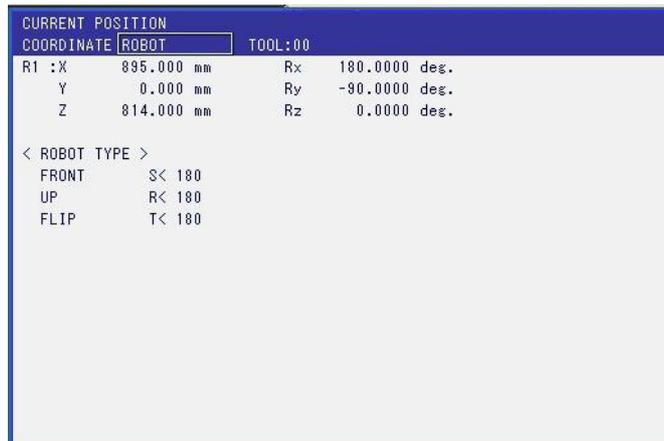


3. Set the Cartesian position indicated on the window to each POINT.

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

Setting Example of Coordinate “Base”: When setting the area shown in fig. 4-12 “Area Setting (Base)” .

Fig. 4-12: Area Setting (Base)

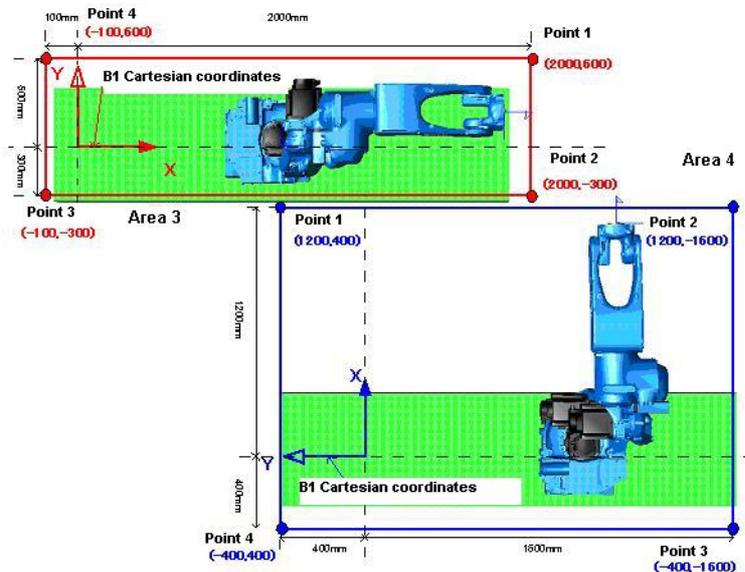

For the area 3, as shown in fig. 4-13 “Example of Condition File Setting (R1: Base)”, select R1 to CTRL GROUP and ROBOT to COORD. Also, to each POINT, set positions which are on the R1 Cartesian coordinates.

For the area 4, as shown in fig. 4-14 “Example of Condition File Setting (R2:Base)”, select R2 to CTRL GROUP and ROBOT to COORD. Also, to each POINT, set each position which are on the R2 Cartesian coordinates.

Fig. 4-13: Example of Condition File Setting (R1: Base)

CTRL GROUP	R1	
MONITOR TARGET	INSIDE	
COORD	BASE	
SHAPE TYPE	PRISM	
CPU LOAD	33 %	
USED POINT NUM	4	
	<X> (mm)	<Y> (mm)
POINT1	2000	600
POINT2	2000	-300
POINT3	-100	-300
POINT4	-100	600
<Z UPPER> (mm)	0	
<Z LOWER> (mm)	0	

Fig. 4-14: Example of Condition File Setting (R2:Base)

CTRL GROUP	R2	
MONITOR TARGET	INSIDE	
COORD	BASE	
SHAPE TYPE	PRISM	
CPU LOAD	33 %	
USED POINT NUM	4	
	<X> (mm)	<Y> (mm)
POINT1	1200	400
POINT2	1200	-1600
POINT3	-400	-1600
POINT4	-400	400
<Z UPPER> (mm)	0	
<Z LOWER> (mm)	0	

4 Details of Functional Safety Function

4.3 Robot Range Limit Function

When setting a position to a POINT, confirm the position following the procedures below.

1. Select {ROBOT} → {CURRENT POSITION} under the main menu.
– The CURRENT POSITION window appears.

CURRENT POSITION			
COORDINATE	PULSE	TOOL:00	
R1 :S	0	B1 :1	0
L	0		
U	0		
R	0		
B	0		
T	0		

2. Select {ROBOT} at {COORDINATE}.

CURRENT POSITION			
COORDINATE	ROBOT	TOOL:00	
R1 :X	895.000 mm	Rx	180.0000 deg.
Y	0.000 mm	Ry	-90.0000 deg.
Z	814.000 mm	Rz	0.0000 deg.
< ROBOT TYPE >		< ORIGIN >	
FRONT	S< 180	X0	0.000 mm
UP	R< 180	Y0	0.000 mm
FLIP	T< 180	Z0	0.000 mm

3. Add the Cartesian position indicated at <ORIGIN> to the Cartesian position indicated on the window, and then set the sum of the position to each POINT.

- 4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

3. SHAPE TYPE

Specify the creating method of the monitoring area.

If either Plane (X-Y), Plane (Y-Z) or Plane (X-Z) is set to {MONITOR TARGET}, this item is invalid.

Value	Method
PRISM	Create lines between the created points to specify the area for the range of motion. For inside the range monitoring, up to 16 points can be specified. For outside the range monitoring, up to 4 points can be specified.
CUBOID	Specify two points, and then create a cuboid whose diagonal line is created by those points. This cuboid is specified as the area for the range of motion.

4. CPU LOAD

Please refer to “6. CPU LOAD” in *chapter 4.3.2 “Robot Range Limit Function Window”*.

5. USED POINT NUM

Specify the numbers of points for creating a polygonal prism.

For the inside the range monitoring, from 3 to 16 can be input.

For the outside the range monitoring, from 3 to 4 can be input.

Ex. For triangular prism, input “3”.

For 16-prisms, input “16”.

6. POINT (X,Y)

Specify points on the X-Y plane to define a polygonal prism.

(Point 1 to 6 in *fig. 4-8 “Image of Robot Limit Range: Pattern A”*.)

The points are connected in ascending order like “POINT 1 →POINT 2→POINT3.....”. And the line of these points becomes the wall of the range of motion. Take this procedures into consideration before specifying the points.

The numbers of the points is specified by the settings of {USED POINT NUM}. The last number of the point is connected to the first one.

7. Z UPPER, Z LOWER

Specify the height of the polygonal prism. (Z Upper and Z Lower in *fig. 4-8*.)


When “0 [mm]” is set to both the Z UPPER and the Z LOWER, the height in the Z-axis direction is set to infinite (polygonal prism of infinite height).

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

■ **Pattern B**

Following is the pattern B of the indication of condition file setting window.

By scrolling down the window with the cursor, all the indication can be seen.

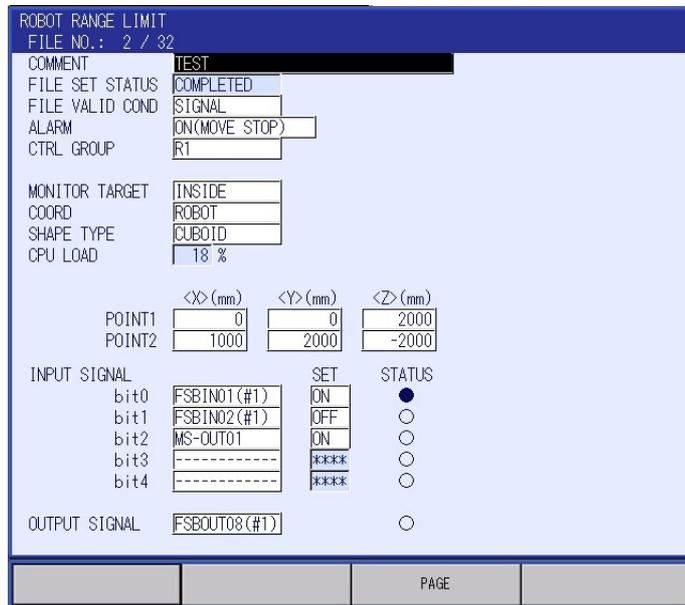


On this window, the cuboid is defined with the following two steps.

STEP 1: Define two points (point 1 and point 2) on the X -Y - Z plane to create a cuboid by regarding the connected line as its diagonal line.

STEP 2: A cuboid area is automatically created based on the specified two points.

Fig. 4-15: Image of Robot Limit Range: Pattern B

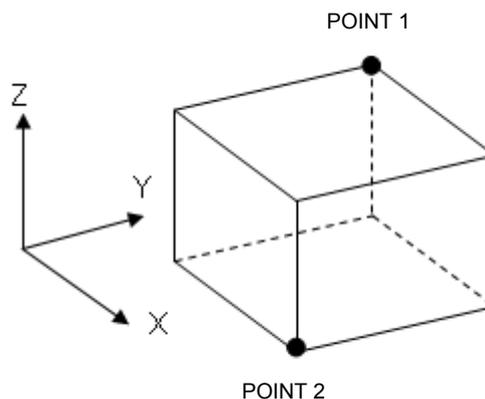

<Details of the Window>

Please refer to ■ “Pattern A” or chapter 4.8 “Common Setting Item for the Condition File” for the items not explained here in ■ “Pattern B” .

8. POINT (X, Y, Z)

Specify two points on a object coordinates system, and then a cuboid is created whose diagonal line is specified by the points.


In case any two point values input in either X, Y or Z are overlapped, the setting is regarded as an error.

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

■ **Pattern C**

Following is the pattern C of the indication of condition file setting window.

By scrolling down the window with the cursor, all the indication can be seen.

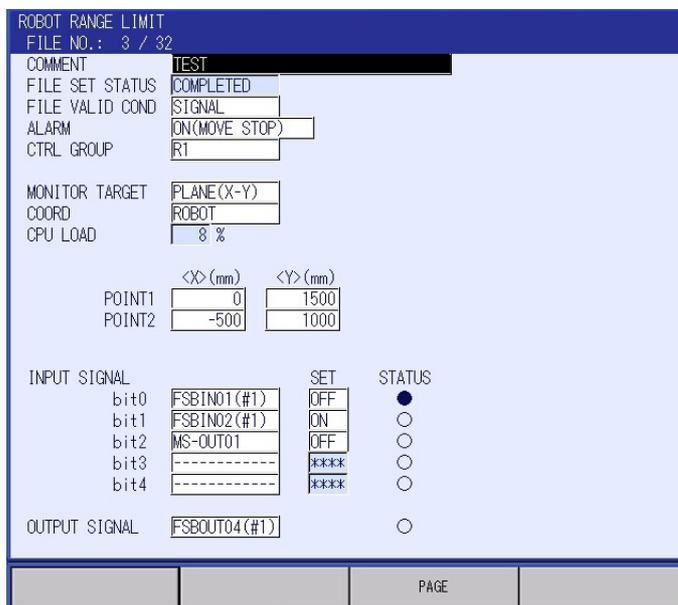


On this window, a plane is defined with the following two steps.

STEP 1: Define a straight line with two points (point 1 and point 2) on any of the selected X-Y, Y-Z or X-Z plane.

STEP 2: In a vertical direction, a plane (wall) is specified along the straight line which was defined in the STEP 1. A plane, which is large enough to the manipulator, is specified.

Fig. 4-16: Image of Robot Limit Range: Pattern C (Area inside Dotted Line Is Non-safety Area)

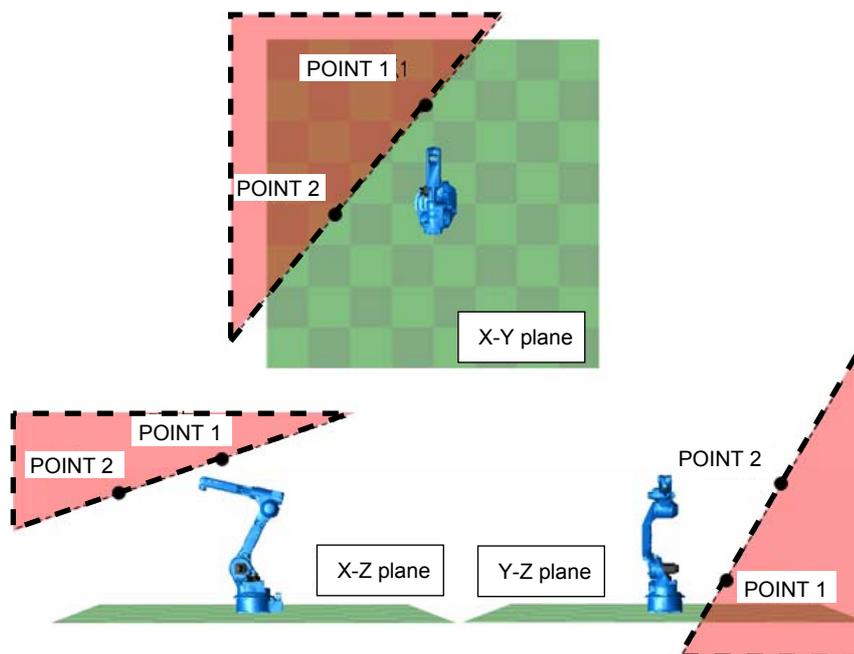

- 4 Details of Functional Safety Function
 - 4.3 Robot Range Limit Function
-

<Details of the Window>

Please refer to ■ *“Pattern A”* or *chapter 4.8 “Common Setting Item for the Condition File”*.

9. POINT (X,Y), (Y, Z) or (X,Z)

Specify two points to draw a straight line on a coordinate plane selected at “MONITOR TARGET”.

In case the coordinates of these two points overlapped, the setting is regarded as an error.

4 Details of Functional Safety Function

4.3 Robot Range Limit Function


4.3.4 Confirmation of the Safety Range

After the safety range is specified and {READ} is pressed, it is necessary to confirm whether the monitoring is appropriately performed inside the range.

“CONFIRMING” is indicated at “FILE SETSTATUS” on the robot range limit window. Set “VALID” to the object file by the file setting or signal condition.

Move the object manipulator or external axis to confirm whether it stops inside the specified safety range.

Fig. 4-17: CONFIRMING Window

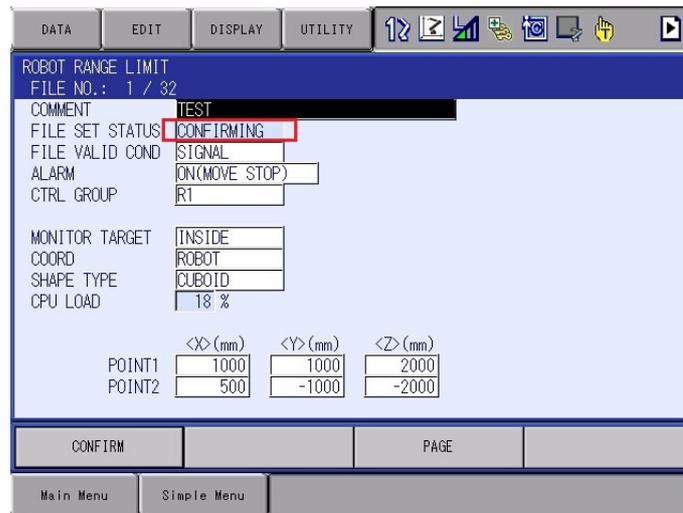


<Confirm Safety Range with Jog Operation>

With the jog operation, confirm whether the specified safety range is appropriate.

○ Inside the range monitoring

Move the manipulator inside the specified four walls and check that it stops just in front of the wall. In case the area is not a cuboid, check that it stops just in front of all walls.

Fig. 4-18: Inside the Range Monitoring

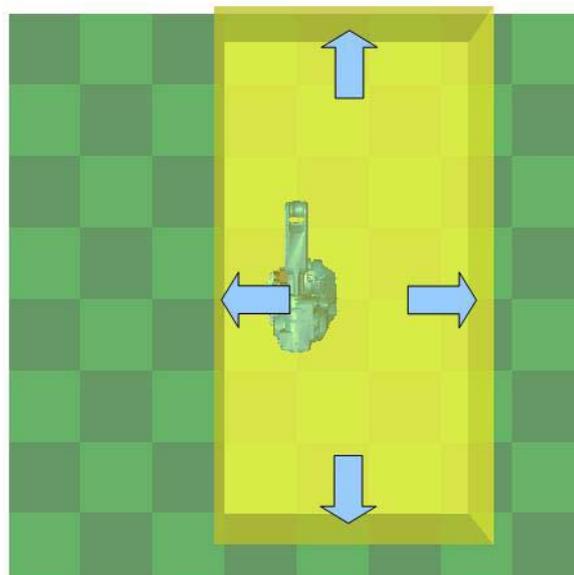


4 Details of Functional Safety Function

4.3 Robot Range Limit Function

○ **Outside the range monitoring**

To the walls, move the manipulator toward all the direction where it can make approach and check that it stops just in front of all each wall.


Fig. 4-19: Outside the Range Monitoring

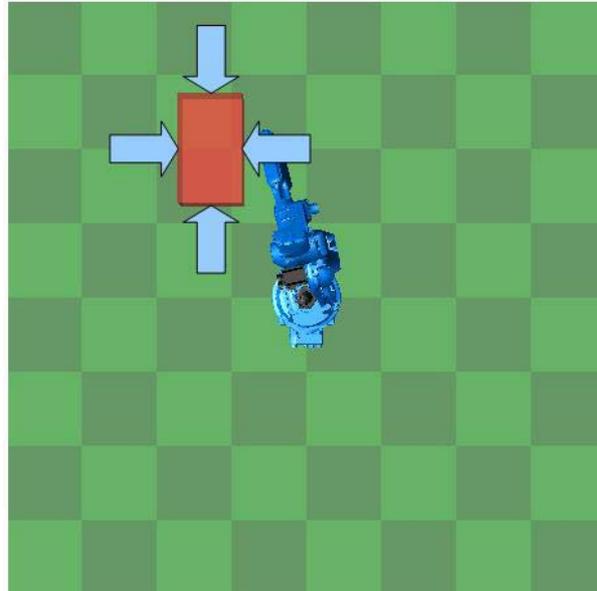

○ **Planar interference monitoring**

To the specified plane, make the manipulator approach to it. And confirm that the manipulator stops at any three points on the plane.

Fig. 4-20: Planar Interference Monitoring

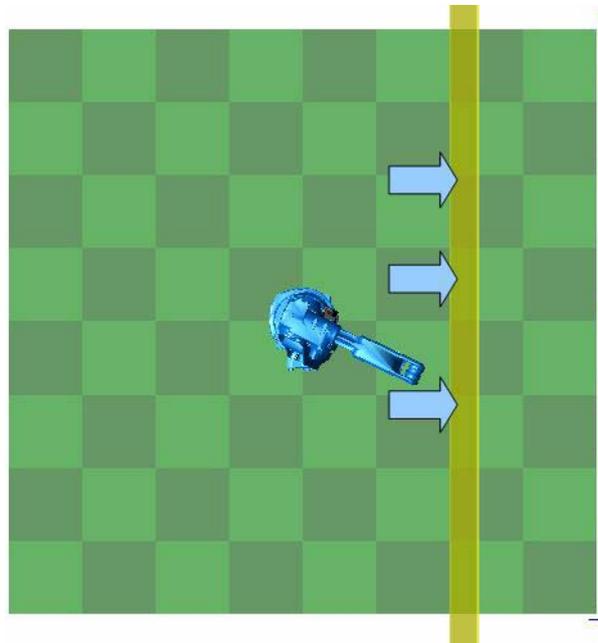

In the functional safety function, the range of motion is monitored by calculating the coasting values of the manipulator or the external axis. (Refer to chapter 6.2 “External Axis Coasting Value Setting”.) For this reason, the manipulator stops just short of the safety range in case it moves to the teaching point near the safety range.

-
- 4 Details of Functional Safety Function
 - 4.3 Robot Range Limit Function
-

4.3.5 Starting the Robot Range Limit

After the manipulator is confirmed that it moves to its robot range limit, press {CONFIRMED} on the window. The robot range limit function becomes valid.

Execute the play back operation of the practical movement. An alarms may occur due to inappropriate settings or teaching point setting.

In case “Alarm 4783: F-SAFE ROBOT RANGE LIMIT INTF” or “Alarm 4784: ROBOT RANGE LIMIT INTF” appeared

<Cause>

The positions of the robot and the tool are out of its safety area, or an axis range limit error is detected when the manipulator started moving. Inside the robot range limit, taking the feedback speed or the coasting value which were detected by the functional safety function, into consideration, calculation of the movement is executed so that the manipulator would not come out from the safety range. For this reason, when a manipulator moves close to the border of the range, this alarm occurs because the higher its teaching speed becomes, the more its coasting value increases.

<Countermeasure>

Check that the safety range is appropriately set.

Execute the teaching operation so that the manipulator dose not approach close to the border of the range.


Decrease the teaching speed near the border of the range.

4.3.6 Switch the Monitoring Area

When switching the monitoring area using the safety signal input, execute the switching operation after moving the manipulator to be inside the next monitoring area and stopping it completely.

When executing inside the range monitoring at multiple ranges, set the overlapped range and execute the switching only when the manipulator is inside the overlapped area.

Fig. 4-21: When Switching the Monitoring Area

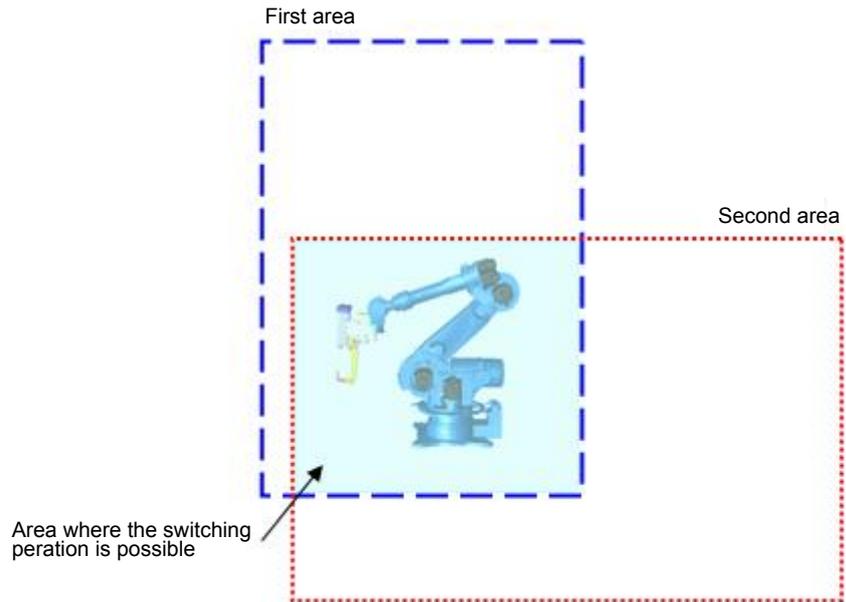


When monitoring operation is validated to multiple areas at a time, the overlapped area is regarded as the safety range.

- 4 Details of Functional Safety Function
- 4.3 Robot Range Limit Function


Inside the monitoring area + Inside the monitoring area

Fig. 4-22: Simultaneous Monitoring: Multiple Areas (Inside the Monitoring Area + Inside the Monitoring Area)

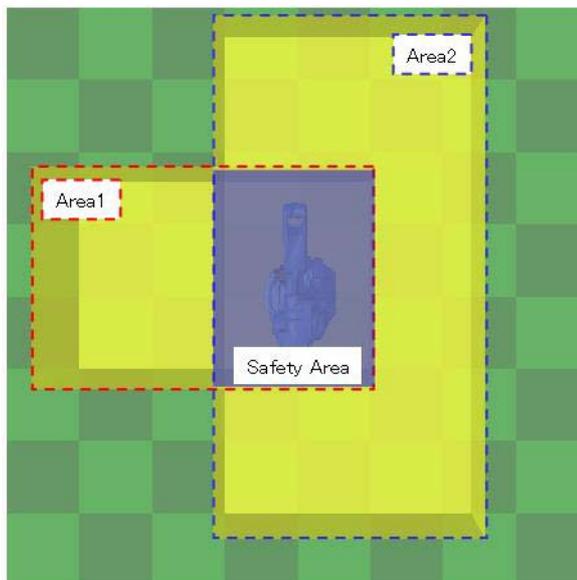

Inside the monitoring area + Outside the monitoring area

Fig. 4-23: Simultaneous Monitoring: Multiple Areas (Inside the Monitoring Area + Outside the Monitoring Area)

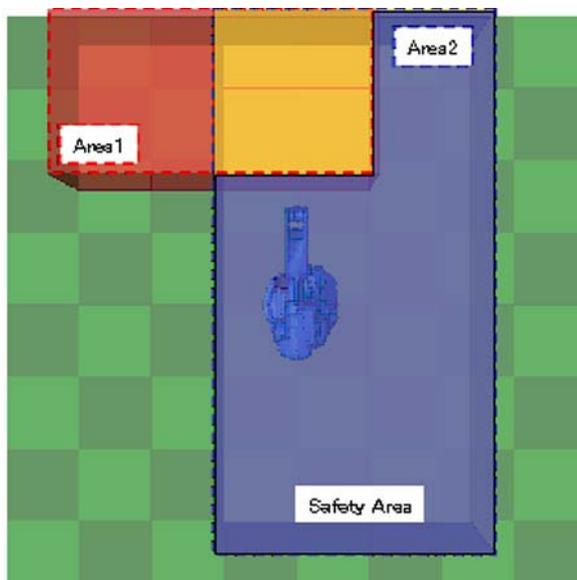

4.3.7 Safety Range and Manipulator Position

On the operation area monitor window, the specified safety range and the manipulator's present position can be roughly depicted on the programming pendant screen so that their position relation can be confirmed.

Follow the procedures below to open the operation area monitor window.

NOTE

The data to which {WRITE} button is not yet pressed would not be reflected on the OPERATION AREA MONITOR window in case this window is opened while the robot range limit condition file is being edited.

Be sure to complete the editing operation before opening the window.


SUPPLEMENT

The operation area can be displayed on the 3D graphic display window. For further settings, refer to "YRC1000 GENERAL OPERATOR'S MANUAL (RE-CSO-A051) 6.19.1 3D Graphic Display Function".

1. Select {SAFETY FUNC.} under the main menu.



2. Select {OPERATION AREA MONITOR} under the sub menu.
 - The OPERATION AREA MONITOR window appears.

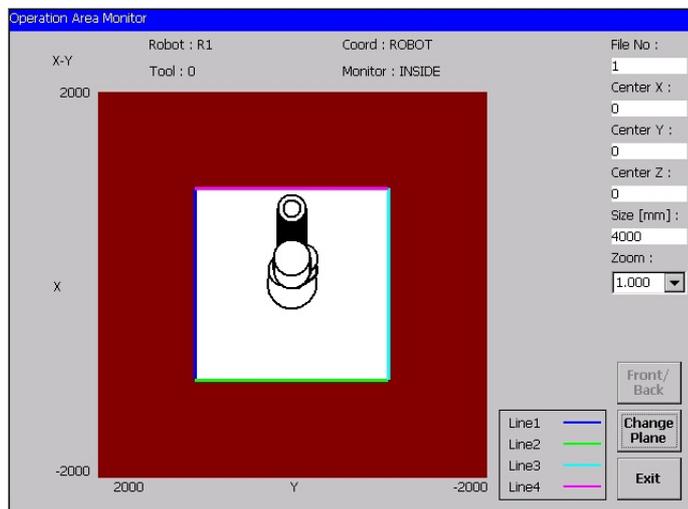

- 4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

<Details of the Window>

A. Plane X-Y, Y-Z, X-Z

The plane shown on the window now.

The manipulator and its tool are depicted in the approximate model shape specified set to the robot parameter and to the tool interference file.

When the manipulator is floor-mounted type, each figure indicates as follows;

X-Y: top view of the manipulator

Y-Z: back side view of the manipulator

X-Z: left side view of the manipulator

B. ROBOT

The number of the manipulator is indicated.

C. TOOL

The tool number specified to the manipulator shown on the window is indicated.

D. COORDINATES

The coordinates of the safety area shown on the window is indicated.

Value	Description
Base	Base coordinates
Tool	Tool coordinates

E. Monitor

Monitoring method for the safety range shown on the window is indicated.

Value	Description
Inside	Perform the inside range monitoring
Outside	Perform the outside range monitoring
Plane (X-Y) Plane (Y-Z) Plane (X-Z)	Perform the plane interference monitoring

F. FILE No.

The number of condition file of the robot range limit function. Inputting value from 1 to 32 can switch the condition file.

G. Center X, Center Y, Center Z

Specifies the center point coordinates in the depictable range on the plane. When the plane X-Y is shown on the window, the manipulator is depicted on the plane with the center of the plane (X,Y) coordinates at its center. Unit: [mm].

H. Size

Length of one side of the depicting area is specified. Unit: [mm].

I. Zoom

Scale the indicated plane. Magnification can be selected among 0.125, 0.25, 0.5, 1, 2, 4 and 8.

When 2 is selected as its magnification, the scale of the apparent size of the plane becomes double and becomes half when 0.5 is selected.

In case the value of "CENTER" or "SIZE" is modified, the magnification at "ZOOM" returns to 1.

4 Details of Functional Safety Function

4.3 Robot Range Limit Function

J. {Front/Back} button

It is indicated only when Y-X plane indication is set. The view of the plane changes from manipulator front view to back view each time this button is pressed.

K. {Left/Right} button

It is indicated only when Y-X plane indication is set. The view of the plane changes from manipulator right side view to left side view each time this button is pressed.

L. {CHANGE PLANE} button

The plane on the window alternates every time this button is pressed.

(X-Y → Y-Z → X-Z → X-Y)


However, this button is invalid when "Plane *-*" is specified for "Monitor" because the plane view is fixed.

M. {Exit} button

Closes the operation area monitor window.

<Details of the Plane on the Window>

- Example of X-Y plane (Indication of Y-Z and X-Z are also the same when monitoring the plane.)

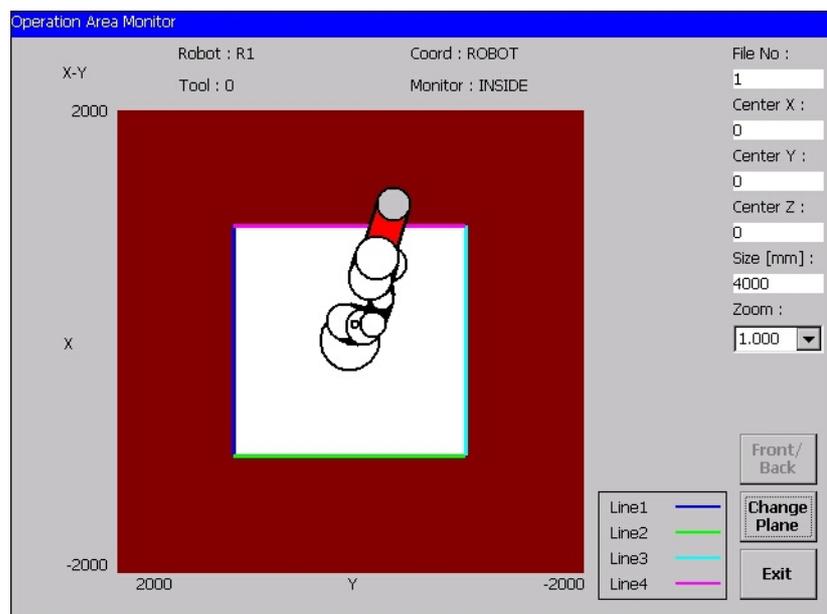

On the X-Y plane, the safety range is shown as the white area and not safety area is shown as brown area. The borders between the areas are indicated in colored lines and this lines are regarded as the wall.

The manipulator model and the tool model:


- contacting with the wall are indicated in red.
- inside the safety area are indicated in white.
- inside the not safety area are indicated in gray color.

The plane defined as Z upper or Z lower on the X-Y plane are not indicated.

4 Details of Functional Safety Function

4.3 Robot Range Limit Function

○ Example of Y-Z and X-Z planes

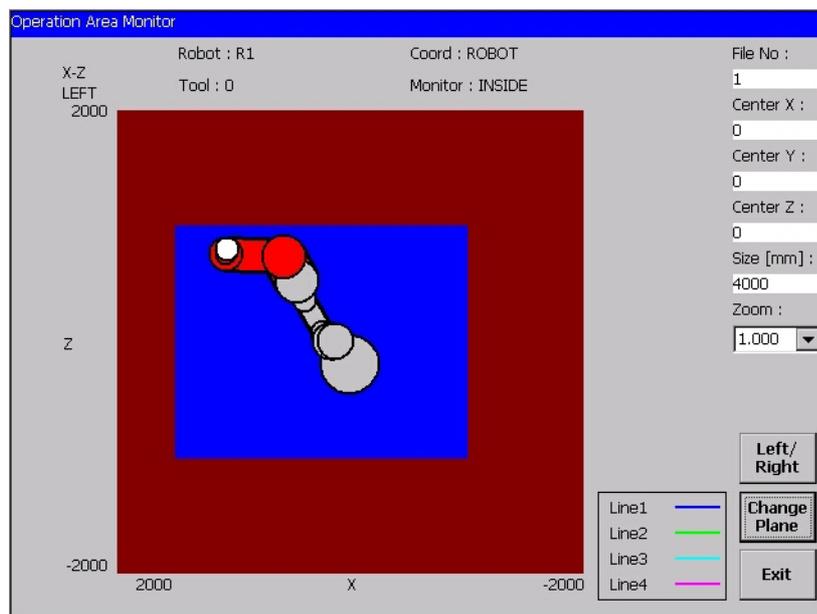

Each Y-Z and X-Z plane indicates the side of the safety area. On the Y-Z and X-Z planes, only the “wall” looked in the short from the view point is indicated.

The manipulator model and the tool model:

- seen opposite side of the “wall” are indicated in gray color.
- seen in front of the “wall” are indicated in white.
- contacting to the “wall” are indicated in red.

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function


4.3.8 Proximity Warning Buzzer Setting

A warning buzzer sounds and a message “Approaching the non safety area” when the manipulator approaches a certain distance to the boundary of the non safety area. The distance object of detection can be modified on the approach warning buzzer window. The default distance is set to 50 [mm].


Also, the approaching status can be output as a user output signal. (The signal is turned ON when the manipulator is detected to be in the specified distance.) This output can be also specified on the approach warning buzzer window. This is not set in the default settings (signal is not output).

Follow the procedures below for opening the approach warning buzzer window.

1. Set the security mode to safety mode and then, select {SAFETY FUNC.} under the main menu.

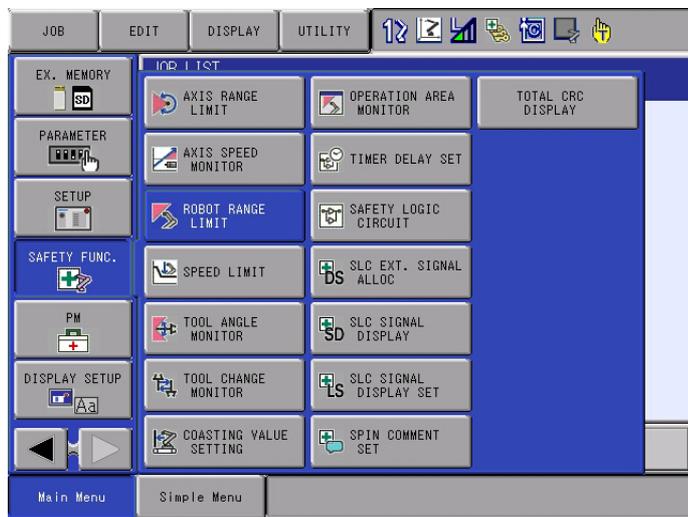


2. Select {ROBOT RANGE LIMIT} in the sub menu.

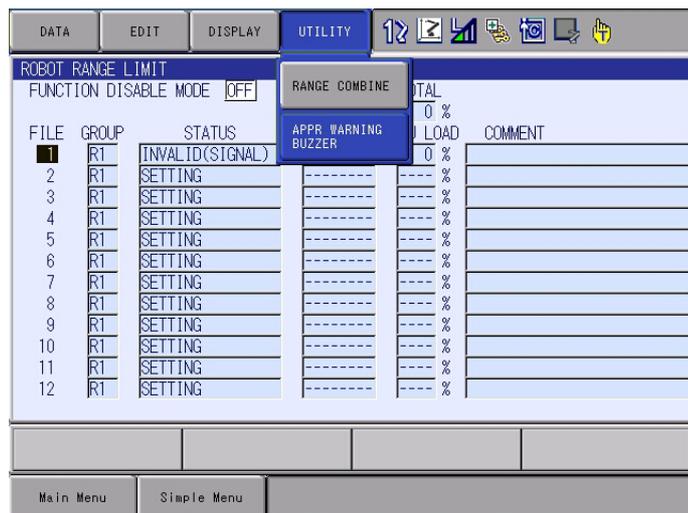

- 4 Details of Functional Safety Function
- 4.3 Robot Range Limit Function

3. Select {UTILITY} → {APPR WARNING BUZZER}.

- The APPROACH WARNING BUZZAR window appears.

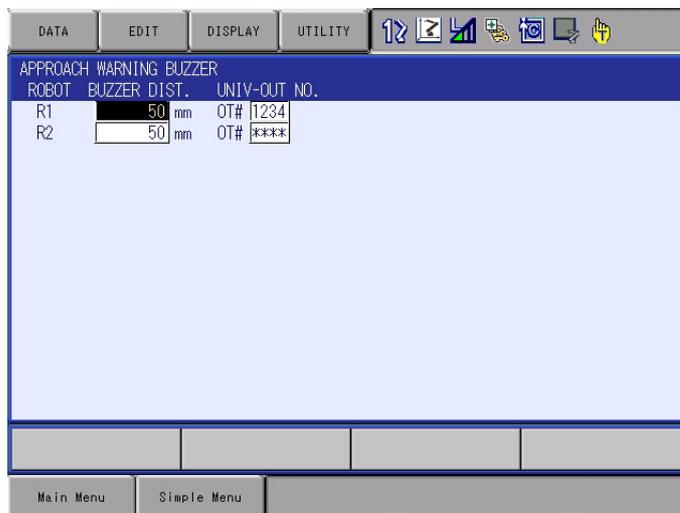

<Details of the Window>

1. BUZZER DIST.

Specify a manipulator approaching distance to sound a buzzer.

Unit: [mm]

2. UNIV-OUT NO.

Specify an user output signal number for outputting the status of detecting the approach. When "0" is set, "****" is displayed and no signal is output.

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

4.3.9 Combining Function of Multiple Monitoring Areas


This function creates a new monitoring areas by combining two already-specified monitoring areas.

Follow the procedures below for this operation.

1. Set the security mode to safety mode, and then select {SAFETY FUNC.} under the main menu.




2. Select {ROBOT RANGE LIMIT} in the sub menu.

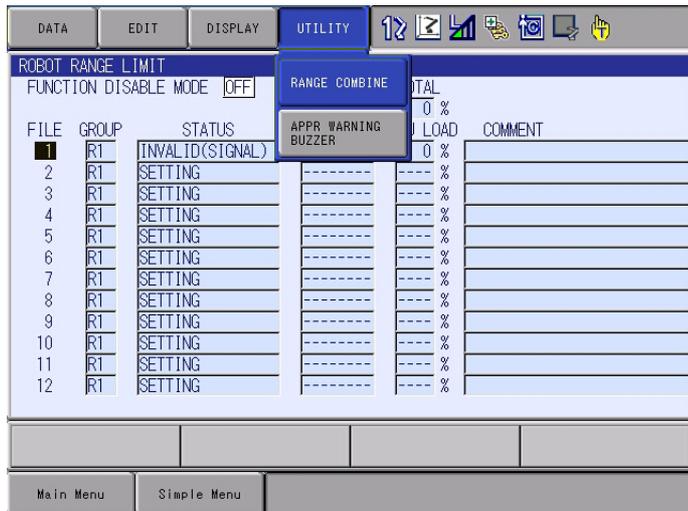

4 Details of Functional Safety Function
 4.3 Robot Range Limit Function

3. Select {UTILITY} → {RANGE COMBINATION}.

– The RANGE COMBINATION window appears.

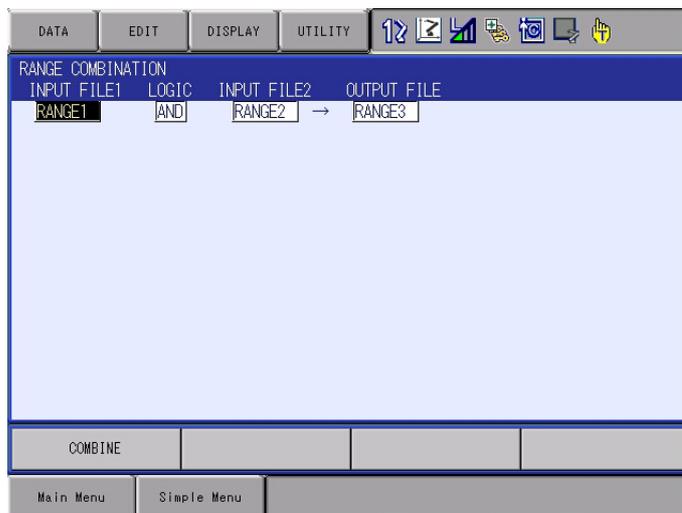

<Details of the Window>

1. INPUT FILE1, INPUT FILE2

Specify the file number of the range to combine.

Value	Description
Range 1 to 32	Select the number of the range to be input from 1 to 32.

2. LOGIC


Logic for combining the areas.

Value	Description
AND	Combine the selected two areas with the logic of “AND”.
OR	Combine the selected two areas with the logic of “OR”.

○ **Combination with “AND”**

The overlapped area by the combination of two safety areas is created as a new monitoring area.


Fig. 4-24: Image: Combined Area with “AND”

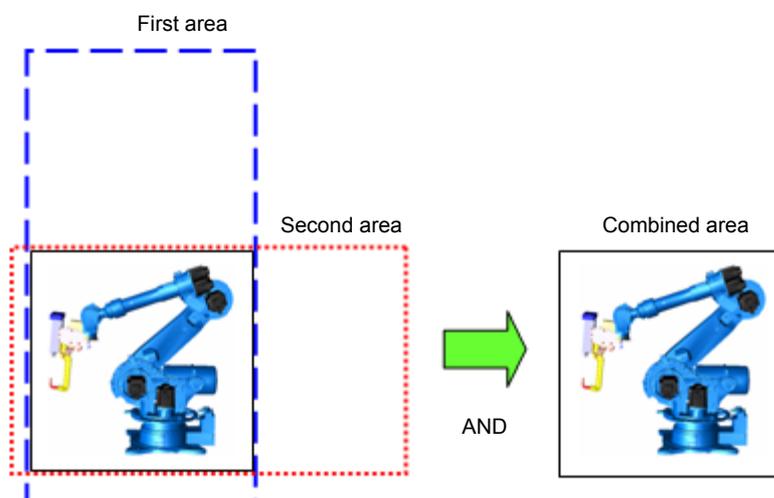

○ Combination with “OR”

The whole area consists of two safety areas is created as a new monitoring area.

Fig. 4-25: Image: Combined Area with “OR”

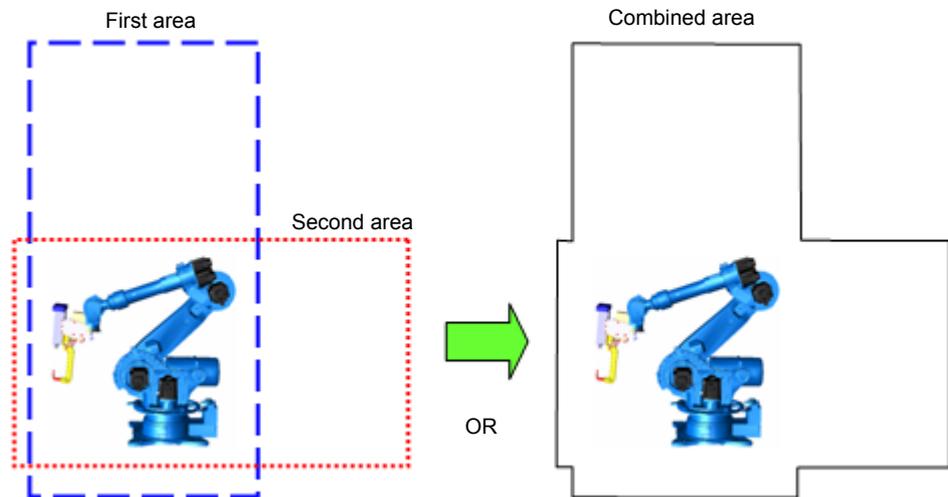

3. OUTPUT FILE

Specify the file number of the combined area.

For the file number to be output, choose a file to which the monitoring operation is set invalid because the file number is overwritten.

In case choosing a file to which the monitoring operation is set valid, an error occurs.

Value	Description
Range 1 to 32	Select the number of the range to be output from 1 to 32.

<Combining restrictions>

Combination of the areas are not executed when:

- The two areas are not connected
- Inside the range monitoring and the outside the range monitoring are selected.
- The robot coordinates and the base coordinates are selected.
- The height of each area is different and “OR” is selected as their logic.
- Same file number is specified at {INPUT FILE} and {OUTPUT FILE}
- The shape of the range specified to the input file is not convex.


4.4 Speed Limit Function

4.4.1 Outline

Speed limit function is a function which sets the upper limit of the robot group control point (TCP: Tool Center Point) speed and flange center point (FCP) speed, and then monitors whether the speed at each point does not exceed the already-fixed speed using a software.

When applying the function to a station group, the upper limit is set for the motor rotating speed.

Fig. 4-26: TCP (Tool Center Point) and FCP (Flange Center Point)

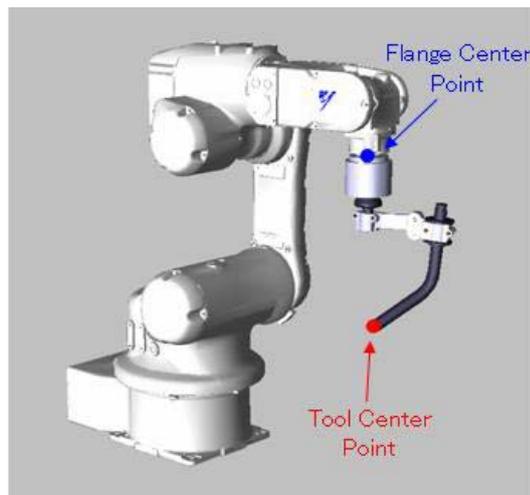

When “0” is set to speed limit, it is called stop position monitoring. The manipulator or the station group can be monitored by stop position monitoring.

For the manipulator group, the stop position monitoring is performed to TCP or FCP to confirm each point does not move.

For the station group, the stop position monitoring is performed to each axis position to confirm each axis does not move.


When the function file of the speed limit function is validated and in case the taught speed is faster than the limited speed, the speed is decreased to the limited speed, and the monitoring starts.

The time for decreasing the speed varies depending on the manipulator type or teaching conditions. For this reason, in the functional safety function, the period of time from validating the condition file to complete decreasing is regarded as the detection delay time and this can be set to the condition file.

4 Details of Functional Safety Function

4.4 Speed Limit Function

Fig. 4-27: Outline of Speed Limit Function

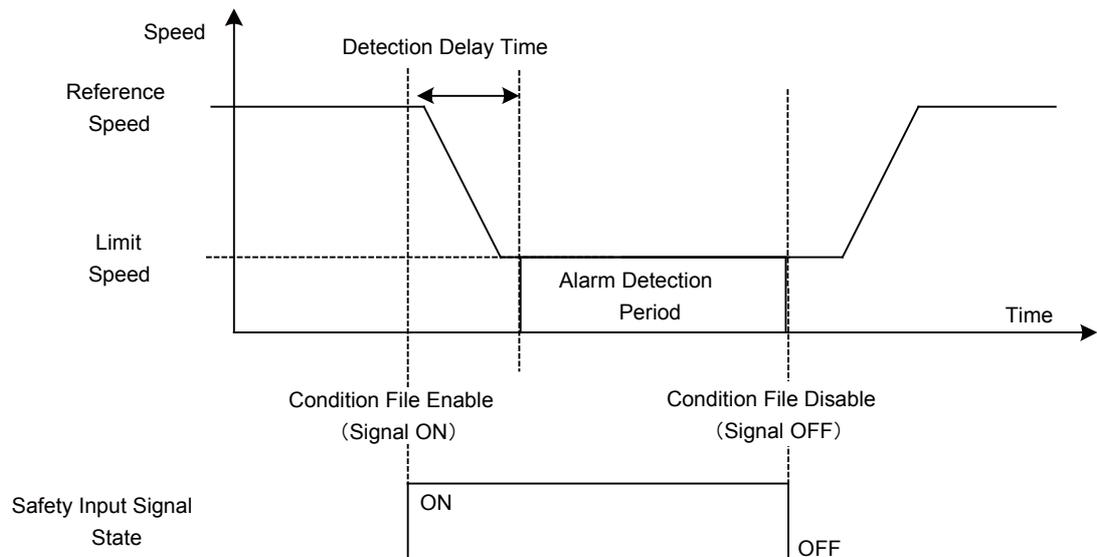

Thirty two files are prepared to this function and all axes motion range of any one control group is set to a file. When a control group is set to several files, the control group can be monitored by switching conditions.

In case an error is detected, the power supply to the motor is stopped using the machine safety. And the error is notified using an alarm.

Along with the above mentioned monitoring, when it is in the teaching mode, the speed is always monitored to be 250 mm/sec as the teach mode safety speed.

Follow the procedures below when starting the speed limit function.

1. Set the tool file.
(Before using this function, execute tool file setting by referring to *chapter 6.3 "Tool File Setting"* .)
2. Set the speed limit condition file.
3. Start the speed limit function.

4 Details of Functional Safety Function
 4.4 Speed Limit Function


4.4.2 Speed Limit Function Window

Followings are the setting procedures for the axis range limit function.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.



2. Select {SPEED LIMIT} in the sub menu.
 - The list of the speed limit status appears.

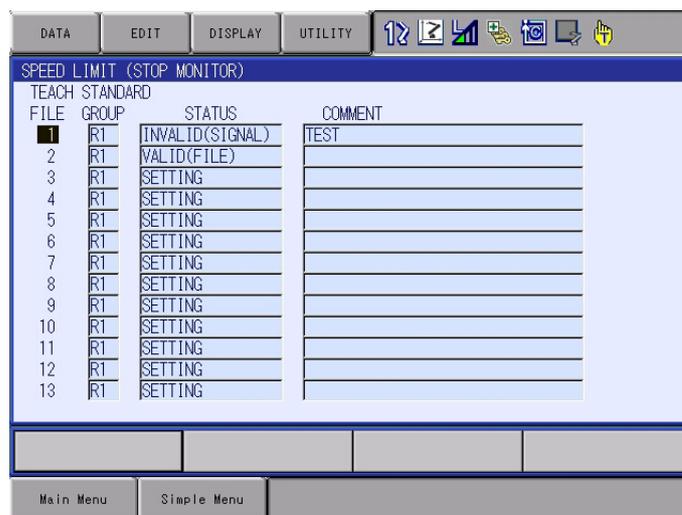

On the status list window, the 32 configuration files for the axis range limit function are listed so that their status can be confirmed. By scrolling down the window, all the list can be seen.

- 4 Details of Functional Safety Function
- 4.4 Speed Limit Function

<Details of the Window>

1. TEACH STANDARD

Move the cursor to this item and press [SELECT] to display the list of speed limit for the teach mode.

2. FILE

Displays the file number for each condition.

Move the cursor to a desired file number and press [SELECT] to display the settings window of the condition file of the file number.

3. GROUP

Displays the object group for the monitoring for the present condition file.

4. STATUS

Displays the present monitoring status of the condition file.

Value	Description
SETTING	The condition file is in the initial status or in the data setting status. Not monitoring yet.
VALID (FILE)	Data setting is completed and monitoring status of the file is in valid status.
INVALID (FILE)	Data setting is completed and monitoring status of the file is in invalid status.
VALID (SIGNAL)	Data setting is completed and monitoring status of the file is in valid status by the establishment of the safety signal condition.
INVALID (SIGNAL)	Data setting is completed and monitoring status of the file is in invalid status by the disestablishment of the safety signal condition.

5. COMMENT

Displays the input comment.


4 Details of Functional Safety Function
 4.4 Speed Limit Function

4.4.3 Speed Limit Function Condition File Setting Window


1. On the status list window, select a file number with the cursor, and then press [SELECT].
 - The individual setting window for the speed limit function opens.

The display on the window varies which group is to be monitored; robot group or station group.

<When the robot group is monitored>

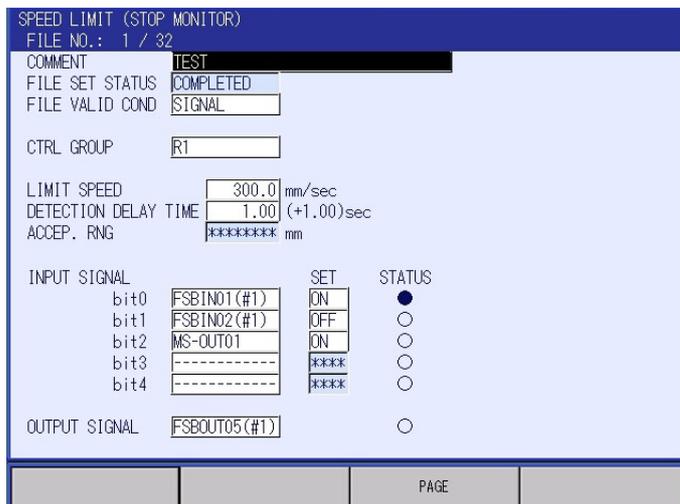

<When the station group is monitored>

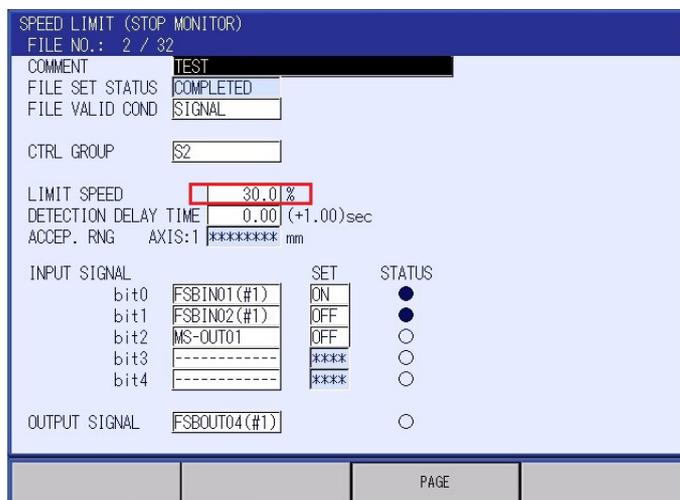

By scrolling down the window with the cursor, all the indication can be seen.

<Details of the Window>

In this section, only the items to the axis range limit are explained. For the items not mentioned here, please refer to *chapter 4.8 "Common Setting Item for the Condition File"*.

1. LIMIT SPEED

Specify the speed limit to the motion speed in the object group.

When the robot group is monitored, the limit speed is specified with the unit [mm/sec].

When the station group is monitored, the limit speed is specified with the unit [%]. The unit [%] is same as the set value of target axis single operation with MOVJ=xx%. For example, the target axis stops when 0% is specified and moves with maximum speed when 100% is specified.

During speed limit, all axis speeds in the group is controlled under specified limited value [%]. As for station group which has several axes, the fastest motion speed ([%]) axis in the group are limited in specified speed. Other axes speed in the same group are also limited in same ratio.

The speed limit function limits the rotation speed of the motor axis in the station group.

The speed 100% is equivalent to the maximum rotation speed of a motor (unit: rpm) specified in the maintenance mode. (For the maximum rotation speed of a motor, refer to "YRC1000 INSTRUCTIONS (RE-CTO-A221) 12.3 Addition of Base and Station Axes".)


The motion speed of the load axis is calculated with the rotation speed of the motor and reduction ratio in the mechanisms as follows.

$$\text{Rotation speed of the motor axis} \times \text{Reduction ratio} = \text{Rotation speed of the load axis}$$

Also, the load shape should be considered for the motion speed. In the case of the disc-like load applied around the load axis, the motion speed becomes faster as the load is applied in the outer periphery.



When the station group has two or more motor axes, the load may be moved by several motors. In this case, the load motion speed is determined by the composite speed of the motors. This speed can be faster than the single motor motion speed.

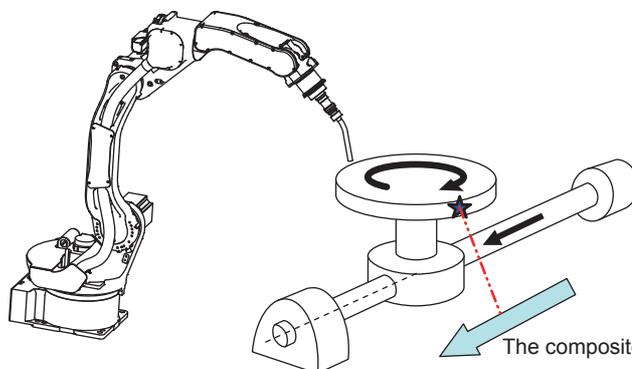

Before using this function, set the limit speed so that the target part in the load side becomes in the acceptable speed range and perform enough risk assessment.

4 Details of Functional Safety Function

4.4 Speed Limit Function



WARNING

In case the customer performs the setting for the station group, refer to “YRC1000 INSTRUCTIONS (RE-CTO-A221) 12.3.2 Station Axis Setting” and set the axis mechanical specification (the motor type, the maximum rotation speed, etc.) properly.

If using the manipulator in improper setting, the safety function does not operate normally and a serious accident may occur.



When limiting speed with low speed (0.1~5[mm/sec] or 0.1~5[%]), even during speed limit, F-SAFETY SPEED LIMIT ERROR alarms may occur due to tiny motions such as turning ON of the servo.

When the situation requires, take measures, for example, review limit speed or limit section, or use stop monitoring.

2. DETECTION DELAY TIME

Specify a time frame from validating the condition file to start the alarm detection.

Even if the set value is “0”, 1 [sec] is detected as the detection delay time since the default value is set to this item.

For this reason, when a value is specified to this item, 1 [sec] + the specified value is regarded as the detection delay time.

3. ACCEPTABLE RANGE

This item can be specified when “0” is set to “SPEED LIMIT”. Also, this item is used when the stop position monitoring is performed. Although the stop position monitoring monitors the difference between the stop position monitoring start position and the present position, to avoid any alarms from occurring due to tiny motions such as turning ON of the servo during the monitoring, “ACCEPTABLE RANGE” is specified.

An alarm occurs when the axis moves to exceed the position where the acceptable range is added to the stop position monitoring start position. When the robot group is monitored, it is measured in [mm].

and when the station group is monitored and the axis is a rotating axis, it is measured in [deg], and is [mm] when the axis is a linear-motion axis.

4 Details of Functional Safety Function

4.4 Speed Limit Function

4.4.4 Starting the Speed Limit

Specify the speed limit function and press {WRITE} button, the speed limit function becomes valid.

4.4.5 Speed Limit in Teach Mode

While the teach mode is selected, to strictly observe the safety speed, the speed monitoring of 250 [mm/sec] is performed in the functional safety function. Unlike other speed limit function, this monitoring function cannot be set invalid by the condition file setting.

However, only when the full speed test is input by the external signal and when the manual brake is released, this monitoring function can be set invalid and the speed can be increased faster than 250 [mm/sec] even during the teach mode.

For the full speed test, refer to “YRC1000 INSTRUCTIONS (RE-CTO-A221) 8.26 Safety Logic Circuit”.

For releasing the manual brake function, refer to “YRC1000 OPTIONS INSTRUCTINS FOR MANUAL BRAKE RELEASE FUNCTION (HW1483370)”.



When using the full speed test or manual brake release functions, possible risks attributed to the speed limit release should be sufficiently considered (risk assessment) before operating the manipulator.

The condition file setting window for the speed limit function in the teaching mode opens by the following procedures.


1. Set the security mode to safety mode, and then select {SAFETY FUNC.} under the main menu.



4 Details of Functional Safety Function

4.4 Speed Limit Function

2. Select {SPEED LIMIT} in the sub menu.

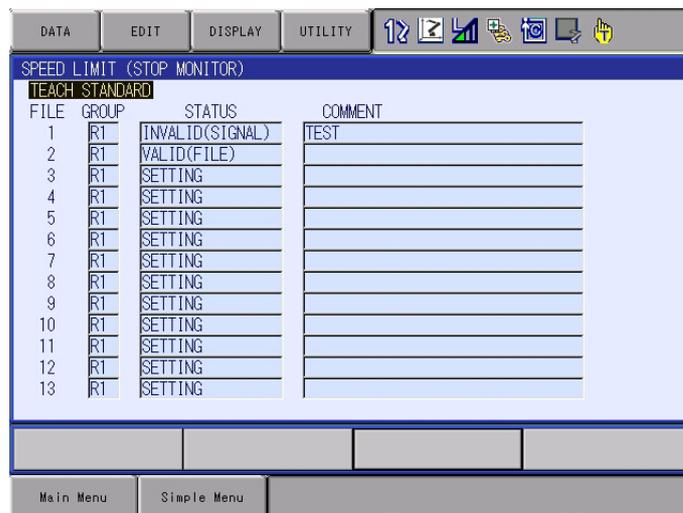

3. Select {TEACH STANDARD}.

– A list of condition file of the teach mode speed limit appears.



<Details of the Window>

1. LIMIT SPEED

It is fixed to 250 [mm/sec] and not modified.

2. DETECTION DELAY TIME

Specify a time frame from validating the condition file to start the alarm detection. It is set as the time for decreasing the speed slower than 250 [mm/sec] when the full speed test function is released. Even if the set value is "0", 1 [sec] is detected as the detection delay time since the default value is set to this item. For this reason, when a value is specified to this item, 1 [sec] + the specified value is regarded as the detection delay time.

4.5 Tool Angle Monitor Function

4.5.1 Outline


The tool angle monitor function is a function that monitors the angle of the tool by specifying the standard value of manipulator tool tilting angle and the limit of the tool angle, and then, using the software, monitors whether the standard value-centered tool angle does not exceed the specified limit angle. In case the tool file is not specified, it monitors the tilting angle of the flange.

To the object manipulator group, the tool tilting angle which is regarded as the reference for the monitoring is defined as "REF. ANGLE". At this time the tool posture is calculated on the basis of the base coordinates as its standard. While the condition file is validated, this function monitors whether the "REF. ANGLE"-centered angle of the tool does not exceed the specified limit of the tool angle.

In case an error is detected, the power supply to the motor is stopped using the machine safety.

Thirty two files are prepared to this function and all axes motion range of any one control group is set to a file. When a control group is set to several files, the control group can be monitored by switching conditions.

Fig. 4-28: TOOL ANGLE MONITOR (EX: Laser Welding Application)

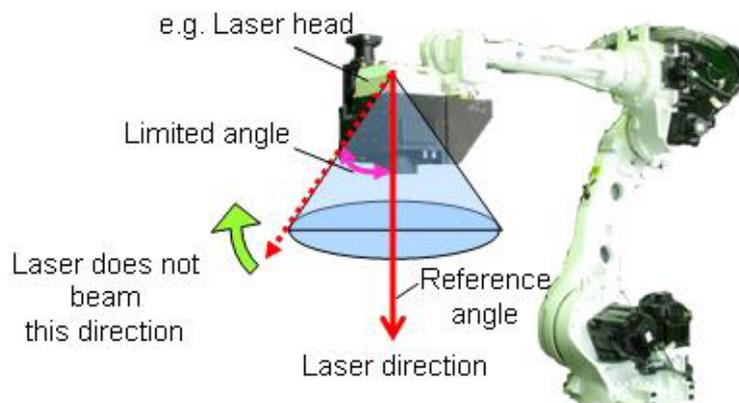

Follow the procedures below when starting the tool angle monitor function.


1. Set the tool file.
(Before using this function, execute tool file setting by referring to *chapter 6.3 "Tool File Setting"*.)
2. Set values to {REF. ANGLE} and {LIMIT ANGLE}.
3. Confirm the safety range.
4. Start the tool angle monitor function.

4 Details of Functional Safety Function
 4.5 Tool Angle Monitor Function

4.5.2 Tool Angle Monitor Function Window


Followings are the setting procedures for the tool angle monitor function.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.

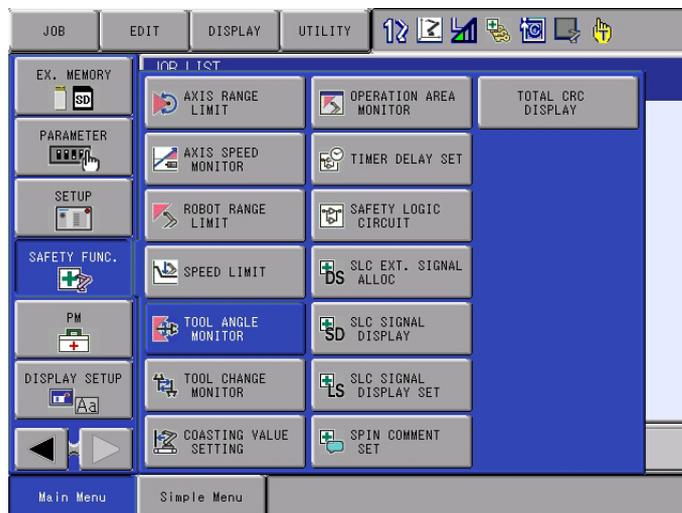

2. Select {TOOL ANGLE MONITOR} under the sub menu.

– The list of the tool angle monitor status appears.

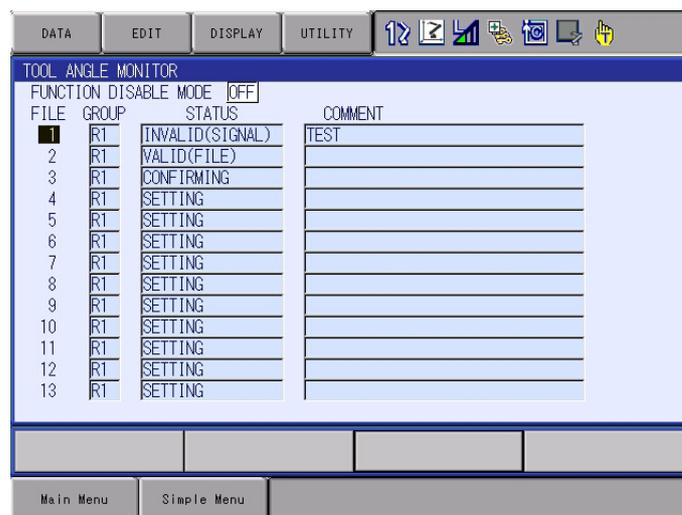

On the status list window, the 32 configuration files for the axis range limit function are arranged so that their status can be confirmed. By scrolling down the window, all the list can be seen.

- 4 Details of Functional Safety Function
- 4.5 Tool Angle Monitor Function

<Details of the Window>

1. FUNCTION DISABLE MODE

Specify ON/OFF of the tool angle monitor function. When ON is set to this item, this function can be temporarily invalidated.

Value	Description
OFF	The tool angle monitor function is valid.
ON	The tool angle monitor function is invalid. At the same time, playback, test-run, forward/backward operations are prohibited.

For the details, refer to *chapter 6.1 "Function Disable Mode Setting"*.

2. FILE

The number of the condition file is displayed.

Move the cursor to any number and press [SELECT]. The individual setting window for the selected condition file appears.

3. GROUP

The control group to be monitored specified by the condition file

4. STATUS

Monitoring status of the present condition file

Value	Description
SETTING	The condition file is in the initial status or in the data setting status. Not monitoring yet.
CONFIRMING	Confirming the area after the data is set. The status of the monitoring operation depends on the valid condition of the condition file.
VALID (FILE)	Data setting is completed and monitoring status of the file is in valid status.
INVALID (FILE)	Data setting is completed and monitoring status of the file is in invalid status.
VALID (SIGNAL)	Data setting is completed and monitoring status of the file is in valid status by the establishment of the safety input signal condition.
INVALID (SIGNAL)	Data setting is completed and monitoring status of the file is in invalid status by the disestablishment of the safety input signal condition.


5. COMMENT

The input comment is displayed.

4 Details of Functional Safety Function
 4.5 Tool Angle Monitor Function

4.5.3 Tool Angle Monitor Condition File Setting

1. On the status list window, select a file number with the cursor, and then press [SELECT].
 - A setting window for the selected condition file of the axis range monitor function appears.

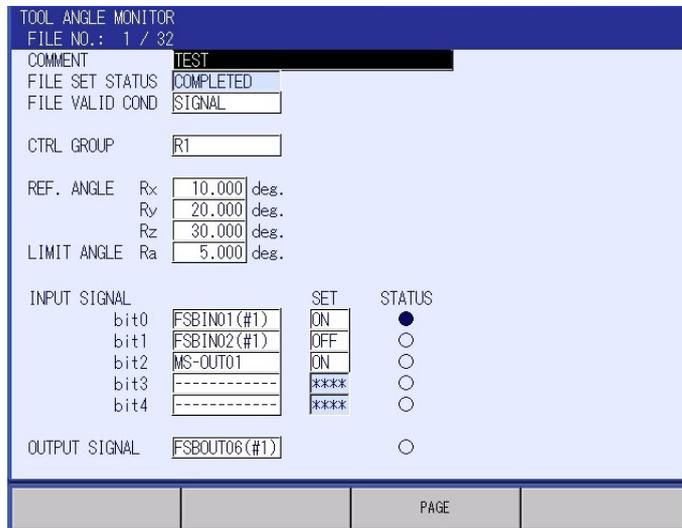

By scrolling down the window with the cursor, all the items can be seen.

<Details of the Window>


In this section, only the items inherent to the tool angle monitor function are explained. For the items not mentioned here, please refer to chapter 4.8 “Common Setting Item for the Condition File”.

1. REF. ANGLE

Input a tool angle as a reference value for the tool angle monitor function.

Follow the procedures below to confirm the present tool tilting angle.

1. Select {ROBOT} under the main menu.

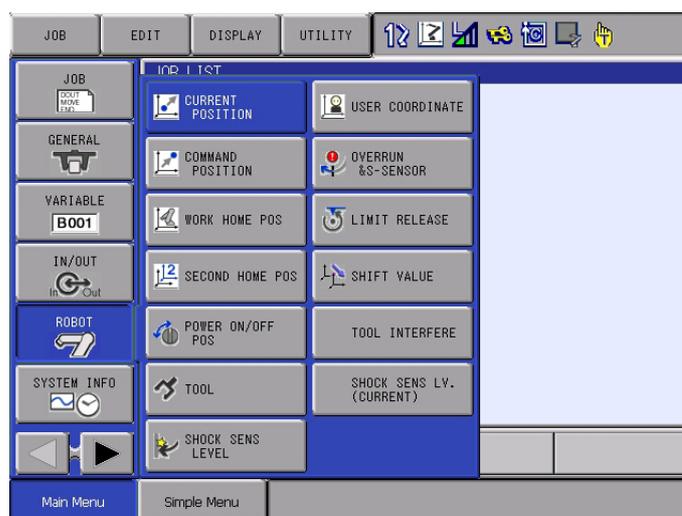


4 Details of Functional Safety Function


4.5 Tool Angle Monitor Function

2. Select {CURRENT POSITION} under the sub menu.

– The CURRENT POSITION window appears.

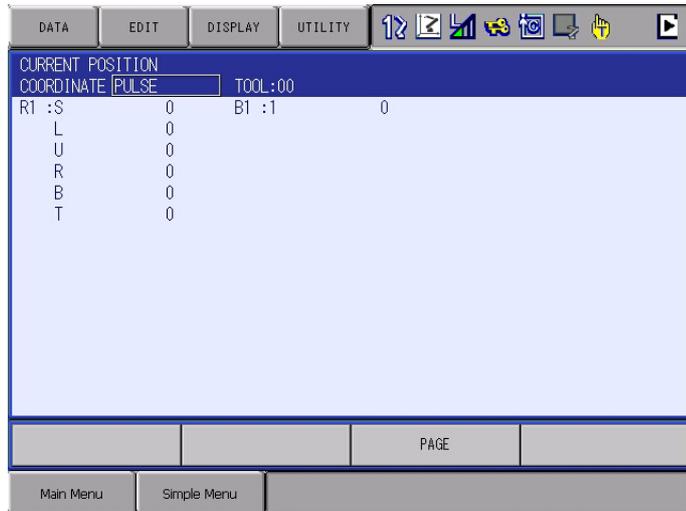

3. Select "BASE" in the selection box under {COORDINATE}.

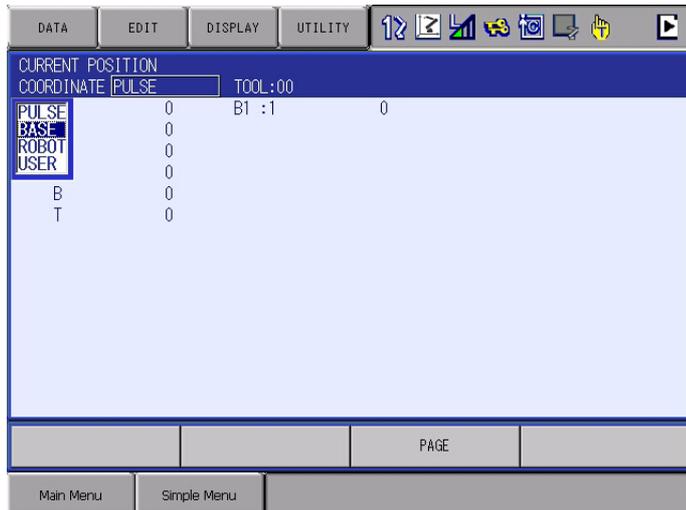

4. In the system where more than two tools are used, select tools when the monitoring is performed.

(For the details, refer to "YRC1000 GENERAL OPERATOR'S MANUAL (RE-CSO-A051) 2.3.4.1 Selecting Tool".

5. Move the manipulator to be in the reference posture.

4 Details of Functional Safety Function
 4.5 Tool Angle Monitor Function

6. Record Rx, Ry and Rz values.




7. Set the recorded Rx, Ry and Rz values to {REF. ANGLE} on the tool angle monitoring condition file window.

2. LIMIT ANGLE

Regard the REF.ANGLE-centered tool angle, which is the object of monitoring, comprises of an appraising vector of the reference angle and the present tool angle. The approaching vector is indicated in the following ways.


- When the tool file is specified:
The vector of Z_T direction in the tool coordinates.
- When the tool file is not specified:
The vector of Z_F direction in the flange coordinates.

Fig. 4-29: Approaching Vector

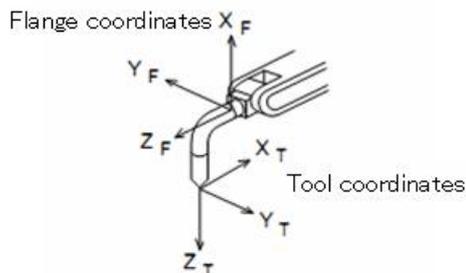

Input the upper limit of the angle θ_a which consists of the approaching vector of the reference angle over the approaching vector of the present position as the limit angle. The value from 0° to 90° can be input.

Fig. 4-30: Limit Angle of the Approaching Vector

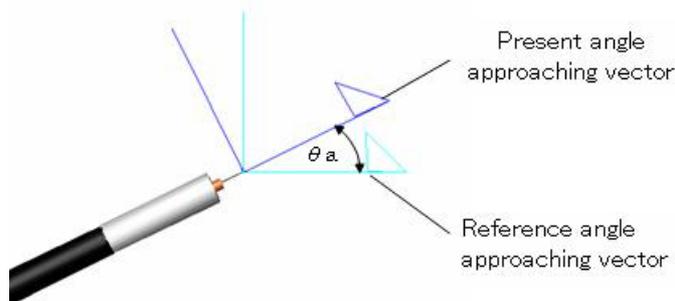

4 Details of Functional Safety Function


4.5 Tool Angle Monitor Function

4.5.4 Confirmation of Tool Angle Limit Monitor

After the tool angle monitor is specified and {READ} is pressed, it is necessary to confirm whether the monitoring is appropriately performed inside the specified angle.

“CONFIRMING” is indicated at “FILE SET STATUS” on the tool angle monitor window. Move the object manipulator to confirm whether it stops inside the specified angle.

Fig. 4-31: Window for in CONFIRMING Status

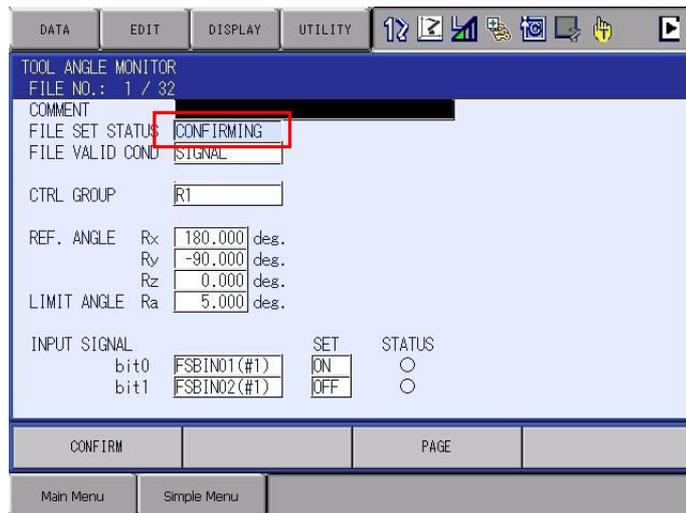

4	Details of Functional Safety Function
4.5	Tool Angle Monitor Function

4.5.5 Starting the Tool Angle Monitor

After the manipulator is confirmed that it moves to its angle limit, press {CONFIRMED} on the window. The robot range limit function becomes valid.

Execute the practical job movement to confirm the followings.

1. Confirmation of the limit angle in the play mode

There may be following causes, in case an alarm occurred during the play back operation of the operating job.

- Specified REF. ANGLE is not appropriate
- Specified LIMIT ANGLE is not appropriate
- Teaching operation is not appropriate

Re-set REF. ANGLE or LIMIT ANGLE, or correct the teaching operation.

In case “Alarm4792: F-SAFE TOOL ANGL MONITOR ERR” or “Alarm4793: TOOL ANGL MONITOR ERR” appeared

<Cause>

The manipulator's present posture exceeds the limit angle.

<Countermeasure>

Confirm the reference angle or the limit angle.

Modify the teaching point so that it moves inside the specified limited angle.

4	Details of Functional Safety Function
4.6	Tool Change Monitor Function

4.6 Tool Change Monitor Function

4.6.1 Outline

When performing monitoring functions of the safety such as the robot range limit function or the speed limit function in the functional safety function, appropriate tool information is required to be selected. In the system where the tool change is required, the function safety function changes the tool number in accordance with the specified value from the master CPU.

This tool change monitor function monitors whether the tool is appropriately changed. The monitoring is performed comparing the master CPU-specified tool number and the tool number which is specified to a safety signal -specified condition file. It is judged as an error when a manipulator operates when these numbers are not consistent.

Sixteen files are prepared to this function and one tool number is set to one file. This means that, for a robot group, up to 16 files can be set to monitor the tool change.

In case an error is detected, the power supply to the motor is stopped using the machine safety. And the error is notified using an alarm.



Tool change monitor function cannot be used concurrently with the tool number select function.

Follow the procedures below when starting the tool change monitor function.

1. Set the tool file.
(Before using this function, execute tool file setting by referring to *chapter 6.3 "Tool File Setting"* .)
2. Set the tool interference file.
(Before using this function, execute tool interference file setting by referring to *chapter 6.4 "Tool Interference File Setting"* .)
3. Set the tool change monitor function.
4. Confirm the tool change.
5. Start the tool change monitor function.

4 Details of Functional Safety Function
 4.6 Tool Change Monitor Function


4.6.2 Tool Change Monitor Function Window

Followings are the setting procedures for the tool angle monitor function.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.



2. Select {TOOL CHANGE MONITOR} under the sub menu.
 - The list of the tool change monitor status appears.

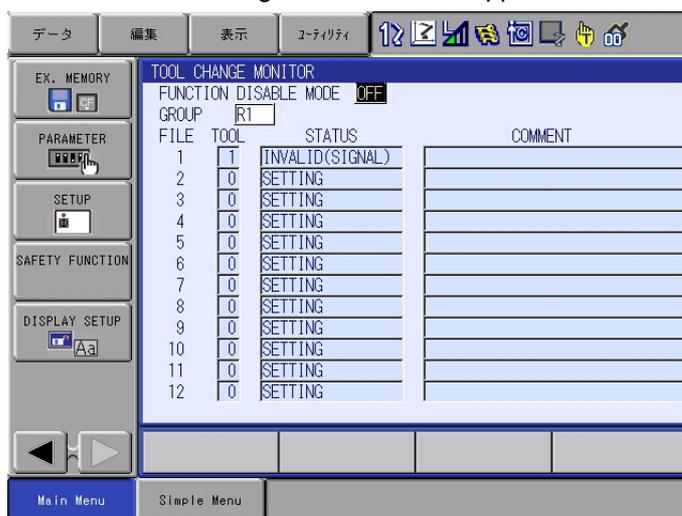

On the status list window, the 16 configuration files for the axis tool change monitor function are arranged so that their status can be confirmed. By scrolling down the window, all the list can be seen.

4 Details of Functional Safety Function

4.6 Tool Change Monitor Function

1. FUNCTION DISABLE MODE

Specify ON/OFF of the tool change monitor function. When ON is set to this item, this function can be temporarily invalidated.

Value	Description
OFF	The tool change monitor function is valid.
ON	The tool change monitor function is invalid. At the same time, playback, test-run, forward/backward operations are prohibited.

For the details, refer to *chapter 6.1 "Function Disable Mode Setting"*.

2. GROUP

The robot group to be specified by the condition file is selected from R1 to R8 (however, only the groups set to the YRC1000).

3. FILE

The number of the individual condition file is displayed.

A robot group object file selected at "GROUP" is displayed.

Move the cursor to any number and press [SELECT]. The individual setting window for the selected condition file appears.

4. STATUS

Monitoring status of the present condition file

Value	Description
SETTING	The condition file is in the initial status or in the data setting status. Not monitoring yet.
CONFIRMING	Confirming the area after the data is set. The status of the monitoring operation depends on the valid condition of the condition file.
VALID (FILE)	Data setting is completed and monitoring status of the file is in valid status.
INVALID (FILE)	Data setting is completed and monitoring status of the file is in invalid status.
VALID (SIGNAL)	Data setting is completed and monitoring status of the file is in valid status by the establishment of the safety input signal condition.
INVALID (SIGNAL)	Data setting is completed and monitoring status of the file is in invalid status by the disestablishment of the safety input signal condition.

5. COMMENT

The comment input is displayed.

4 Details of Functional Safety Function

4.6 Tool Change Monitor Function

4.6.3 Tool Change Monitor Condition File Setting

On the status list window, select a file number with the cursor, and then press [SELECT].

A setting window for the selected condition file of the AXIS CHANGE MONITOR function appears.

TOOL CHANGE MONITOR			
FILE NO.: 1 / 16 GROUP : R1			
COMMENT	TEST		
FILE SET STATUS	COMPLETED		
FILE VALID COND	SIGNAL		
ALARM	ON(MOVE STOP)		
CTRL GROUP	R1		
TOOL NO.	2		
DETECTION DELAY TIME	1.00 sec		
INPUT SIGNAL	SET	STATUS	
bit0	FSBIN01(#1)	ON	<input checked="" type="radio"/>
bit1	FSBIN02(#1)	OFF	<input type="radio"/>
bit2	MS-OUT01	ON	<input type="radio"/>
bit3	-----	****	<input type="radio"/>
OUTPUT SIGNAL	FSBOUT07(#1) <input type="radio"/>		
PAGE			

By scrolling down the window with the cursor, all the items can be seen.

<Details of the Window>

In this section, only the items inherent to tool change monitor function are explained. For the items not mentioned here, please refer to *chapter 4.8 "Common Setting Item for the Condition File"*.

1. TOOL NO.

For confirming the tool number, specify a tool number which is specified to the functional safety function, when this file is selected.

2. DETECTION DELAY TIME

Specify a time frame from validating the condition file to start the alarm detection. It is detected as an error in case a tool change monitor condition file is selected and one of the following conditions are met after the time specified in {DETECTION DELAY TIME} is passed.

The followings are the error judging conditions in the tool change monitoring function.

- All the condition files for one robot group are invalidated.
- Two or more condition files for one robot group are simultaneously validated.
- The manipulator is in operation while a tool number specifying value and the tool number specifying value of the validated condition files are not consistent.

4.6.4 Confirmation of Tool Change Monitor

After the setting of the condition file and {READ} is pressed, it is necessary to confirm whether the monitoring is appropriately performed by the specified tool.

“CONFIRM” is indicated on the tool change window. “VALID” the file and change the tool, and then move the object manipulator to confirm whether a alarm occurs.



NOTE

An alarm for the tool change monitor function occurs only when the manipulator is in motion. (If it is in stop status, monitoring is still performed but the alarm does not occur.)

However, once an alarm occurs, it keeps sounding unless the problem is solved even the manipulator stops.



CAUTION

- Make sure that the robot is in a stopped state when performing a tool-file change.
If the tool-file change is performed during a robot program operation, the following may result:
 - Danger caused by selecting an incorrect tool
 - The manipulator’s motion speed exceeding the speed limit if the types of the tools before and after the change are significantly different

4.6.5 Starting the Tool Change Monitor

After the tool change is confirmed, press {CONFIRMED} on the window. The tool change monitor function becomes valid.



CAUTION

- By a tool change, an monitoring error may be detected in the robot range limit function due to the change of tool model or TCP. For this reason, when changing a tool, specify appropriate range of motions for the object tool.

- 4 Details of Functional Safety Function
- 4.6 Tool Change Monitor Function

4.6.6 When Using the Tool Change Monitor Function

When using the tool change monitor function, this function should be validated in the maintenance mode.


Follow the procedures below.

1. Select {SYSTEM} under the main menu, and then select {SECURITY} to change the security mode to the safety mode.




2. Select {SYSTEM} under the main menu, and then select {SET} under the sub menu.

– The SETUP window appears.

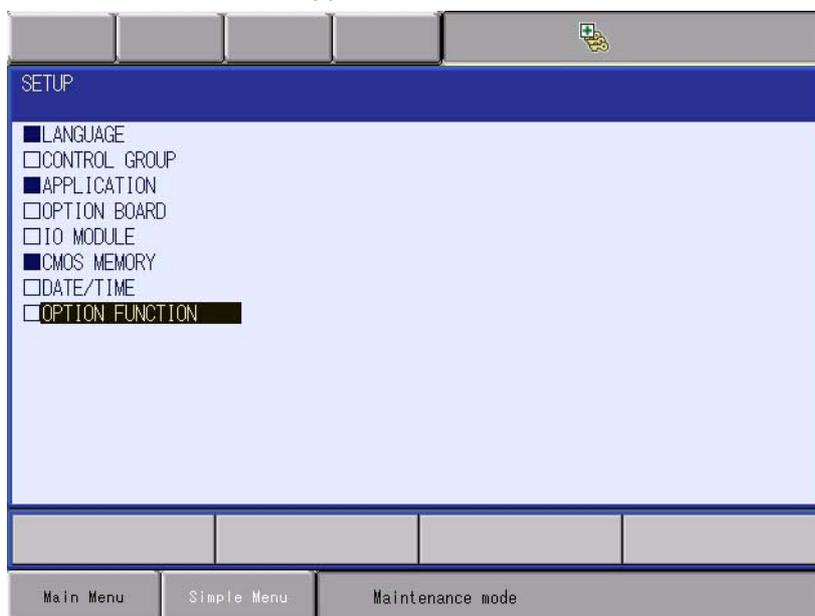


4 Details of Functional Safety Function
 4.6 Tool Change Monitor Function

3. Select "OPTION FUNCTION", "Functional safety" and "DETAIL".
 – The Functional safety window appears.

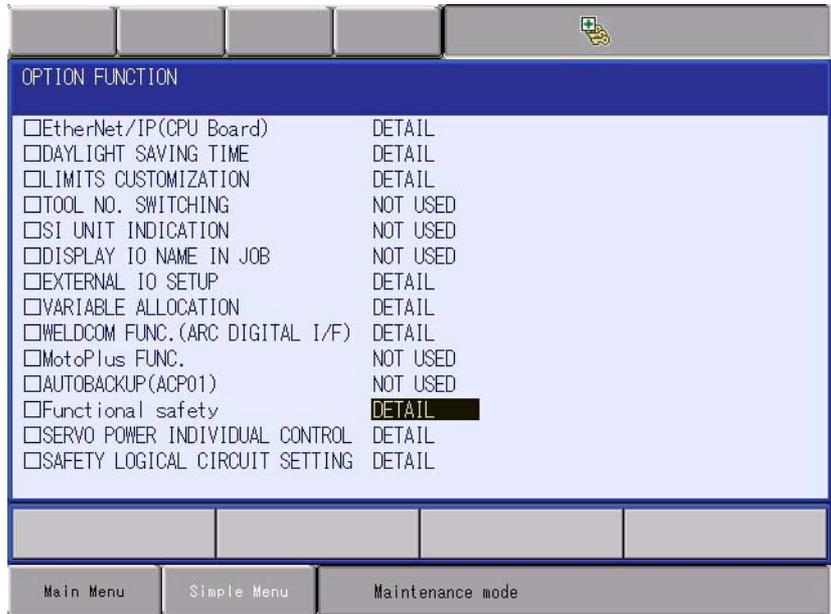


4. Change to set {USED (CHANGE MONITOR)} for the item at {Tool change monitor/Tool number select}.

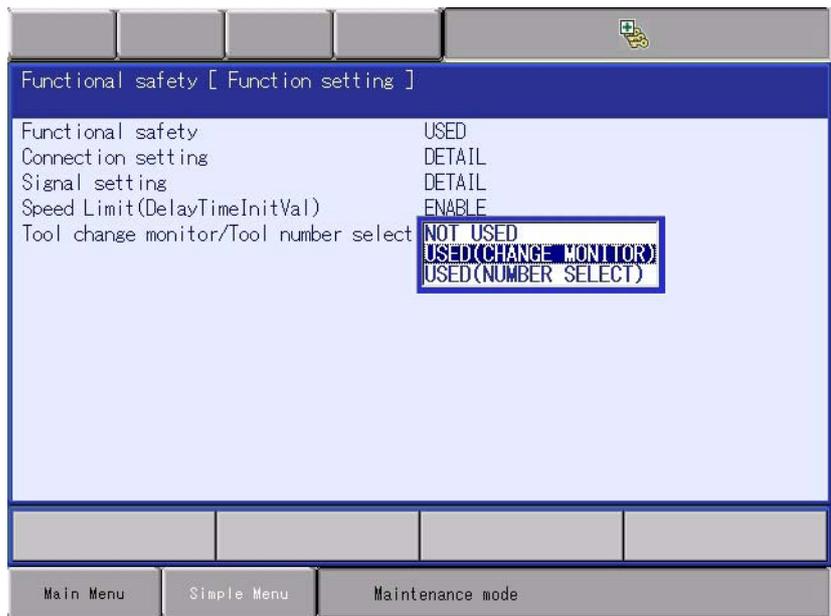


4 Details of Functional Safety Function
 4.6 Tool Change Monitor Function

5. Press [ENTER], and a dialog box asking “Modify?” appears.
- Select “YES”.
 - After changing, a dialog box asking “Initialize related files?” may appear.
 - If the setting related to functional safety has already specified, select “NO”, if not, select “YES”.

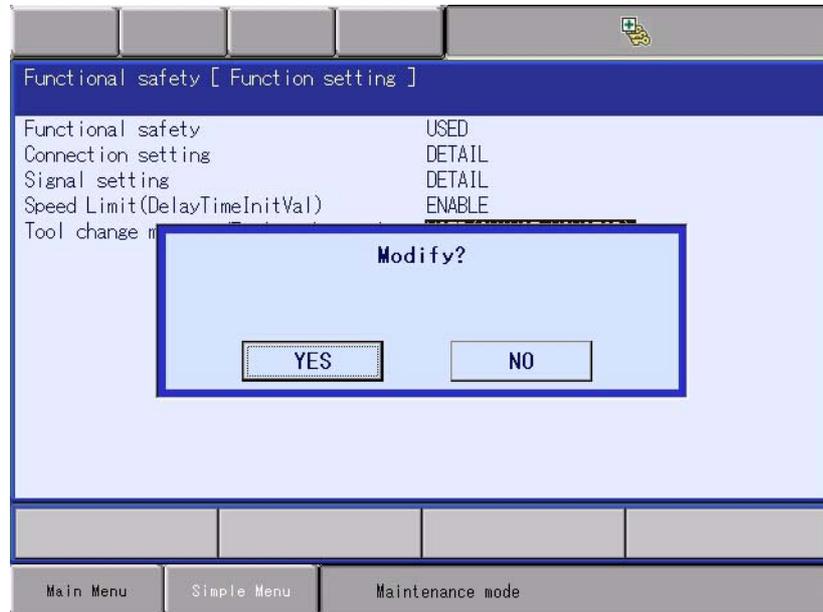


- Select “YES”, and a dialog box asking “Initialize related files?” appears.
- If the setting related to functional safety has already specified, select “NO”. (When “YES” is selected, the setting related to functional safety will be initialized.)

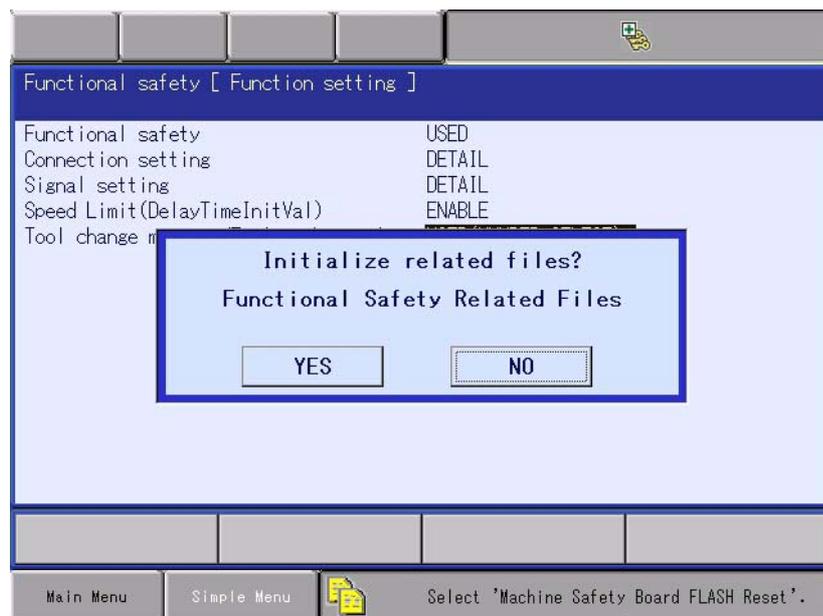


4 Details of Functional Safety Function
 4.6 Tool Change Monitor Function

6. Select {FILE} under the main menu, and then select {INITIALIZE} under the sub menu.
 - The INITIALIZE window appears.

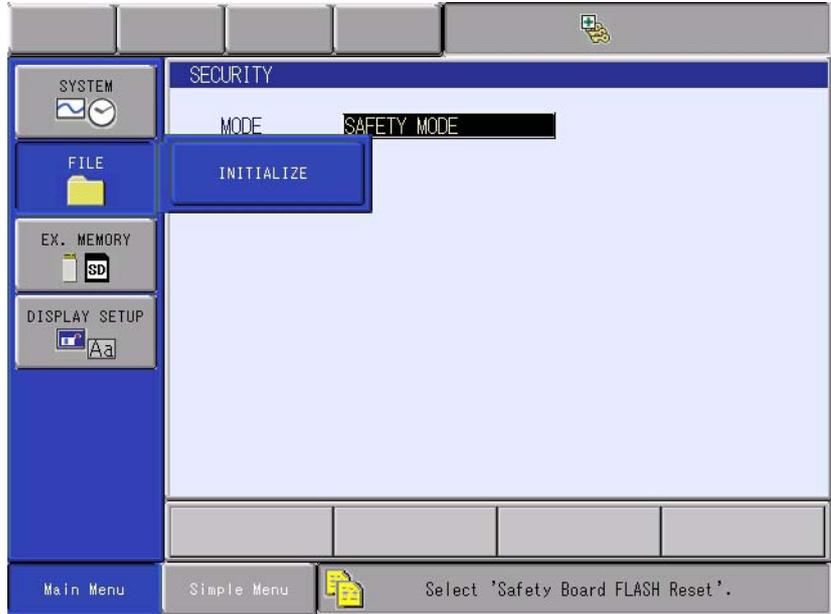


7. Move the cursor and select "Safety Board FLASH Reset" on the window.

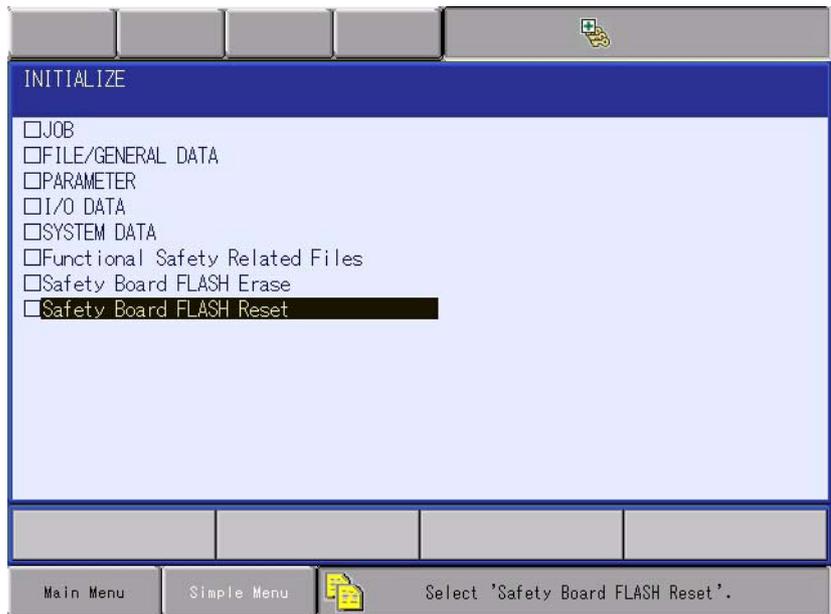

4 Details of Functional Safety Function
 4.6 Tool Change Monitor Function

8. Select "YES" when a window shown below appeared.
- Data of the safety circuit board is reset. When resetting is completed, a beep sounds in a few seconds.

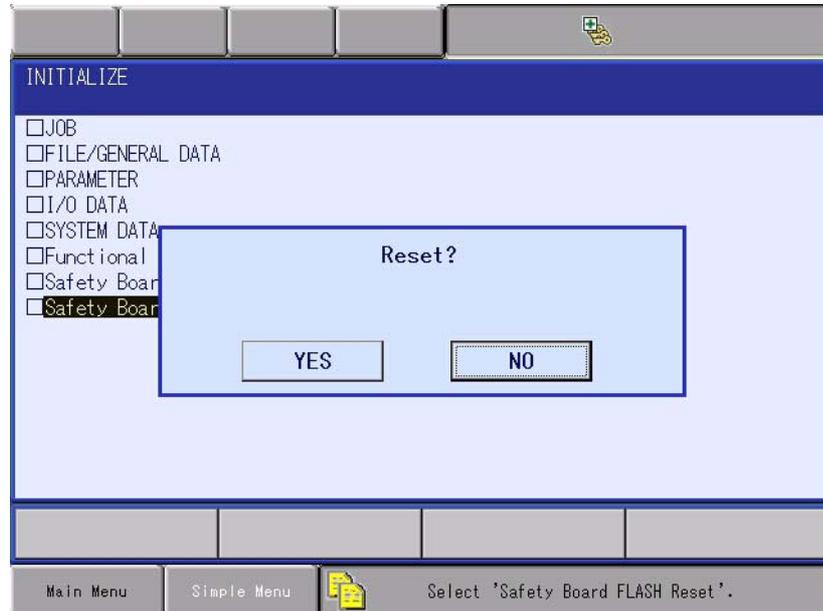

9. Turn ON the controller power supply.

The following alarm may occur at the first start-up and operation of the manipulator after validating the tool change monitor function because all the tool change files are not specified yet.

“Alarm 4789: F-SAFE TOOL CHANGE MONITOR ERR”

Perform the tool change condition file settings, validate the tool change monitoring function and reset the alarm.



CAUTION

- The tool change monitoring function is set to invalid at the default status. For the appropriate safety monitoring, be sure to validate the function and perform the monitoring. This monitoring should be set valid to monitor that the tool is not changed even if the tool file is not changed.

4	Details of Functional Safety Function
4.7	Tool Number Selection Function

4.7 Tool Number Selection Function

4.7.1 Outline

When performing monitoring functions of the safety such as the robot range limit function or the speed limit function in the functional safety function, appropriate tool information is required to be selected. This tool number selection function selects the tool number used in functional safety based on the safety signal.



Tool number selection function cannot be used concurrently with the tool change monitor function.

Functional safety uses the tool number set in the condition file specified by the safety signal. It is judged as an error when a manipulator operates over a certain distance when the tool number is not selected or multiple tool numbers are selected.

Sixteen files are prepared to this function and one tool number is set to one file. This means that, for a robot group, up to sixteen files can be set to select the tool number. In case an error is detected, the power supply to the motor is stopped using the machine safety board. And the error is notified using an alarm.



To maintain Safety Category 3 and PL-d in the safety monitoring in the functional safety function, the safety signal to be used must meet the requirements of Safety Level SIL2 and PL-d.



CAUTION

- Connect the safety signal used to select the tool number so that the tool connected to the manipulator can be specified by the pattern of the safety signal. When an alarm occurs, confirm the connection of the safety signal.
- Also, consider sufficiently that the correct tool number is selected based on the connection of the safety signal, and the robot range limit function and the speed limit function operate properly.

If an incorrect tool number is selected, the safety of the robot range limit function and the speed limit function may be impaired.

4 Details of Functional Safety Function
4.7 Tool Number Selection Function

Follow the procedures below when setting the tool number selection.

- (1) Set the tool file.
(Before using this function, execute tool file setting to select by referring to *chapter 6.3 "Tool File Setting"*.)
↓
- (2) Set the tool interference file.
(The selected tool is necessary to perform the robot range limit function. Before using this function, execute tool interference file setting by referring to *chapter 6.4 "Tool Interference File Setting"*.)
↓
- (3) Set the tool number selection condition file.
↓
- (4) Confirm the tool number selection.
↓
- (5) Start the tool number selection.

4 Details of Functional Safety Function
 4.7 Tool Number Selection Function

4.7.2 Tool Number Selection Function Window


Followings are the setting procedures for the tool number selection function.

1. Change the mode to the security mode, and then press {SAFETY FUNC.} under the main menu.



2. Press {TOOL NUBMER SELECTION} in the sub menu.

– The list of the tool number selection status appears.

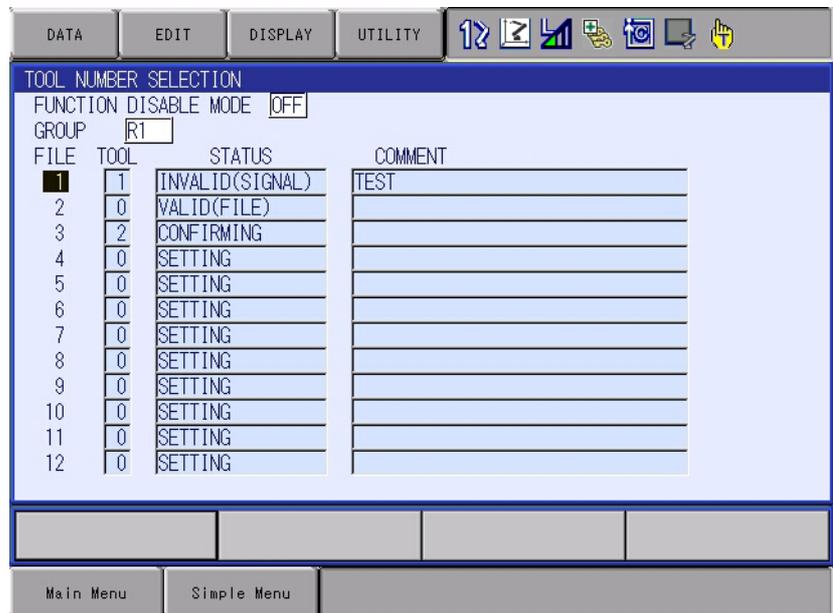

On the status list window, the sixteen setting files for the tool number selection function are arranged so that their status can be confirmed. By scrolling down the window, all the list can be seen.

4 Details of Functional Safety Function

4.7 Tool Number Selection Function

Followings are the details of the item on the window.

<Details of the Window>

1. {FUCTION DISABLE MODE}

Specify ON/OFF of the tool number selection function. When ON is set to this item, this function can be temporarily invalidated.

Value	Meaning
OFF	The tool number selection function is valid.
ON	The tool number selection function is invalid. At the same time, playback, test-run, forward/backward operations are prohibited.

For the details, refer to *chapter 6.1 "Function Disable Mode Setting"*.

2. {GROUP}

The robot group to be specified by the condition file is selected from R1to R8 (however, only the groups set to the YRC1000).

3. {FILE}

The number of the individual condition file is displayed. A robot group object file selected at {GROUP} is displayed. Move the cursor to any number and press [SELECT]. The individual setting window for the selected condition file appears.

4. {STATUS}

Monitoring status of the present condition file is indicated.

Value	Meaning
SETTING	The condition file is in the initial status or in the data setting status. The tool number is not selected yet.
CONFIRMING	Confirming the area after the data is set. The tool number to be selected depends on the valid condition of the condition file.
VALID (FILE)	Data setting is completed and the tool number selection by using the condition file is in valid status.
INVALID (FILE)	Data setting is completed and the tool number selection by using the condition file is in invalid status.
VALID (SIGNAL)	Data setting is completed and the tool number selection by using the condition file is in valid status by the establishment of the safety signal condition.
INVALID (SIGNAL)	Data setting is completed and the tool number selection by using the condition file is in invalid status by the disestablishment of the safety signal condition.

4 Details of Functional Safety Function

4.7 Tool Number Selection Function

4.7.3 Tool Number Selection Condition File Setting

- On the status list window, select a file number with the cursor, and then press [SELECT].
 - A setting window for the selected condition file of the tool number selection function appears.

By scrolling down the window with the cursor, items which are not displayed on the window can be seen.

<Details of the Window>

In this section, only the items inherent to the tool number selection function are explained. For the items not mentioned here, please refer to *chapter 4.8 "Common Setting Item for the Condition File"*.

1. {TOOL NO.}

Specify a tool number which is specified to the functional safety function, when this file is selected.

2. {DETECTION DELAY TIME}

Specify a time frame from validating the condition file to start the alarm detection. It is detected as an error in case a tool number selection condition file is selected and one of the following conditions are met after the time specified in {DETECTION DELAY TIME} is passed.

The followings are the error judging conditions in the tool number selection function.

- All the condition files for one robot group are invalidated.
- Two or more condition files for one robot group are simultaneously validated.

- 4 Details of Functional Safety Function
- 4.7 Tool Number Selection Function

4.7.4 Confirmation of Tool Number Selection

After the setting of the condition file and {WRITE} is pressed, it is necessary to confirm whether the tool is correctly selected. "CONFIRM" is indicated on the tool number selection window. "VALID" the file and move the object manipulator to confirm whether an alarm occurs.



An alarm for the tool number selection function occurs only when the manipulator is in motion. (If it is in stop status, the alarm does not occur.)
However, once an alarm occurs, it keeps sounding unless the problem is solved even the manipulator stops.



CAUTION

- Perform selecting the tool number while the manipulator is stop status or there may following dangers when it is performed while the manipulator is in operating status.
 - Wrong tool may be selected.
 - The manipulator motion speed exceeds the speed limit in case the tool before the change and after the change differs widely.

4.7.5 Starting the Tool Number Selection

After the tool number selection is confirmed, press {CONFIRMED} on the window. The tool number selection function becomes valid.



CAUTION

- By a tool number selection, a monitoring error may be detected in the robot range limit function due to the change of tool model or TCP.
For this reason, when selecting a tool, specify appropriate range of motions for the object tool.

4 Details of Functional Safety Function
4.7 Tool Number Selection Function

4.7.6 When Using the Tool Number Selection Function

When using the tool number selection function, this function should be validated in the maintenance mode.


Follow the procedures below.

1. Press {SYSTEM} under the main menu, and then press {SECURITY} to change the mode to the security mode.



2. Press {SYSTEM} under the main menu. And then, press {SET} in the sub menu.


– SETUP window appears.

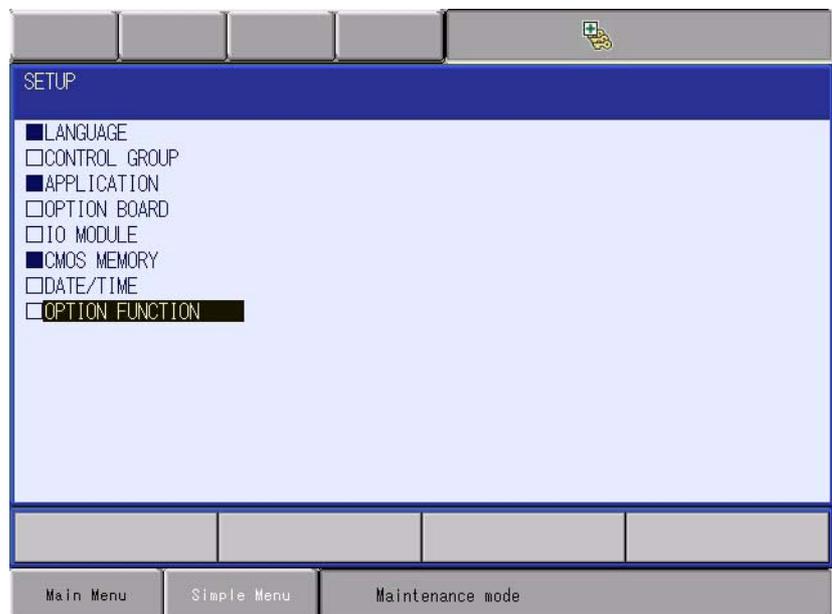


4 Details of Functional Safety Function
 4.7 Tool Number Selection Function

3. Select {OPTION FUNCTION}, {Functional safety} and “DETAIL”.

– Functional safety window appears.


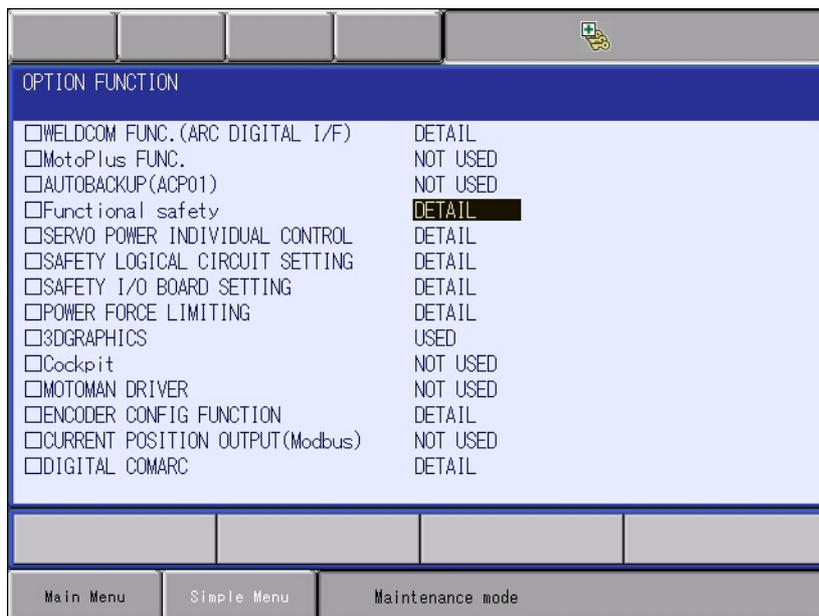


4. Change to set “USED (NUMBER SELECT)” for the item at {Tool change monitor/Tool number select}.

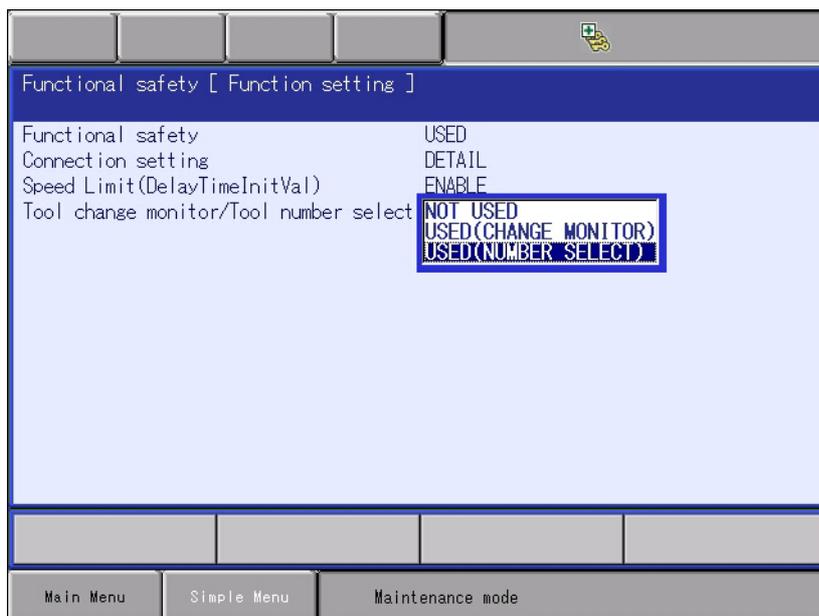

4 Details of Functional Safety Function
 4.7 Tool Number Selection Function

5. Press [ENTER], and a dialog box asking “Modify?” appears.
 - Select “YES”.
 - After changing, a dialog box asking “Initialize related files? Functional Safety Related Files” may appear.
 - If the setting related to functional safety has already specified, select “NO”, if not, select “YES”.

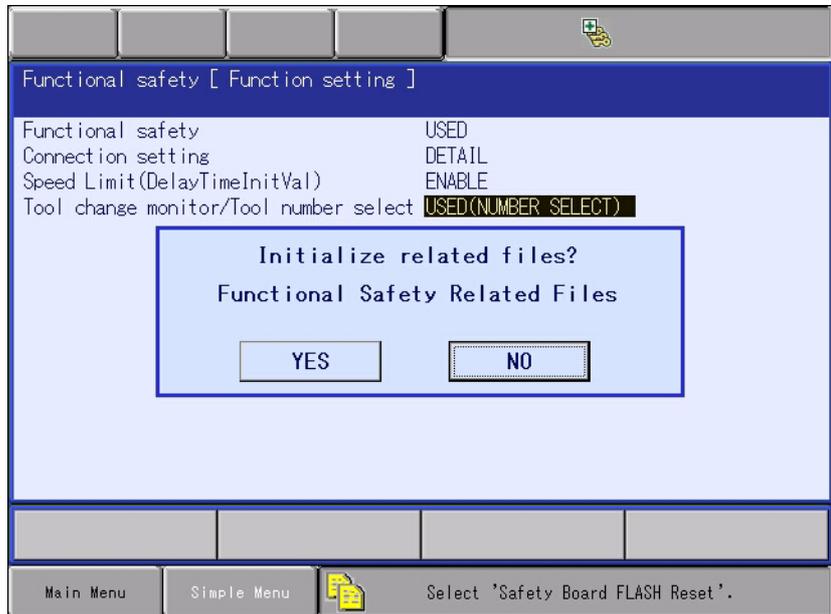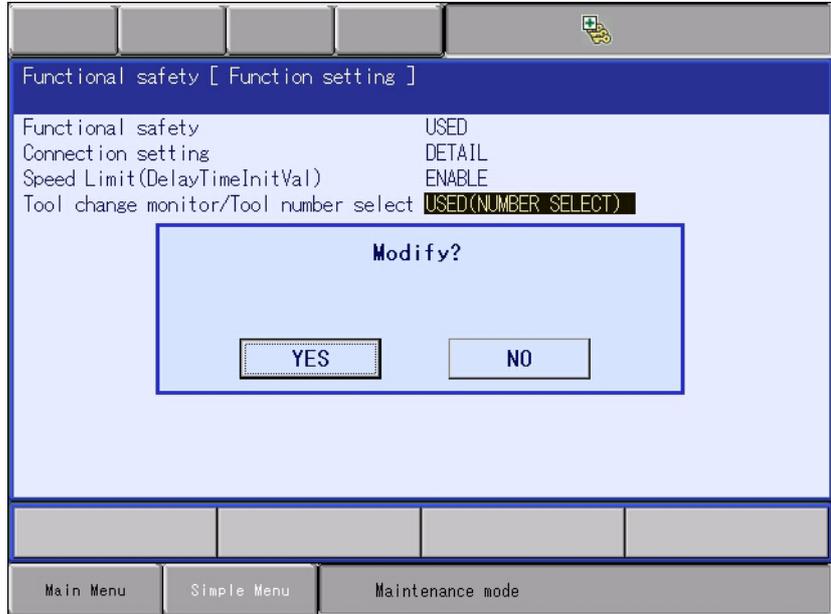


4 Details of Functional Safety Function


4.7 Tool Number Selection Function

6. Press {FILE} under the main menu. And then, press {INITIALIZE} in the sub menu.

– A window for initialization appears.

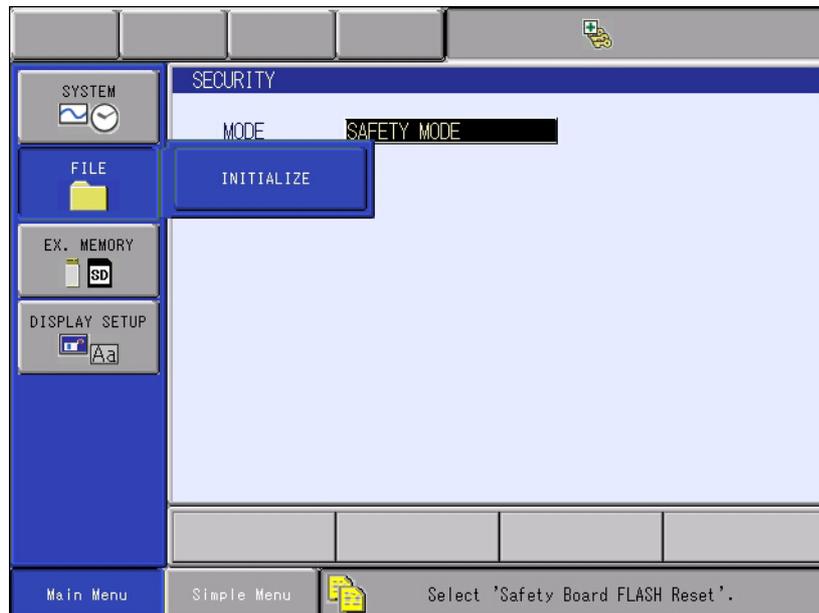


7. Move the cursor and select "Functional Safety Board FLASH Reset" on the window.

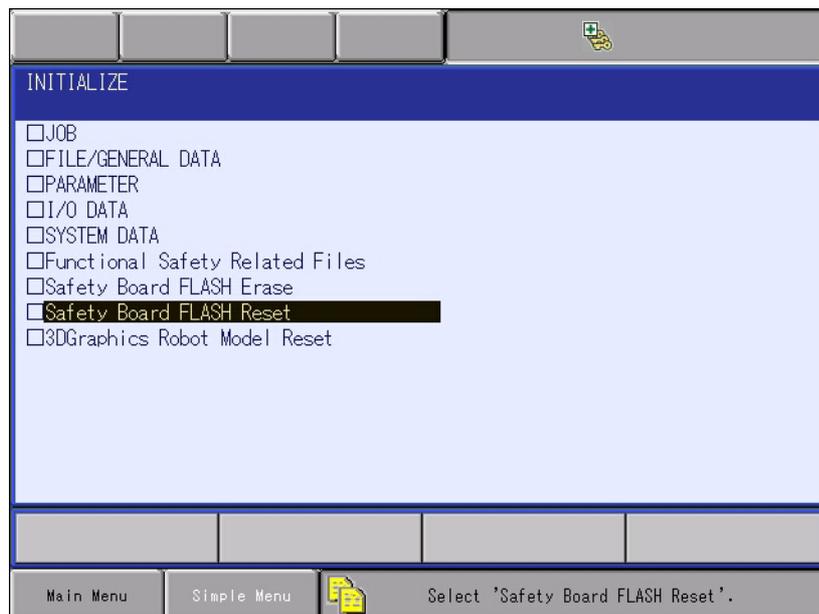

4 Details of Functional Safety Function

4.7 Tool Number Selection Function

8. Select “YES” when a window shown below appeared.
- Data of the functional safety board is reset. When resetting is completed, a buzzer sounds in a few seconds.

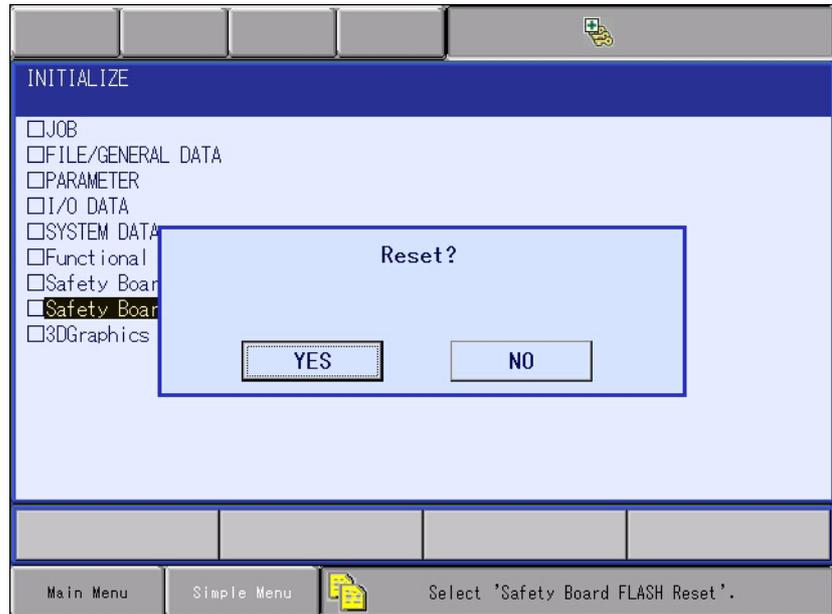

9. Turn ON the controller power supply.

Following alarm may occur at the first start-up and operation of the manipulator after validating the tool number selection function because all the tool number selection files are not specified yet.

“Alarm 4789: F-SAFE TOOL CHANGE MONITOR ERR”

Perform the tool number selection file settings, validate the tool number selection function and reset the alarm.



CAUTION

- The tool number selection function is set to invalid at the default status. For the appropriate safety monitoring, be sure to validate either of the tool change monitor function or the tool number selection function and perform the monitoring.

- 4 Details of Functional Safety Function
 4.8 Common Setting Item for the Condition File

4.8 Common Setting Item for the Condition File

Although the condition files of the functional safety function exist by functions, there are common setting items to many files such as VALID/INVALID of the file.

Here, in this chapter, details of the common items are explained. For the safety signal settings, refer to *chapter 5 "Safety Signal"*.

The AXIS RANGE LIMIT window is used as an example.

AXIS RANGE LIMIT	
FILE NO.: 1 / 32	
COMMENT	TEST
FILE SET STATUS	COMPLETED
FILE VALID COND	SIGNAL
ALRAM SET	ON
CTRL GROUP	R1

<Details of the Window>

1. COMMENT

The comment input is displayed.

COMMENT can be specified in the condition file of any function.

2. FILE SET STATUS

Status of the present condition file

Value	Description
SETTING	The condition file is in the initial status or in the updating status. When the data is changed by the read back operation, select {WRITE} in the window, the data writing to the safety circuit board is completed, and then this changes to "CONFIRMING" or "COMPLETED".
CONFIRMING	<p>The data is appropriately set and the limit area can be confirmed after the file validating conditions are met. Select {COMFIRM} in the window after the area is confirmed. "COMPLETED" is indicated when the data setting process in the safety circuit board is completed.</p> <p>In case the data is changed at this timing, the indication changes to "CONFIRMING".</p> <p>Only the files mentioned below exist while "CONFIRMING" is indicated.</p> <ul style="list-style-type: none"> • Axis range limit function • Robot range limit function • Tool angle monitor function • Tool change monitor function • Tool number select function
COMPLETED	The condition file setting is completed. The safety monitoring can be performed after the file validating conditions are met. In case the data is changed at this timing, the indication changes to "CONFIRMING".

FILE SET STATUS is displayed in the condition file of any function.

4 Details of Functional Safety Function
 4.8 Common Setting Item for the Condition File

3. FILE VALID COND

Specify the conditions for validating the monitoring of the object files. However, to validate the monitoring, condition file data should be appropriately specified. The settings at this item might be ignored in case “SETTING” is indicated at “FILE SET STATUS”.

Value	Description
INVALID	Always invalidate the object file.
VALID	Always validate the object file.
SIGNAL	Judge valid/invalid by referring the safety input signal. For the details of the safety signal usage, refer to <i>chapter 5 “Safety Signal”</i> .

{FILE VALID COND} can be specified in the condition file of any function. In the tool change monitor function and the tool number select function, only one condition file will be valid in the normal status. Therefore, when setting {FILE VALID COND}, if the other condition file has been set to “VALID”, a confirmation dialog box appears.

The confirmation dialog box can be displayed in the system software version YAS2.82.00A(□)-00 or later.

4. ALARM

Select alarm or not alarm to the monitoring result of the object file.

Value	Description
ON (MOVE STOP)	Servo is turned OFF with an alarm when an error occurs under the object file monitoring condition.
OFF (CONT MOVE)	Although monitoring is performed under the object file condition, alarm does not occur and the servo is not turned OFF even if a monitoring error occurred. The monitoring result can be obtained by the safety output signal.

ALARM can be specified only in the condition file of the axis range limit function, the robot range limit function, or the tool change monitor function. The tool change monitor function and the tool number select function can be displayed and set in the system software version YAS2.82.00A(□)-00 or later.



DANGER

- When “OFF” is set to ALARM, the functional safety function does not stop the manipulator operation even if a monitoring error is detected in the object file. In this regard, before operating the manipulator, sufficiently consider possible risks attributed to the alarmless operation (risk assessment) and take necessary measures to them.

-
- 4 Details of Functional Safety Function
 4.8 Common Setting Item for the Condition File
-

5. GROUP

Specify the control group to be monitored specified by the condition file.

Selectable control groups vary depending on the function.

Function	Selectable control group
Axis range limit function	Robot, Base, Station group
Axis speed monitor function	Robot, Base, Station group
Robot range limit function	Robot group
Speed limit function	Robot, Station group
Tool angle monitor function	Robot group
Tool change monitor function	The group is fixed by files. When modifying the object group, change it on the list of tool change monitor function window.
Tool number select function	The group is fixed by files. When modifying the object group, change it on the list of tool number select function window.

5 Safety Signal

For the functional safety function, the safety monitoring condition files can be switched by the safety input signal.

Also, this function corresponds the outputting of the monitoring result by the safety output signal.

Followings are the safety signal available for the functional safety function.

Signal	Signal point	Note
Functional safety general-purpose signal	(for JANCD-ASF02-E) Input: 8 points/terminal Output: 8 points/terminal	The functional safety general-purpose signal is connected per safety circuit board. The number of the signals differ depending on the board: · when connecting to “JANCD-ASF02-E”, 8 input points and 8 output points · when connecting to “JANCD-ASF03-E”, 16 input points and 16 output points
	(for JANCD-ASF03-E) Input: 16 points/terminal Output: 16 points/terminal	
Safety fieldbus signal	Input: 64 points/system Output: 64 points/system	The safety fieldbus signal is connected per system. Depending on the settings, up to 64 points can be used from one safety circuit board. The safety fieldbus is an optional function other than the functional safety.
Safety logic circuit extended signal	Input: 64 points/system Output: 64 points/system	The safety logic circuit extended signal (64 input points and 64 output points) is connected per system. The output of the safety logic circuit (MS-OUT) can be used as the input of the functional safety. The output of the functional safety (FS-OUT) can be used as the input of the safety logic circuit.



To maintain Safety Category 3 and PL-d in the safety monitoring using the functional safety function, the safety signal to be used must meet the requirements of Safety Level SIL2 and PL-d.

If the safety fieldbus signal and the safety logic circuit signal are included, up to 144 points can be used from one safety circuit board.

To condition files, as many safety signals as desired can be allocated within the possible signal points, thus signals are flexibly used even if the board has small numbers of signal points.

Follow the procedures below when using the safety signals:

1. Perform the allocation of the functional safety general-purpose signal.
2. Perform the allocation of the safety logic circuit signal.
(This is not necessary when using only the functional safety general-purpose signal.)
3. Perform the allocation of the safety fieldbus signal.
(This is necessary when using the safety fieldbus signal.)
4. Set the condition file.

5 Safety Signal
 5.1 Allocation of Safety Logic Circuit Extended Signal

5.1 Allocation of Safety Logic Circuit Extended Signal

The safety logic circuit extended signal can be used as the input signal or the output signal of the functional safety. The number of the signal points are 64 input points and 64 output points. These signals are shared by the whole system, and can be used from any board of the safety circuit board. Regarding the FS-OUT (safety logic circuit functional safety output signal), allocation of the signal and the board must be performed in advance.


For details of the safety logic circuit function, refer to “YRC1000 INSTRUCTIONS (RE-CTO-A221) 8.26 Safety Logic Circuit”.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.



2. Select {SLC EXT. SIGNAL ALLOC} under the submenu.
 - The settings window of the safety logic circuit signal allocation appears.

Allocation of FS-OUT (functional safety output signal)

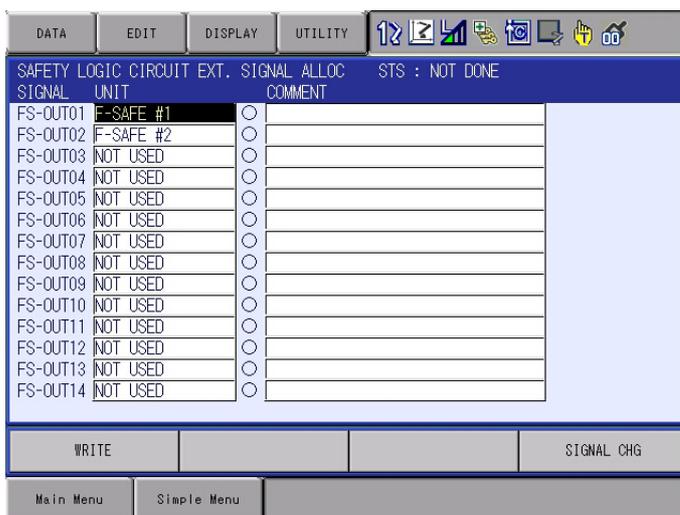

<Details of the Window>

1. SIGNAL

Indicates the signal number (FS-OUT01 to 64).

5 Safety Signal

5.1 Allocation of Safety Logic Circuit Extended Signal

2. UNIT

The destination of the FS-OUT is selected from the following:

- I) Not used
- II) One of the functional safety (F-SAFE) #1 to #8

To prevent the duplicate use of an output signal (FS-OUT), one signal is allocated to one board in which the signal is used.

5 Safety Signal
 5.2 Allocation of Safety Fieldbus Signal

5.2 Allocation of Safety Fieldbus Signal

The safety fieldbus function is not a functional safety function but an optional function. When it is valid, the safety fieldbus signal can be used in the functional safety function.

Safety fieldbus signal transmits/receives the safety-guaranteed “safety data” through the fieldbus communication path. It has 64 input signal points and 64 output signal points.


These signals are commonly used in the whole system and thus they can be referred from both machine safety board and functional safety board. In this consequence, “SAFETY SIG. BOARD ALLOC” function is prepared to define which signal is to be used in which board.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.



2. Select {SAFETY SIG. BOARD ALLOC} in the sub menu.
 - The settings window of the safety signal board allocation appears.

Allocation of output signal

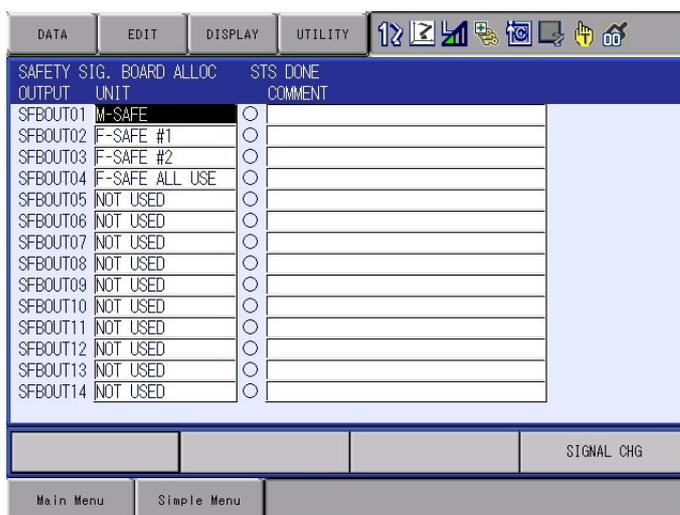

5 Safety Signal
5.2 Allocation of Safety Fieldbus Signal

<Details of the Window>

1. OUTPUT

Indicates the signal number.

2. UNIT

The destination of the safety fieldbus output signal is selected from the following:

- I) Not used
- II) Machine safety (used in the safety logic circuit)
- III) One of the functional safety (F-SAFE) #1 to #8
(used in the functional safety (specify the terminal to use))
- IV) All of the functional safety
(used in the whole safety circuit board where the functional safety is enabled)

To prevent the duplicate use of a safety signal, one signal is allocated to one board basically.

Item	Description
Not used	The signal is not used.
Machine safety	The signal can be used in the safety logic circuit.
One of the functional safety #1 to #8	The signal can be used in the functional safety (one of the terminals from 1 to 8)
Functional safety ALL USE	The signal can be used in the whole safety circuit board where the functional safety is enabled.

5 Safety Signal
5.3 Settings of Safety Function Condition File

5.3 Settings of Safety Function Condition File

A window for setting signals are prepared to all the condition files.

Axis range limit function window is shown below as an example of signal setting window.

INPUT SIGNAL		SET	STATUS
bit0	FSBIN01(#1)	OFF	●
bit1	FSBIN02(#1)	ON	●
bit2	SFBIN01	ON	○
bit3	MS-OUT01	OFF	○
bit4	-----	***	○
OUTPUT SIGNAL	FSBOUT01(#1)		○

<Details of the Window>

1. INPUT SIGNAL

To validate an object condition file, specify a safety input signal for reference.

Same input signal cannot be specified in the same condition file. The already-specified signal does not appear in the selection list in the same condition file.

Value	Description
NO CONFIG	Signal is not specified.
FSBIN01 to FSBIN16	Specify the functional safety general-purpose input signal. The number of the signal points differs depending on the safety I/O board to be connected. When the ASF02 board is connected, the signals 1 to 8 are used, and when the ASF03 board is connected, the signals 1 to 16 are used. (# n): terminal number of the safety circuit board
SFBIN01 to SFBIN64	Specify the safety fieldbus input signal. (signal 1 to 64)
MS-OUT01 to MS-OUT64	Specify the machine safety output signal of the safety logic circuit. (signal 1 to 64)

“INPUT SIGNAL” can be specified in the condition file of any function. To perform settings of “INPUT SIGNAL”, set “SIGNAL” for “FILE VALID COND”.

5 Safety Signal

5.3 Settings of Safety Function Condition File

2. SET

To the input value of the signal selected at “INPUT SIGNAL”, specify either ON or OFF for satisfying the condition to set valid.

Value	Description
OFF	The valid condition is satisfied when the value set at “INPUT SIGNAL” becomes OFF.
ON	The valid condition is satisfied when the value set at “INPUT SIGNAL” becomes ON.

“SET” can be specified in the condition file of any function.
To perform settings of “SET”, set “SIGNAL” for “FILE VALID COND”.

3. STATUS

The present input value of the signal input at “INPUT SIGNAL”

Value	Description
○	The present input value of the signal set at “INPUT SIGNAL” is OFF.
●	The present input value of the signal set at “{INPUT SIGNAL” is ON.

“STATUS” can be displayed in the condition file of any function.
To display “STATUS”, set “SIGNAL” for “FILE VALID COND”.

4. OUTPUT SIGNAL

Specify a signal to output the object condition file monitoring result.

To avoid a redundant output result, two of the same output signal cannot be specified in one system. The already-specified signal does not appear in the selection list in the same condition file.

Regarding the safety fieldbus output signals and the functional safety output signals, only the ones allocated as usable in the safety circuit board appear in the selection list.

Value	Description
NO CONFIG	Signal is not specified
FSBOUT01 to FSBOUT16	Specify the functional safety general-purpose output signal. The number of the signal points differs depending on the safety I/O board to be connected. When the ASF02 board is connected, the signals 1 to 8 are used, and when the ASF03 board is connected, the signals 1 to 16 are used. (# n): terminal number of the safety circuit board
SFBOUT01 to SFBOUT64	Specify the safety fieldbus output signal. (signal 1 to 64)
FS-OUT01 to FS-OUT64	Specify the functional safety output signal to the safety logic circuit. (signal 1 to 64)

“OUTPUT SIGNAL” can be specified in the condition file of any function.

5 Safety Signal
 5.4 File Switching to Valid/Invalid by the Safety Input Signal

5.4 File Switching to Valid/Invalid by the Safety Input Signal

Judging method for switching the condition file using the safety input signal is explained here.

Fig. 5-1: Signal Setting Window

INPUT SIGNAL		SET	STATUS
bit0	FSBIN01(#1)	OFF	●
bit1	FSBIN02(#1)	ON	●
bit2	SFBIN01	ON	○
bit3	MS-OUT01	OFF	○
bit4	-----	****	○
OUTPUT SIGNAL	FSBOUT01(#1)		○

The input signal is judged line-by-line.

As shown in fig. 5-1 “Signal Setting Window”, when performing a setting as marked with the red square, the condition of bit 0 line is defined as satisfied because “ON” is set to {SET} at the input signal {FSBIN01}, and ● (=ON)} is set to {STATUS}.

Up to 5 signals can be set to a condition file (up to 4 for the tool change monitor function and the tool number select function).

Conditions of the lines from bit0 line to bit4 line are judged by the safety input signal respectively, the object condition file is validated only when all the conditions are satisfied.

For the line “****” (undefined) is indicated at {SET} is disregarded for this judgement.

Fig. 5-2: When the Conditions for File Validation is Satisfied

INPUT SIGNAL		SET	STATUS
bit0	FSBIN01(#1)	ON	●
bit1	FSBIN02(#1)	ON	●
bit2	SFBIN01	OFF	○
bit3	MS-OUT01	OFF	○
bit4	-----	****	○
OUTPUT SIGNAL	FSBOUT01(#1)		○

Annotations: Red boxes highlight the bit0 and bit4 rows. Arrows point from bit0 to a box labeled "All conditions satisfied" and from bit4 to a box labeled "Ignored".

Fig. 5-3: When the Condition for File Validation is Not Satisfied

INPUT SIGNAL		SET	STATUS
bit0	FSBIN01(#1)	ON	●
bit1	FSBIN02(#1)	ON	●
bit2	SFBIN01	ON	○
bit3	MS-OUT01	OFF	○
bit4	-----	****	○
OUTPUT SIGNAL	FSBOUT01(#1)		○

Annotations: Red boxes highlight the bit2 and bit4 rows. Arrows point from bit2 to a box labeled "Condition not satisfied" and from bit4 to a box labeled "Ignored".

5 Safety Signal

5.4 File Switching to Valid/Invalid by the Safety Input Signal



There can be a time difference after the first signal and before the last signal. In the functional safety function, an interval of 32 [ms] is equipped to the system to be totally switched to internally settled after the last signal change.

For this reason, please take this into consideration when performing the following operations.

- When switching several signals, do not take more than 32 [ms].
→The signals may be settled with half-specified values.
- Do not use signals that continue shifting ON/OFF within the interval of less than 32 [ms].
→Signals will not be settled.

On the basis of above mentioned judging methods, following patterns can be conceived when switching files using three signals.

Pattern 1: When switching one file using one signal

Operate more than two files respectively.

Simultaneous monitoring is available.

The number of the object file: 3

Condition file	Signal and setting	Setting	Conditions for validating the file
File 1	Signal A	ON	● (Signal A)
File 2	Signal B	OFF	○ (Signal B)
File 3	Signal C	ON	● (Signal C)

5 Safety Signal
 5.4 File Switching to Valid/Invalid by the Safety Input Signal

Pattern 2: When switching one file using more than two signals

Select one file out of several files.

Many files can be managed with less signals. This pattern is effective when simultaneous monitoring is not necessary.

The number of the object file: 8

Condition file	Signal and setting	Setting	Conditions for validating the file
File 1	Signal A	OFF	<input type="radio"/> (Signal A)
	Signal B	OFF	<input type="radio"/> (Signal B)
	Signal C	OFF	<input type="radio"/> (Signal C)
File 2	Signal A	ON	<input checked="" type="radio"/> (Signal A)
	Signal B	OFF	<input type="radio"/> (Signal B)
	Signal C	OFF	<input type="radio"/> (Signal C)
File 3	Signal A	OFF	<input type="radio"/> (Signal A)
	Signal B	ON	<input checked="" type="radio"/> (Signal B)
	Signal C	OFF	<input type="radio"/> (Signal C)
File4	Signal A	ON	<input checked="" type="radio"/> (Signal A)
	Signal B	ON	<input checked="" type="radio"/> (Signal B)
	Signal C	OFF	<input type="radio"/> (Signal C)
File 5	Signal A	OFF	<input type="radio"/> (Signal A)
	Signal B	OFF	<input type="radio"/> (Signal B)
	Signal C	ON	<input checked="" type="radio"/> (Signal C)
File 6	Signal A	ON	<input checked="" type="radio"/> (Signal A)
	Signal B	OFF	<input type="radio"/> (Signal B)
	Signal C	ON	<input checked="" type="radio"/> (Signal C)
File 7	Signal A	OFF	<input type="radio"/> (Signal A)
	Signal B	ON	<input checked="" type="radio"/> (Signal B)
	Signal C	ON	<input checked="" type="radio"/> (Signal C)
File 8	Signal A	ON	<input checked="" type="radio"/> (Signal A)
	Signal B	ON	<input checked="" type="radio"/> (Signal B)
	Signal C	ON	<input checked="" type="radio"/> (Signal C)

5.5 Safety Signal Output Value

The output signal outputs the status of safety or not safety over the monitoring conditions when the object condition file is validated.

Followings show the meanings of output result for each safety function.

Basically, output signal ON is defined as safety side and OFF is defined as not safety side in preparation for the disconnection of the hard signals, etc.

In case the status becomes not safety and OFF is output during the monitoring, the OFF signal is kept outputting unless the error alarm is reset.

If the alarm is set to be out of occurring by a condition file, the signal keeps outputting OFF while in not safety status and becomes ON when it returns to the safety status.



CAUTION

In case a major alarm occurred in the functional safety function, all the output signals are turned OFF.

• Axis range limit function

Object file status	Monitoring result	Output value
Invalid	-	OFF
Valid	All the axes monitoring is validated are inside the safety range.	ON
	Some of the axes monitoring are validated are detected to be outside the safety range	OFF
	For some of the axes monitoring are validated, the stop position to which coasting value is included are detected to be in error status when moving close to the border of the safety range.	OFF

• Axis speed monitor function

Object file status	Monitoring result	Output value
Invalid	-	OFF
Valid	All the axes monitoring is validated are inside the safety range.	ON
	Some of the axes monitoring are validated are detected to be outside the safety range	OFF

5 Safety Signal
5.5 Safety Signal Output Value

• Robot range limit function

Object file status	Monitoring result	Output value
Invalid	-	OFF
Valid	Object manipulator or tool is inside the safety range.	ON
	Object manipulator or tool is detected to be outside the safety range	OFF
	For the object manipulator or tool, the stop position to which coasting value is included are detected to be in error status when moving close to the border of the safety.	OFF

• Speed limit function

Object file status	Monitoring result	Output value
Invalid	-	OFF
Valid	Object groups for monitoring are inside the limited speed.	ON
	Object groups for monitoring detected the limited speed error.	OFF

• Tool angle monitor function

Object file status	Monitoring result	Output value
Invalid	-	OFF
Valid	The tool angle of the object group for monitoring is inside the limited angle.	ON
	An error is detected to the tool angle of the object group for monitoring.	OFF

• Tool change monitor function

Object file status	Monitoring result	Output value
Invalid	There is no valid file	OFF
Valid	One condition file is specified as valid and the value is inconsistent with the master CPU.	ON
	One condition file is specified as valid but the value is not consistent with the master CPU.	OFF the valid file signal
	Several condition files are specified as valid	OFF all the valid file signal

• Tool number select function

Object file status	Monitoring result	Output value
Invalid	There is no valid file.	OFF
Valid	One condition file is specified as valid.	ON
	Several condition files are specified as valid.	OFF all the valid file signal

6 Common Settings

6.1 Function Disable Mode Setting

When the function disable mode (temporary disablement) is used, all the object condition files of the safety monitoring function (32 files) can be set invalid.

This mode is used in the following functions marked with ○.

Function	Availability
Axis range limit function	○
Axis speed monitor function	X
Robot range limit function	○
Speed limit function	X
Tool angle monitor function	○
Tool change monitor function	○
Tool number select function	○


Use this mode mainly to recover from the status when an out-of-range alarm of the range limit function occurred.

Although the alarm activated by the safety monitoring is a re-settable alarm, the same alarm occurs again if the manipulator or the external axis is located outside of the safety range.

Follow the procedures below when recovering from the alarm.

1. Temporarily disable the safety function which is detecting the alarm.
2. Reset the alarm.
3. Jog operate to move the manipulator or the external axis inside the safety range.
4. Release the function disable mode.


The function disable mode can be specified on the status list window. The AXIS RANGE LIMIT window is used as an example below.

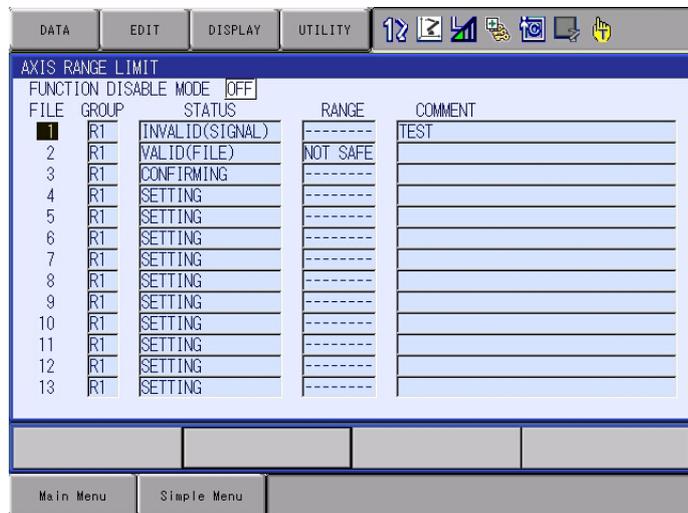

6 Common Settings

6.1 Function Disable Mode Setting

Set "ON" for "FUNCTION DISABLE MODE". The window changes as shown below to indicate that the function is temporarily disabled.

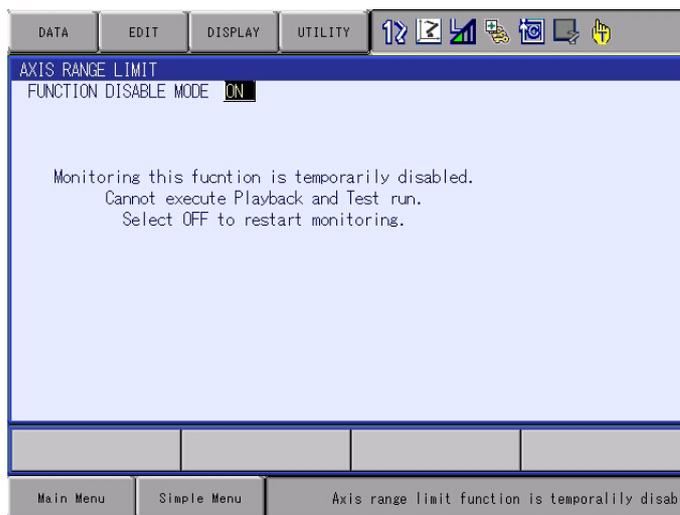

Also, in the message area at the lower right of the window, a message showing that the object function is being temporarily disabled appears.

<Message>

"Axis range limit function is temporarily disable"

"Robot range limit function is temporarily disable"

"Tool angle monitor function is temporarily disable"

"Tool change monitor function / Tool number select function is temporarily disable"

To an specific output signal, a signal for the disabled function is output.

<Specific output signal>

-Axis range limit is temporarily disabled

-Robot range limit is temporarily disabled

-Tool angle monitor is temporarily disabled

-Tool change monitor / Tool number select is temporarily disabled

6	Common Settings
6.1	Function Disable Mode Setting

6.1.1 Restrictions While Function Disable Mode Is Enabled

Restrictions are set to the following operations while the function disable mode is enabled because this mode also disables monitoring operations.

When moving the manipulator or the external axis while the restrictions are set, only the jog operation using the programming pendant is available. And an error occurs when one of the following operations is executed.

- Play back operation
- Forward and Backward operations
- Test-run operation
- I/O Jog operation
- Execution of motor gun auto tuning

<Error Message>

Error 1191: Axis range limit function is temporarily disable

Error 1192: Robot range limit function is temporarily disable

Error 1193: Tool angle monitor function is temporarily disable

Error 1194: Tool change monitor function / Tool number select function is temporarily disable

Following error codes are returned when executing the data transmission or start commands of the high-speed Ethernet server, or when executing jobs of MotoPlus or Pendant customization functions.

<Error Message>

3061: "Axis range limit function is temporarily disable"

3062: "Robot range limit function is temporarily disable"

3063: "Tool angle monitor function is temporarily disable"

3064: "Tool change monitor function / Tool number select function is temporarily disable"


6 Common Settings
 6.1 Function Disable Mode Setting

6.1.2 Security Level Setting for Function Disable Mode


For the functions in which the function disable mode exists, the security level to use this mode can be selected.

Follow the procedures below to open the settings window of the function disable mode.

1. Set the security mode to the safety mode, and then select {SETUP} under the main menu.

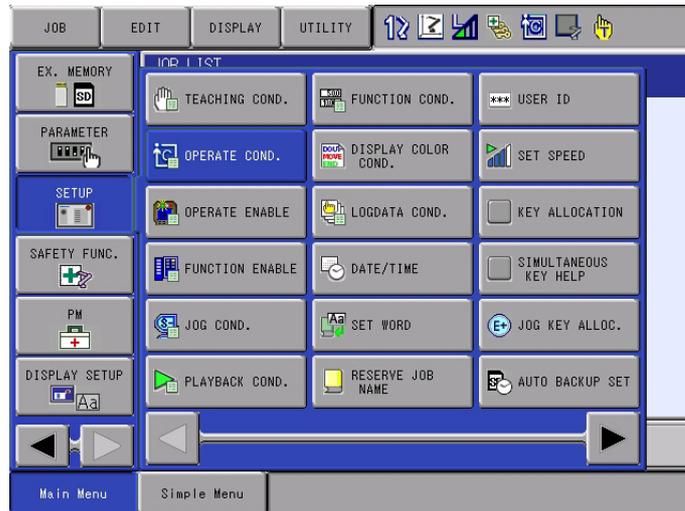

2. Select {OPERATE COND.} in the sub menu.
 - The OPERATE CONDITION SETTING window appears.
 - When the security mode is higher than the safety mode and the functional safety function is enabled, “FUNC DISABLE MODE SECURITY(FSU)” appears on this window.

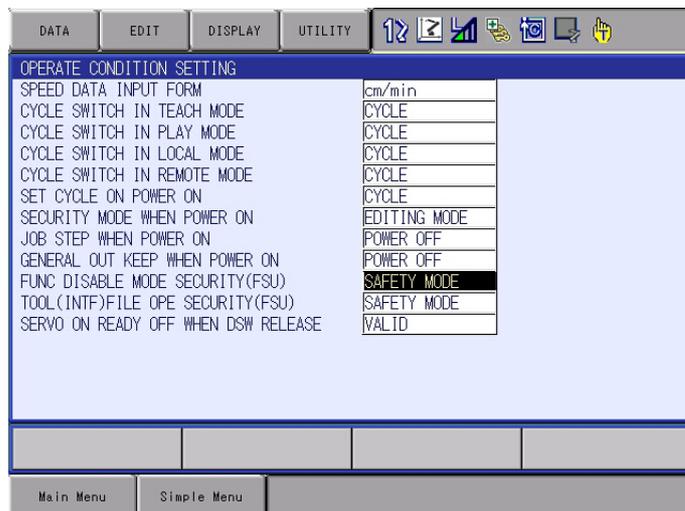

<Details of the Window>

FUNC DISABLE MODE SECURITY (FSU)

Value	Description
EDITING MODE	Switching of FUNCTION DISABLE MODE is permitted in the editing mode or higher.
MANAGEMENT MODE	Switching of FUNCTION DISABLE MODE is permitted in the management mode or higher.
SAFETY MODE	Switching of FUNCTION DISABLE MODE is permitted in the safety mode. (Default)

6.2 External Axis Coasting Value Setting

This setting can be referred by the following safety functions. When using the safety function marked with ○ in the following table, an advanced setting is required.

Function	Reference
Axis range limit function	○
Axis speed monitor function	X
Robot range limit function	○
Speed limit function	X
Tool angle monitor function	X
Tool change monitor function	X
Tool number select function	X

In case the power supply to the servo is turned OFF while the manipulator is in operation, it may move a little bit before completely stops because of the force of inertia. The functional safety function functions by estimating the moving value (coasting value) of the manipulator from the servo OFF position to the completely stopped position in accordance with each axis speed.

By setting the manipulator to stop just before it exceeds the safety range including its coasting distance on the basis of the estimated coasting value, the stop position of the manipulator does not exceed the safety range.

For example, when the manipulator is operating with 100% of operating speed, the functional safety function starts instructing the manipulator to stop “the coasting value when the manipulator is operating with 100% of operating speed” before the border of its limited area.

Also, when the manipulator is operating with 50% of operating speed, the functional safety function starts instructing the manipulator to stop “the coasting value when the manipulator is operating with 50% of operating speed” before the border of its limited area.

For the coasting value of the manipulator, it is already set before shipment. However, for that of an external axis, it should be set by the customer.

When the monitoring operations in the axis range limit function or the robot range limit function is valid but its coasting value is not set, an error may occur and following operations will be restricted.

- Play back operation
- Forward and Backward operations
- Test-run operation
- I/O Jog operation
- Execution of motor gun at tuning

NOTE

The coasting value is difficult to obtain by calculation. Do not use values using in other systems because the value varies largely depending on the structure or shape of the external axis.

When inputting a temporary value, set a large value enough to avoid the risk.

6 Common Settings

6.2 External Axis Coasting Value Setting

<Error message>

“Error 0384: Coasting value setting of Ex-axis is not completed”

Following error code is returned when executing the data transmission, the starting system command by the high-speed Ethernet server or the play back operations from the programming pendant customization function or MotoPlus before setting of the coasting value is not completed.

<Error codes>

3065 “Coasting value setting of Ex-axis is not completed”



Setting of the coasting value is not necessary for the system to which the external axis does not exist. Also, following sub menu is not displayed.

Open the external axis coasting value setting window by the following procedures.

1. Set the security mode to the safety mode, and then select {SAFETY FUNC.} under the main menu.



2. Select {COASTING VALUE SETTING} in the sub menu.
 - The COASTING VALUE SETTING window appears.
 - When several external axes exist, press [PAGE] to alternate the external axes.



<Details of the Window>


1. IMMEDIATE STOP

The value input to “COASTING VALUE” must be measured in the category 0 status. For the coasting value measurement, the category can be modified.

Value	Description
OFF	Category 1 is set for the stop of the robot and the external axis (Default)
ON	Category 0 is set for the stop of the robot and the external axis



- “OFF” should be set to “IMMEDIATE STOP” again after the coasting value measurement.
- When the starting operation is executed while “ON” is set, a dialog box notifying that “Immediate stop” is already set appears.
If performing the coasting value measurement, the playback operation can be executed after selecting “YES” and re-start the starting operation.

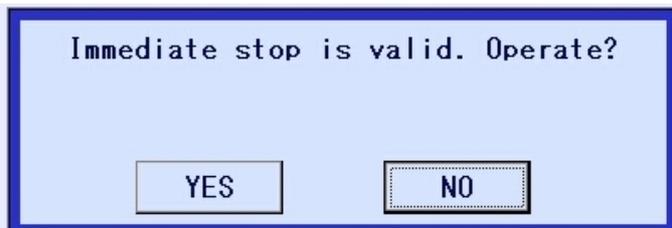

2. COASTING VALUE

Set the coasting value to a object axis. The inputting range is from 0.000 to 999.999.



A message “Select ‘Safety Board FLSH Reset’ in the maintenance mode.” appears when the coasting value is edited.
Re-set the data by following the procedures in *chapter 7.2 “FLASH Data Reset”*.



While modifying the coasting value, the power supply to the servo is stopped and the operation of the manipulator or the axis is disabled. However the modification is continuously available. For this reason, it is recommended to turn ON the power supply to the controller after completing the modification of all the coasting value.

6	Common Settings
6.3	Tool File Setting

6.3 Tool File Setting

This setting can be referred by the following safety functions. When using the safety function marked with ○ in the following table, an advanced setting is required.

Function	Reference
Axis range limit function	X
Axis speed monitor function	X
Robot range limit function	○
Speed limit function	○
Tool angle monitor function	○
Tool change monitor function	X
Tool number select function	X

The tool file must be appropriately specified for the precise monitoring of the safety function.

Make sure to perform the tool file setting properly by referring to "YRC1000 INSTRUCTIONS (RE-CTO-A221) 8.3 Tool Data Setting".

6.4 Tool Interference File Setting


This setting can be referred by the following safety functions. When using the safety function marked with ○ in the following table, an advanced setting is required.

Function	Reference
Axis range limit function	X
Axis speed monitor function	X
Robot range limit function	○
Speed limit function	X
Tool angle monitor function	X
Tool change monitor function	X
Tool number select function	X

In the robot range limit function, monitoring of the manipulator as well as its tool is executed. In this case, register the tool shape to the tool interference file as an approximate model.

Set a tool interference file as instructed below.


1. Set the security mode to the safety mode, and then select {ROBOT} under the main menu.

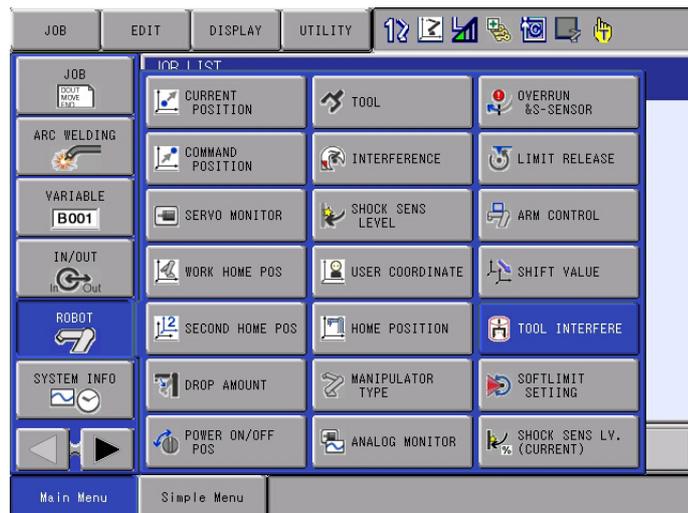

6 Common Settings

6.4 Tool Interference File Setting

2. Select {TOOL INTERFERE} under the sub menu.
 - The TOOL INTERFERE window appears.

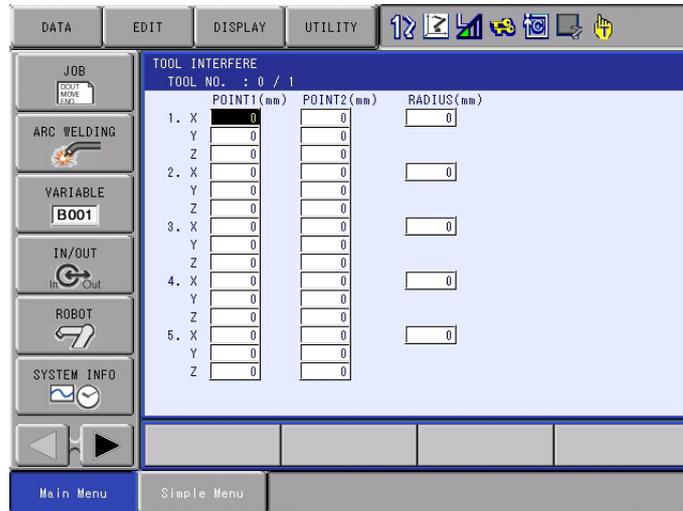

<Details of the Window>

1. 1 to 5

Cylinders and spheres for up to 5 positions can be set.

2. POINT1 to POINT5

Input the coordinate value of XYZ, and set both ends of a cylinder.
The distance from the center of T axis flange should be set like tool dimension setting.

3. RADIUS


The radius of the spheres and cylinder between POINT 1 and POINT 2 is set. The spheres are set to POINT 1 and POINT 2.

It is measured in [mm]

The specified radius must have a margin of at least 10 mm compared with the actual tool.

<Tool interference file setting example>

Fig. 6-1: Tool Interference File Setting Example

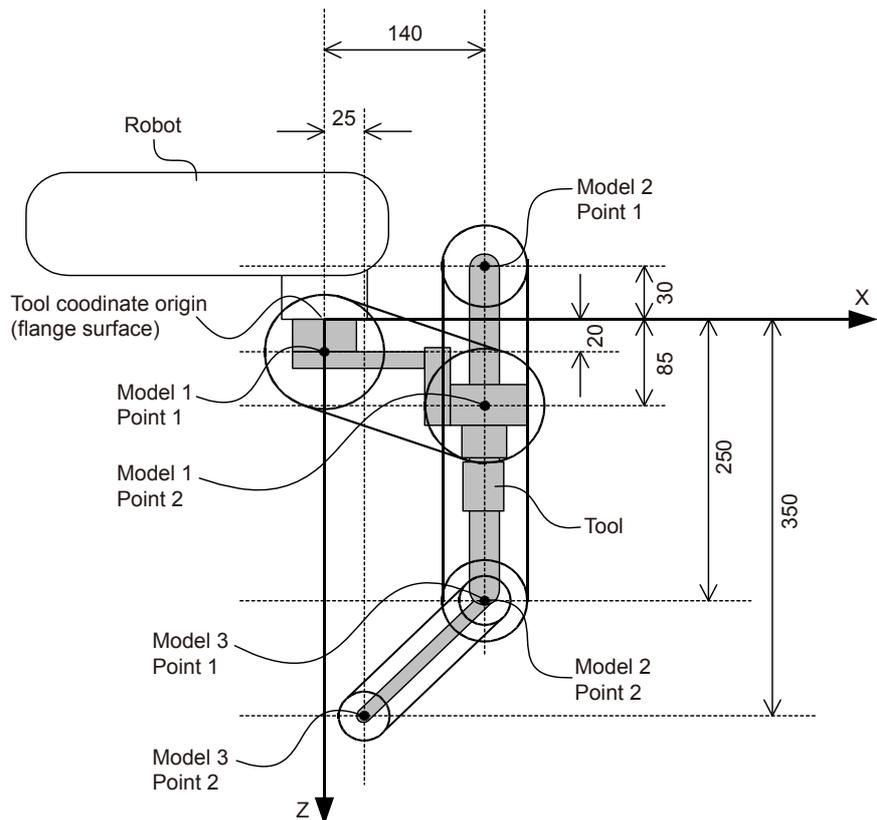


6 Common Settings
 6.4 Tool Interference File Setting

Model 1: Set the flange surface to Point 1, and (X=140, Z=85) to Point 2.

Model 2: Set (X=140, Z=-30) to Point 1, and (X=140, Z=250) to Point 2.
 This setting defines a model that is parallel to the Z direction of the tool coordinates.

Model 3: Set (X=140, Z=250) to Point 1, and (X=25, Z=350) to Point 2.
 By setting the point 2 of model 2 and the point 1 of model 3 at the same position, model 2 and 3 are defined at consecutive positions.

Following window shows the result of the setting model shown in fig. 6-1 "Tool Interference File Setting Example".

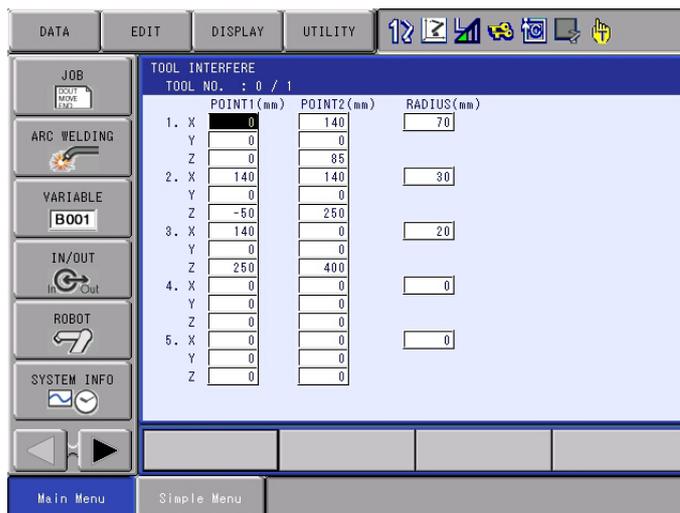


CAUTION

When setting a radius to a tool model, set a little larger radius corresponding to the distance from the flange surface as shown below.

Distance from the flange surface	Recommended radius
0 mm	55 mm
100 mm	58 mm
200 mm	60 mm

6.5 Security Level Setting for Tool File and Tool Interference Files


In the system where the functional safety function is not used, both tool file and tool interference files can be operated in the editing or higher mode.

On the other hand, in the system where the function is used, in the default setting, they can be operated only in the safety mode because these files influence the safety monitoring operation.

The person who has a safety license can select one out of three security level for operating the tool file or tool interference file.

The setting window opens by the following procedures.

1. Set the security mode to the safety mode, and then select {SETUP} under the main menu.

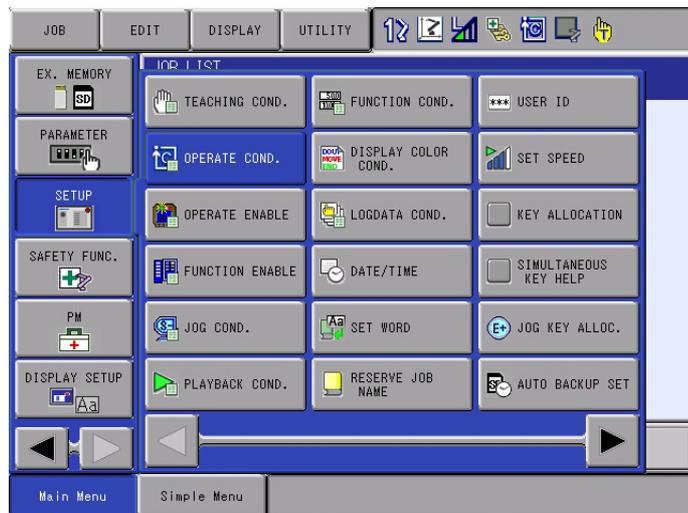

2. Select {OPERATE COND.} under the sub menu.
 - The OPERATE CONDITION SETTING window appears.
 - When the security level is higher than the safety mode and the functional safety function is enabled, “TOOL (INTF)FILE OPE SECURITY(FSU)” appears on this window



-
- 6 Common Settings
 - 6.5 Security Level Setting for Tool File and Tool Interference Files
-

<Details of the Window>

TOOL (INTF)FILE OPE SECURITY(FSU)

Value	Description
EDITING MODE	Operation of the tool file and tool interference file is permitted in the editing mode or higher.
MANAGEMENT MODE	Operation of the tool file and tool interference file is permitted in the management mode or higher.
SAFETY MODE	Operation of the tool file and tool interference file is permitted in the safety mode. (Default)

6.6 Using the PMT Function Together with the Functional Safety Function

6.6.1 How to Use the PMT Function Together with the Functional Safety Function

For system version YAS2.80.00A(*)-00 or later, the tool file that was last saved on the safety board is stored inside the system separately from the tool file (TOOL.CND) that is used normally.

The tool file to verify against the tool file that was saved on the safety board can be specified with the following parameter.

If S2C450 is set to 1, the PMT function can be used with the functional safety function. The setting of this parameter can be changed only if the security mode is safety mode. For this reason, the setting must be performed by the person who has a safety license.

Parameter No.	Details	Default Value
S2C450	Specify the target for verifying the tool file to use in the safety functions. 0: Verify the tool file to use normally against the tool file that was saved on the safety board (the PMT function will not be used together with the functional safety function). 1: Verify the tool file that was last saved on the safety board against the tool file that was saved on the safety board (the PMT function will be used together with the functional safety function).	0



WARNING


When the tool file is changed with the SETTOOL instruction, only the TCP to control the robot path is changed. The TCP to monitor with the safety function is not changed. Therefore, the robot will operate in a state where the TCPs do not match.
For the safety functions that use the tool file, refer to *chapter 6.3 "Tool File Setting"*.

When changing the parameter for this function, first conduct a sufficient risk assessment and carefully check the impact on the safety functions.

If S2C450 is set to 0, "Alarm 0300: VERIFY ERROR (SYSTEM CONFIG-DATA) [10]" may occur when the control power is turned ON. For details, refer to *chapter 6.6.3 "Tool File Verification Check in a System Using the PMT Function Together with the Functional Safety Function"*.

6 Common Settings
 6.6 Using the PMT Function Together with the Functional Safety Function


Since this parameter is related to the safety function, if the parameter S2C450 is edited in management mode, the following error message will appear.

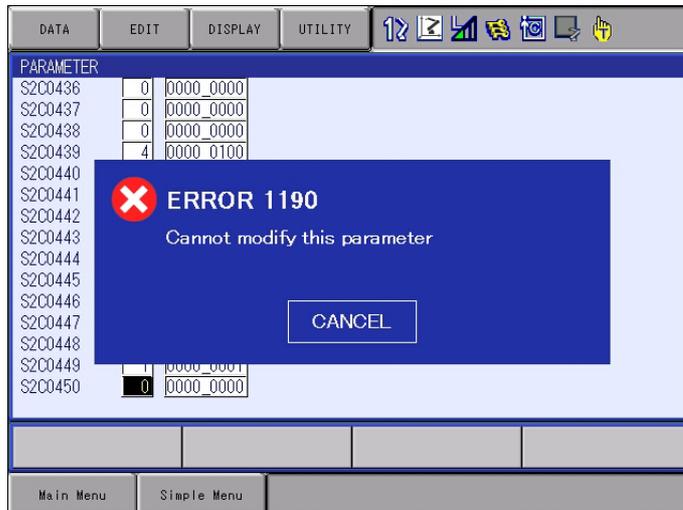

If a parameter file is loaded in management mode, the parameter S2C450 will be checked to see if it has changed before/after loading.

If the parameter has changed, the following error message will appear, and the parameter file will not be loaded.


A parameter file in which the parameter S2C450 has been changed must be loaded in safety mode.

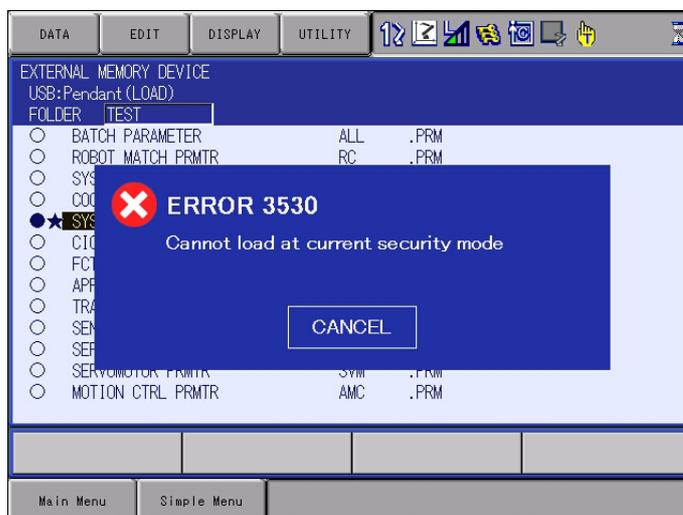

6 Common Settings
 6.6 Using the PMT Function Together with the Functional Safety Function


The tool file that was saved on the safety board stored inside the system can be confirmed in the tool window.

Press {DISPLAY}, and then select {MONITORING COND.}.

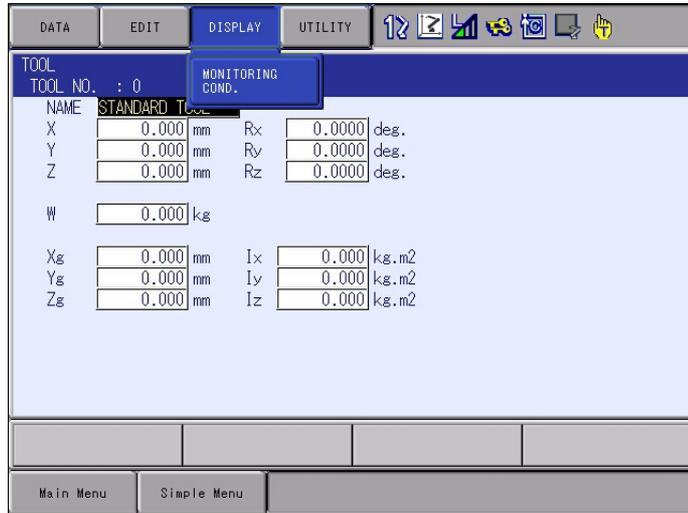

The window is changed to the “MONITORING COND.” window to indicate the details of the tool file that was last saved on the safety board.

The tool file cannot be edited in this window. The value of the tool file displayed in this window will be updated when the tool file is saved on the safety board with the readback operation by the person who has a safety license.

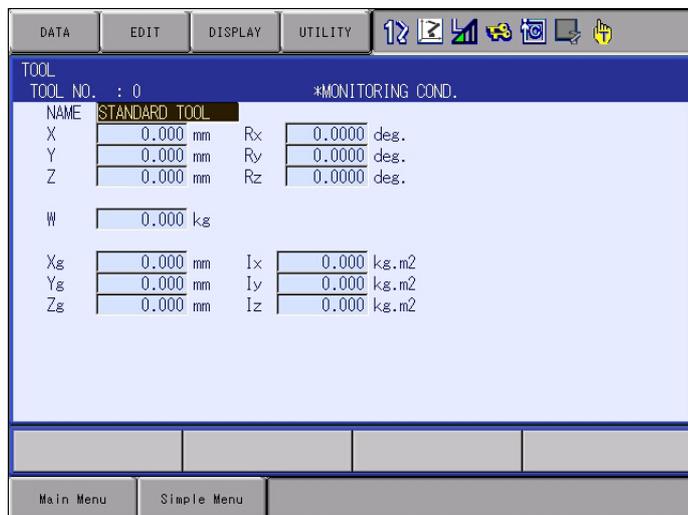

6 Common Settings
 6.6 Using the PMT Function Together with the Functional Safety Function

To show the current tool file or to edit the value of the tool file, press {DISPLAY}, and then select {TOOL FILE (CURRENT)}.



When verifying the current tool file against the tool file that was saved on the safety board, the comparison result of the following two tool files: the tool file that was last saved on the safety board and the tool file to use normally (TOOL.CND) is output to a concurrent I/O signal (specific output signal).

- 52585:
 The comparison result of two tool files is output. ON is for the mismatch, and OFF is for the match.

Value	Details
OFF	The tool file that was last saved on the safety board and the tool file to use normally match.
ON	The tool file that was last saved on the safety board and the tool file to use normally do not match.

6 Common Settings

6.6 Using the PMT Function Together with the Functional Safety Function

6.6.2 Monitoring the Amount of Change in the Tool Files

For system version YAS2.80.00A(*)-00 or later, the amount of change in tool files is monitored by checking the difference between the tool file that was last saved on the safety board and the tool file that is set with the SETTOOL instruction.

The amount of change in the above two tool files is checked when the SETTOOL instruction is executed, and the following alarm will occur if the threshold is exceeded.

Alarm 4605: SETTOOL ERROR [2]



6 Common Settings
 6.6 Using the PMT Function Together with the Functional Safety Function

The threshold for the amount of change in tool files can be specified with the following parameter.

The setting of this parameter can be changed only if the security mode is safety mode. For this reason, the setting must be performed by the person who has a safety license.


Parameter No.	Details	Unit	Default Value
S3C1193	The maximum allowable deviation from the tool file that was last saved on the safety board when the tool data is automatically set (SETTOOL instruction is executed). 0: Do not monitor the amount of change in tool files. 1 or higher: Set the value of the parameter to the threshold and perform monitoring.	0.001 mm	20000

 **WARNING**

For system versions before YAS2.80.00A(*)-00, the default value of S3C1193 is 0. For this reason, the amount of change in the tool files will not be monitored simply by upgrading from a system version before YAS2.80.00A(*)-00 to system version YAS2.80.00A(*)-00 or later.

To monitor the amount of change in tool files, first upgrade the system version, and then conduct a sufficient risk assessment and set the value of S3C1193.

Since this parameter is related to the safety function, if the parameter S3C1193 is edited in management mode, the following error message will appear.

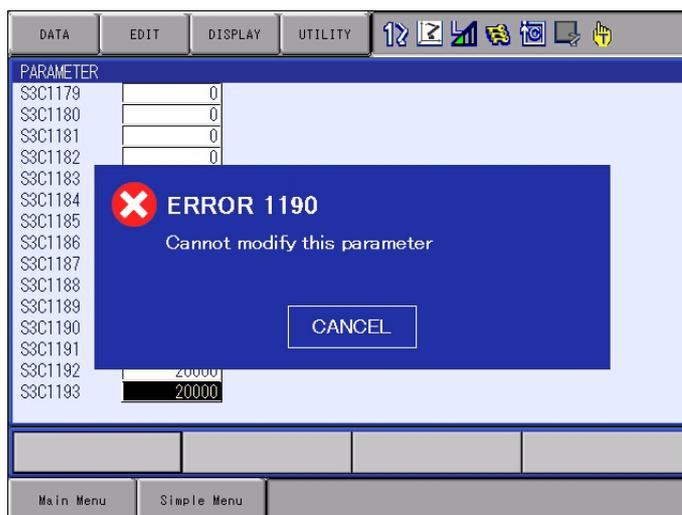


6 Common Settings

6.6 Using the PMT Function Together with the Functional Safety Function

If a parameter file is loaded in management mode, the parameter S3C1193 will be checked to see if it has changed before/after loading.

If the parameter has changed, the following error message will appear, and the parameter file will not be loaded.

A parameter file in which the parameter S3C1193 has been changed must be loaded in safety mode.

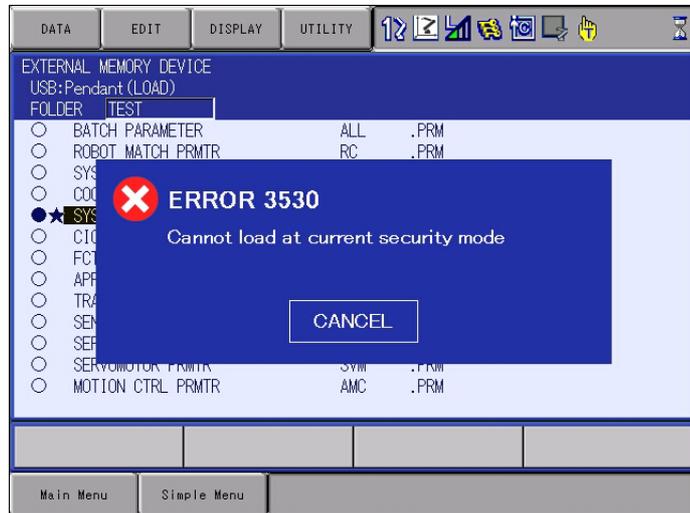

6	Common Settings
6.6	Using the PMT Function Together with the Functional Safety Function

6.6.3 Tool File Verification Check in a System Using the PMT Function Together with the Functional Safety Function

When changing parameters and condition files, such as the tool file to be used in the safety functions (TOOL.CND), the following items must be checked by the person who has a safety license.

- Visually confirm that setting values are correct by using the readback operation.
- Perform an operation check using the newly set parameters and condition files and confirm that the safety functions work as intended.

The changed tool file is saved on the safety board by the above readback operation.

For a system that changes tool files using the PMT function, the tool file (TOOL.CND) is automatically changed by the PMT function. Changing the tool file with the PMT function is not accompanied with the above checks by the person who has a safety license, so the tool file on the safety board is not updated.

When the control power is turned ON, a verification check is performed on the tool file that was saved on the safety board and the tool file in the system, and if the files do not match, the following alarm occurs.

Alarm 0300: VERIFY ERROR (SYSTEM CONFIG-DATA) [10]

- 6 Common Settings
- 6.7 Disabling Functional Safety by Changing Connection Settings

6.7 Disabling Functional Safety by Changing Connection Settings


If functional safety must be disabled for some reason, such as a failure of the safety board, it can be disabled by changing the functional safety connection setting in maintenance mode.

Use the following procedure to disable functional safety.

1. Select {SYSTEM} under the main menu, and then select {SECURITY} to change the security mode to the safety mode.



2. Select {SYSTEM} under the main menu, and then select {SETUP} under the sub menu.
 - The SETUP window appears.

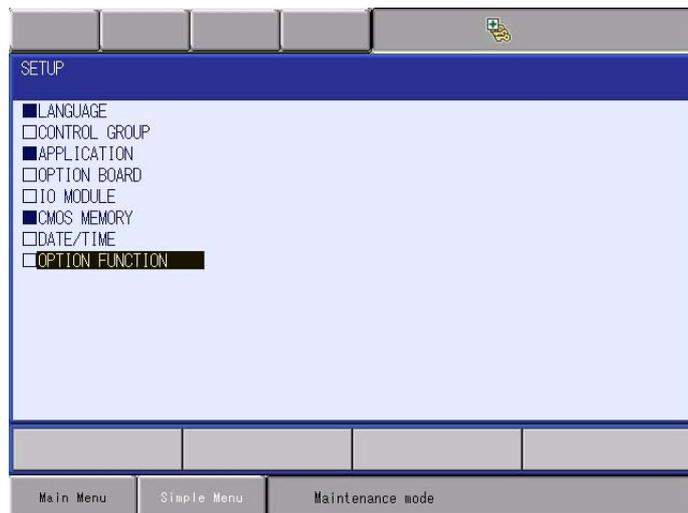


6 Common Settings

6.7 Disabling Functional Safety by Changing Connection Settings


3. Select "OPTION FUNCTION", "Functional safety" and "DETAIL".

– The Functional safety window appears.

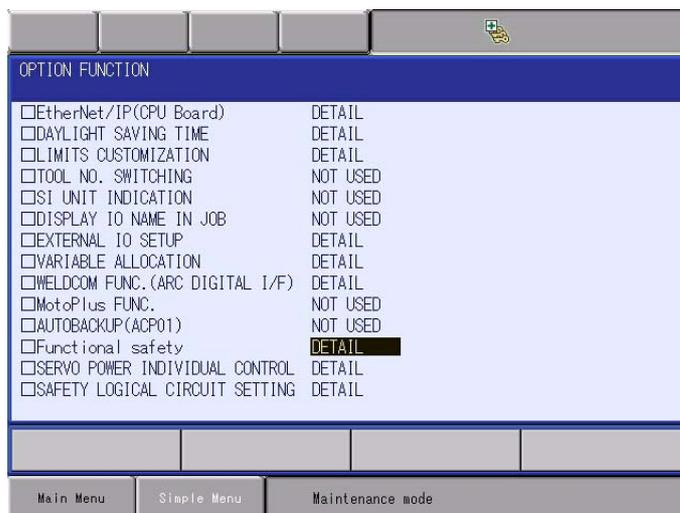

4. Select "Connection setting".


– The Connect setting window appears.

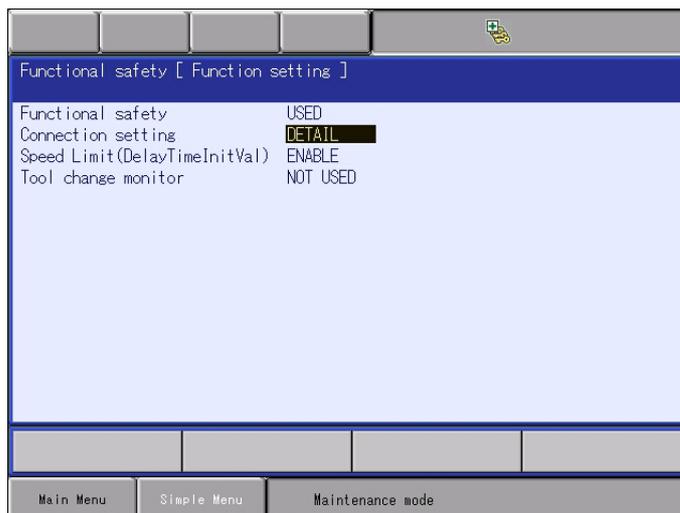


6 Common Settings

6.7 Disabling Functional Safety by Changing Connection Settings

5. Change to set “NOT USED” for the functional safety board to invalidate.

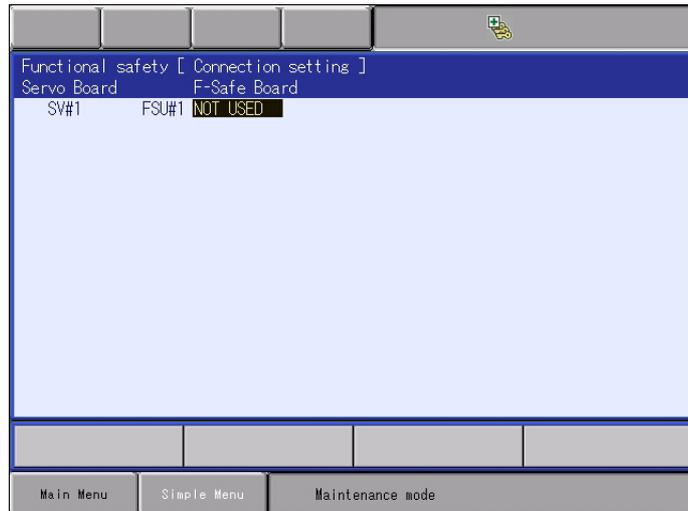


6. Press [ENTER] twice, and a dialog box asking “Modify?” appears.
– Select “YES”.

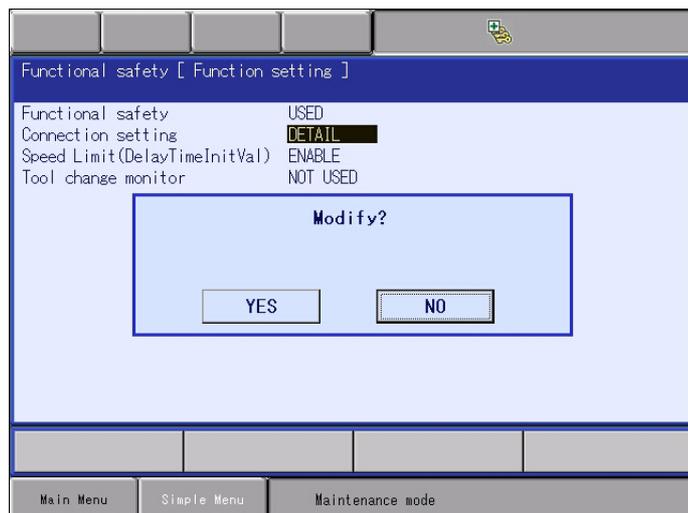


6 Common Settings

6.7 Disabling Functional Safety by Changing Connection Settings

- Select “YES”, and a dialog box asking “Initialize related files?” appears.
- If the setting related to functional safety has already specified, select “NO”. (When “YES” is selected, the setting related to functional safety will be initialized.)

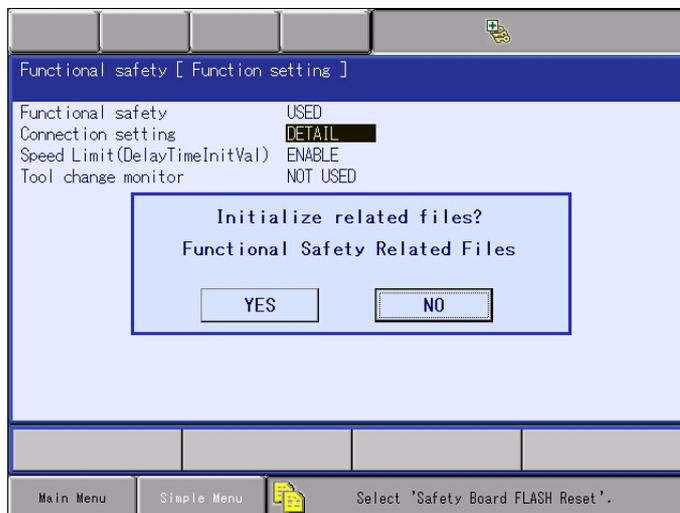


7. Select {FILE} under the main menu, and then select {INITIALIZE} under the sub menu.
 - The INITIALIZE window appears.

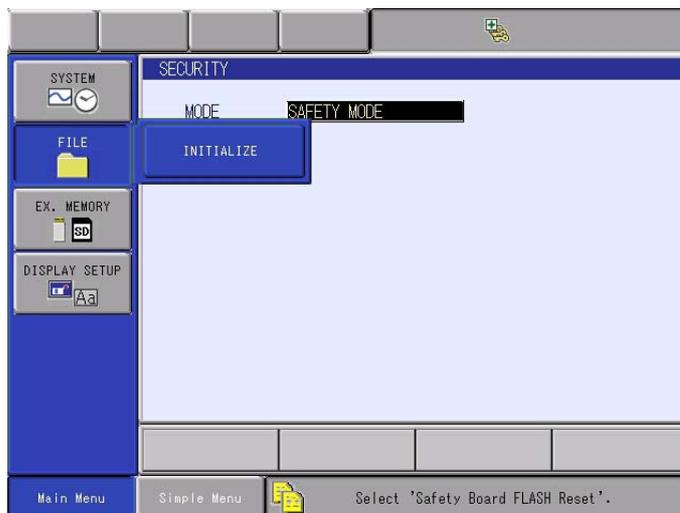


6 Common Settings

6.7 Disabling Functional Safety by Changing Connection Settings

8. Move the cursor and select “Safety Board FLASH Reset” on the window.

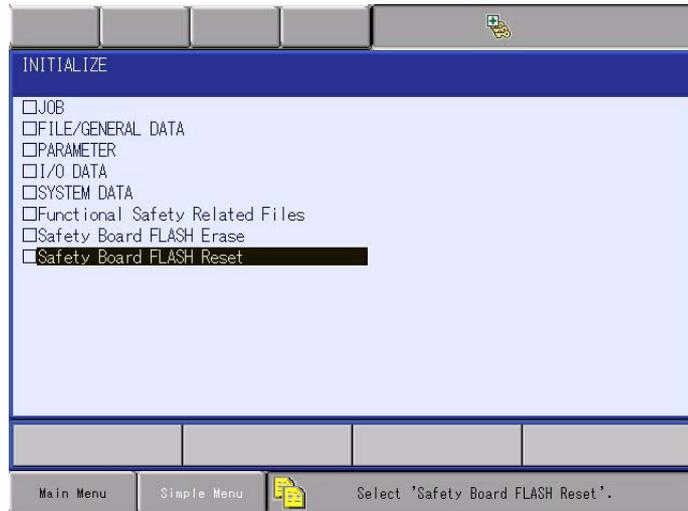

9. Select “YES” when a dialog box asking "Reset?" appears.
- Data of the safety circuit board is reset. A few seconds later, a beep will sound, indicating that the data of the safety circuit board has been reset.

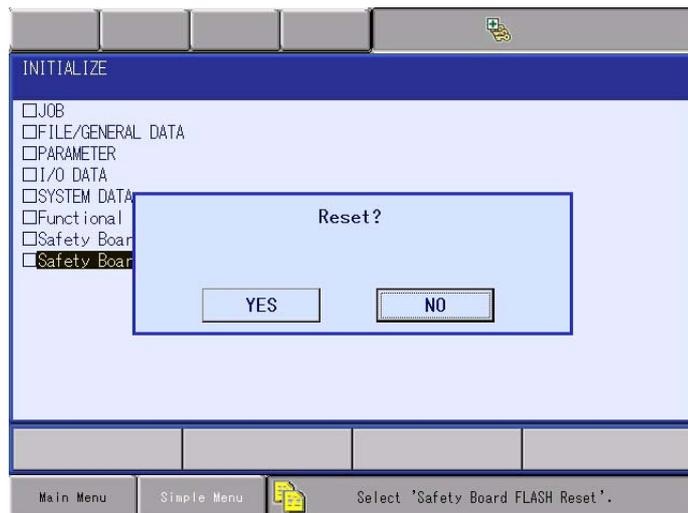

10. Turn ON the controller power supply.



When validating the functional safety again, perform setting in the same procedures as described in this chapter, and change the functional safety to validate to "USED" in step 5.

7 Data Protection

7.1 Saving Dual Data

The data related to the safety function is saved in the safety circuit board memory in a duplicated manner for safety.

When the control power is turned ON, check is performed to see that dual data sets are the same.

If they are different when the control power is turned ON, the following alarm occurs.

Alarm 0300: "VERIFY ERROR(SYSTEM CONFIG-DATA)[10]"

In the system with the functional safety function, a message "Select 'Safety Board FLASH Reset' in the maintenance mode" is displayed after the following operations.

Turning ON or OFF causes error in verification.

- The data related to the safety function is loaded from an external storage.
- A parameter related to the safety function is rewritten by setting operations in maintenance mode.
- The zeroing function is performed.
- Encoder is reset

In case one of the above mentioned operations is performed, re-set the data following the procedures shown in *chapter 7.2 "FLASH Data Reset"*.

In the maintenance mode, there are cases when parameters related to the safety function are rewritten by several setting operations.

For this reason, the message "Select 'Safety Board FLASH Reset'" may be displayed.

Perform the safety board FLASH reset operation by following the procedure shown in *chapter 7.2*.

7.2 FLASH Data Reset

If the following alarm occurs when the control power supply is turned ON,
Alarm 0300: "VERIFY ERROR(SYSTEM CONFIG-DATA)[10]"


perform the following operations to re-set the data of the function safety board.

1. When the controller power is turned ON,
Alarm 0300: "VERIFY ERROR(SYSTEM CONFIG-DATA)[10]" occurs and the maintenance mode is started up.
2. Select {SYSTEM} under the main menu, and then select {SECURITY} to change the security mode to the safety mode.



3. Select {FILE} under the main menu, and then select {INITIALIZE} under the sub menu.

– The INITIALIZE window appears.

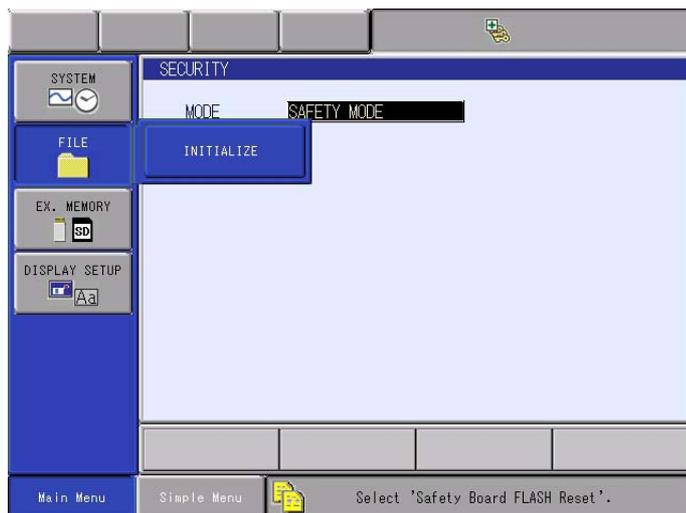


7 Data Protection

7.2 FLASH Data Reset

4. Move the cursor to “Safety Board FLASH Reset” and press [ENTER].



5. The dialog box “Reset?” is displayed. Select “YES”.
 - The data of the safety circuit board is re-set. A few seconds later, a beep sounds and the data setting is completed.

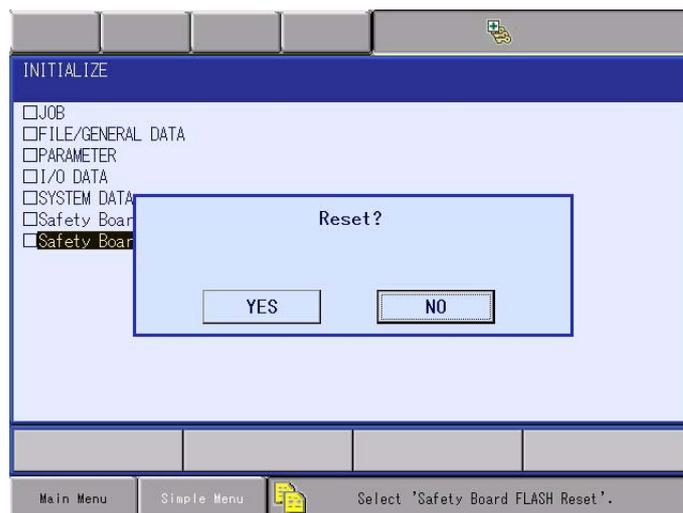

6. When the data reset is completed, turn the control power OFF and then turn the power ON again.

7.3 Change of Condition File by an External Device

When using the functional safety function, the data used for the setting of safety monitoring must not be modified by an external device. Therefore, when loading the condition file from the external memory device, loading is allowed only when it is confirmed that the contents of the saved file have not been modified.

7.3.1 Outputting the CRC Value to the External Memory Device

When the file (shown in table 7-1) referred to for the functional safety is saved in the external memory device, the CRC value is added into the file. The CRC value, which is created based on the file data, is a fixed value unless the contents of the file are modified. When the CRC value created from the contents of the data which is read during file loading and the CRC value added into the file are different, an alarm 4796: "Functional Safety Data CRC Error" occurs.

(e.g.)Tool file

```
//TOOL 0
///CRC 4294967294 (CRC value)
///NAME standard tool
0.000, 0. 000, 0. 000, 0. 0000, 0.0000, 0. 0000
0.000, 0. 000, 0. 000
0.000.
0.000, 0. 000, 0. 000
0.000, 0, 1
```

Table 7-1: Files to which the CRC Value is output while Functional Safety is Valid

File	File name of the external memory device
Tool file	TOOL.CND
Tool interference protection file	TOOLINTF.DAT
Home position calibration data	ABSO.DAT
Axis range limit data	AXRNGMT.DAT
Axis speed monitor data	AXSPDMON.DAT
Robot range limit data	RBRNGMT.DAT
Speed limit data	SPDLMT.DAT
Tool angle monitor data	TLANGMON.DAT
Tool change monitor data / Tool number select data	TLCHGMON.DAT
Functional definition parameter	FD.PRM
System definition parameter	SD.PRM
Servo parameter	SV.PRM
Servo motor parameter	SVM.PRM
Robot match parameter	RC.PRM
Coordinate origin parameter	RO.PRM
Motion function parameter	MF.PRM
Robot expand parameter	RE.PRM
Safety function parameter	FMS.PRM
System match parameter	SC.PRM

7 Data Protection

7.3 Change of Condition File by an External Device



Since the CRC value has not been added to the file saved in the system in which functional safety is invalid, the file cannot be loaded in the system in which functional safety is valid.

7.3.2 Confirming Method of the CRC Value

The CRC value of each data can be confirmed in the TOTAL CRC CONFIRM window. The TOTAL CRC CONFIRM window appears when selecting {SAFETY FUNC.} and then selecting {TOTAL CRC CONFIRM} under the main menu.

In this window the CRC value and the date of the last update of each data are shown.

CRC value: the CRC value calculated from the file data.

The same value is shown as the value which is output to the file when the file is saved in the external memory device.

The file is usually updated simultaneously when modifying the data. However, when performing the modification in which the Functional Safety Board FLASH Reset is necessary, an asterisk appears, and then the value is shown after resetting the Functional Safety Board Flash.

Last update date: The last date and time when the file was modified (edited, loaded, or initialized) are shown.

In case that the data has not been modified since the system started operating, an asterisk is shown.

TOTAL CRC CONFIRM		
TOOL		0381761669
	LAST UPDATE	2017/06/01 15:56
TOOL INTERFERE		4263051367
	LAST UPDATE	2017/06/01 15:56
HOME POS CALIB		0726273504
	LAST UPDATE	2017/06/01 15:56
AXIS RANGE LIMIT		1022308666
	LAST UPDATE	2017/06/01 15:57
AXIS SPEED MONITOR		1240835465
	LAST UPDATE	2017/06/01 15:58
ROBOT RANGE LIMIT		2902879382
	LAST UPDATE	2017/06/01 15:58
SPEED LIMIT		3729081368
	LAST UPDATE	2017/06/01 15:58
TOOL ANGLE MONITOR		1558066036
	LAST UPDATE	2017/06/01 15:58
TOOL CHANGE MONITOR		4142362942
	LAST UPDATE	2017/06/01 16:13
FCTN DEF PRMTR		3331128217
	LAST UPDATE	2017/06/01 16:01
SYS DEF PRMTR		1122414420
	LAST UPDATE	2017/06/01 16:01
SERVO PRMTR		3708503248
	LAST UPDATE	2017/06/01 16:02
SERVOMOTOR PRMTR		2106023497
	LAST UPDATE	2017/06/01 16:03
ROBOT MATCH PRMTR		1476936196
	LAST UPDATE	2017/06/01 16:02
COORD ORG PRMTR		1809399432
	LAST UPDATE	2017/06/01 16:02
MOTION FUNC PRMTR		0963122547
	LAST UPDATE	2017/06/01 16:02
ROBOT EXPAND PRMTR		2220197393
	LAST UPDATE	2017/06/01 16:02
SAFETY FUNCTION PRMTR		1404740907
	LAST UPDATE	2017/06/01 16:00
SYS MATCH PRMTR		1963183572
	LAST UPDATE	2017/06/01 16:01
SAFETY LOGIC CIRCUIT		0438869801
	LAST UPDATE	2017/06/01 16:03
SAFETY LOGIC CIRCUIT(SYSTEM)		0438869801
	LAST UPDATE	2017/06/01 16:03

7 Data Protection

7.3 Change of Condition File by an External Device




The indication method of the TOTAL CRC CONFIRM window changes in the system software version YAS2.80.00A(□)-00 or later.

This window shows the last update of the total safety number derived from the CRC value of each data to be monitored by "monitoring target setting".

The CRC of each data can be sorted by data type by pressing {PAGE}.

For the data monitoring in the TOTAL CRC CONFIRM window, refer to *chapter 7.3.4 "Data Monitor on the Total CRC Confirmation Window"*.

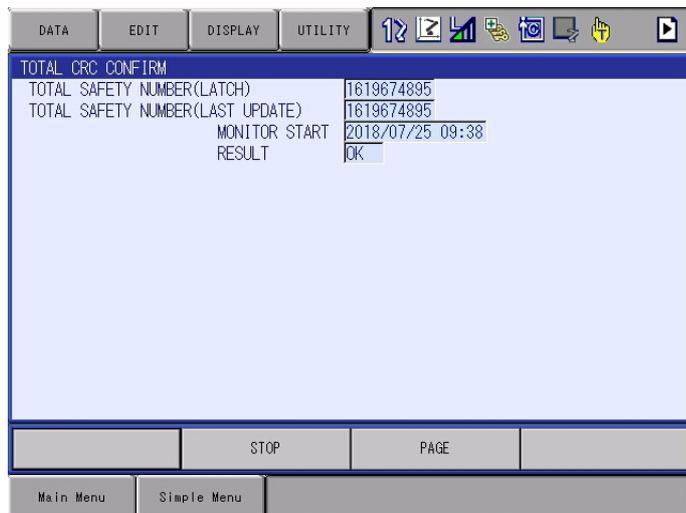

"TOTAL SAFETY NUMBER" window shows the following items.

Item	Description
TOTAL SAFETY NUMBER (LATCH)	"LAST UPDATE" when pressing {START}
TOTAL SAFETY NUMBER (LAST UPDATE)	The last update value of CRC for each data included in the "monitoring target setting"
MONITOR START	The last date and time when pressing {START}
RESULT	OK: The latch and the last update of the TOTAL SAFETY NUMBER are equal, and the data included in "monitoring target setting" is not changed. NG: The latch and the last update of the TOTAL SAFETY NUMBER are different, and the data included in "monitoring target setting" is changed.

7 Data Protection

7.3 Change of Condition File by an External Device

“Each data” window shows below. The window when “SAFETY LOGIC CIRCUIT” included in “monitoring target setting” is selected is shown as an example.



The descriptions of the items to be displayed are as follows.

Item	Description
CRC (LATCH)	“LAST UPDATE” is reflected when pressing {START}. If not included in “monitoring target setting”, asterisks are displayed.
LAST UPDATE (LATCH)	“LAST UPDATE” is reflected when pressing {START}. If not included in “monitoring target setting”, asterisks are displayed.
CRC (LAST UPDATE)	The last update CRC value is displayed. However, in the functional safety function-relevant files, asterisks are displayed and the value is updated after the functional safety FLASH reset. Also, this value is consistent with the CRC value output to the file when saving to the external memory.
LAST UPDATE (LAST UPDATE)	The last update date and time is displayed. When never changed since the system started, asterisks are displayed.

7 Data Protection

7.3 Change of Condition File by an External Device

The data types that the CRC can be displayed, corresponding to the valid/invalid of the optional function, are shown in the following table.

○: Display ×: Non-Display

	Valid/Invalid of Optional Function			
	Invalid	Valid	Valid	Valid
Safety logic circuit expanded function	Invalid	Valid	Valid	Valid
Safety fieldbus	Invalid	Invalid	Valid	Valid
Functional safety	Invalid	Invalid	Invalid	Valid
Data Type	Display Possible / Impossible			
Total safety number	○	○	○	○
Safety logic circuit	○	○	○	○
Machine safety signal allocation	○	×	×	×
Timer delay	○	○	○	○
Safety signal board allocation	×	×	○	○
Functional safety signal allocation	×	×	×	○ (*)
Safety circuit expanded signal allocation	×	×	×	○ (*)
Timer	×	○	○	○
Safety circuit signal display setting	×	○	○	○
Tool	×	×	×	○
Tool interference	×	×	×	○
Home position calibration	×	×	×	○
Axis range limit	×	×	×	○
Axis speed monitor	×	×	×	○
Robot range limit	×	×	×	○
Speed limit	×	×	×	○
Tool angle monitor	×	×	×	○
Tool change monitor	×	×	×	○
Functional definition parameter	×	×	×	○
System definition parameter	×	×	×	○
Servo parameter	×	×	×	○
Servo motor parameter	×	×	×	○
Robot match parameter	×	×	×	○
Coordinate origin parameter	×	×	×	○
Motion function parameter	×	×	×	○
Robot expand parameter	×	×	×	○
Safety function parameter	×	×	×	○

(*) The functional safety signal allocation and the safety circuit expanded signal allocation are displayed when both the safety logic circuit expanded function and the functional safety are valid.

7 Data Protection
7.3 Change of Condition File by an External Device

7.3.3 Register Output of the CRC Value

By outputting the CRC value which is shown in the TOTAL CRC CONFIRM window to the general-purpose register, an external device can confirm that the file has been modified. By setting the parameter S4C1180 to S4C1207 shown in *table 7-2 "Allocation of Parameter for Register output of the CRC Value"*, the user can output the CRC value to the register.

Parameter setting value

0, 559 or more: The CRC value is not output to the general-purpose register.

1 to 558: The CRC value is output to the general-purpose register.

For the target files, refer to *table 7-2*. The two low-order bytes of the CRC value are output to the general-purpose register of specified number, and the two high-order bytes of the CRC value are output to the next general-purpose register.

Table 7-2: Allocation of Parameter for Register output of the CRC Value

Parameter	CRC value output file
S4C1180	Tool file
S4C1181	Tool interference protection file
S4C1182	Home position calibration data
S4C1183	Axis range limit data
S4C1184	Axis speed monitor data
S4C1185	Robot range limit data
S4C1186	Speed limit data
S4C1187	Tool angle monitor data
S4C1188	Tool change monitor data / Tool number select data
S4C1189	Functional definition parameter
S4C1190	System definition parameter
S4C1191	Servo parameter
S4C1192	Servo motor parameter
S4C1193	Robot match parameter
S4C1194	Coordinate origin parameter
S4C1195	Motion function parameter
S4C1196	Robot expand parameter
S4C1197	Safety function parameter
S4C1198	System match parameter
S4C1199	Machine safety signal allocation
S4C1200	Timer delay setting
S4C1201	Safety signal board allocation
S4C1202	Functional safety signal allocation
S4C1203	Safety circuit expanded signal allocation
S4C1204	Timer setting
S4C1205	Safety circuit signal display setting
S4C1206	Safety logic circuit
S4C1207	Safety logic circuit (System)

7 Data Protection
7.3 Change of Condition File by an External Device



- When the general-purpose register which is specified as the output destination is used as the output destination (the current value of TMR/CNT instruction or the destination of the operating instruction) by the ladder program, the CRC value is not output. When setting, the register number must not be duplicated.
- When the Functional Safety Board FLASH Reset is required (the CRC value is shown as an asterisk on the TOTAL CRC CONFIRM window), the CRC value before updating is output to the general-purpose register.
- The CRC value of both the safety logic circuit and the safety logic circuit (system part) cannot be output.

7 Data Protection
 7.3 Change of Condition File by an External Device

7.3.4 Data Monitor on the Total CRC Confirmation Window


On the total CRC confirmation window, the data to monitor can be selected and monitored.

The procedure of the data monitor on the total CRC confirmation window is as follows.

1. Change the mode to the security mode, and then select {SAFETY FUNC.} → {TOTAL CRC CONFIRM} under the main menu.
 - TOTAL CRC CONFIRM window appears.



2. Select {EDIT} → {SET CRC MONITOR}, and set the MONITOR to the Include/Not include.
 - If “STOP” is displayed on “TOTAL CRC CONFIRM” window, press “STOP” before setting.
 - When returning to “TOTAL CRC CONFIRM” window from “SET CRC MONITOR” window, press {RETURN}.
 - After setting, press {START}. Monitoring will start.

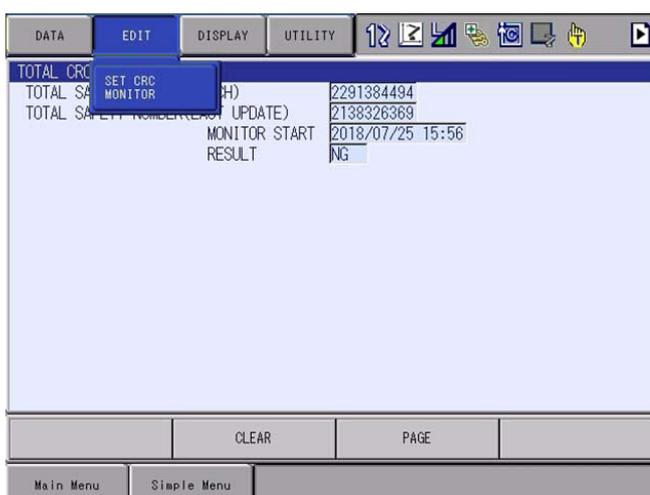

7 Data Protection
 7.3 Change of Condition File by an External Device



3. RESULT can be confirmed on the page of “Total safety number” on the TOTAL CRC CONFIRM window, on “SET CRC MONITOR” window, and by the specific output signal.
 - The page of total safety number



“TOTAL SAFETY NUMBER” window shows the following items.

Item	Meaning
TOTAL SAFETY NUMBER (LATCH)	“LAST UPDATE” when pressing {START}
TOTAL SAFETY NUMBER (LAST UPDATE)	The last update value of CRC for each data included in “MONITOR”
MONITOR START	The last date and time when pressing {START}
RESULT	OK: The latch and the last update of the TOTAL SAFETY NUMBER are equal, and the data included in “MONITOR” is not changed. NG: The latch and the last update of the TOTAL SAFETY NUMBER are not equal, and the data included in “MONITOR” is changed.

7 Data Protection

7.3 Change of Condition File by an External Device

– SET MONITOR window

When the data set to “Include” on “MONITOR” is changed, NG is displayed on “RESULT”.

Only the items that included in the MONITOR during data monitor are displayed on the RESULT.



	MONITOR	RESULT
SAFETY LOGIC CIRCUIT	Include	NG
M-SAFETY SIGNAL ALLOC	Include	OK
TIMER DELAY	Include	OK
SAFETY SIG. BOARD ALLOC	Include	OK
F-SAFETY SIGNAL ALLOC	Include	OK
SLC EXT. SIGNAL ALLOC	Not include	
TIMER	Include	OK
SLC SIGNAL DISPLAY SET	Include	OK
TOOL	Include	OK
TOOL INTERFERE	Include	OK
HOME POS CALIB	Include	OK
AXIS RANGE LIMIT	Include	OK
AXIS SPEED MONITOR	Include	OK
ROBOT RANGE LIMIT	Include	OK

7 Data Protection
7.3 Change of Condition File by an External Device

– Specific output signal

For the monitoring result of each item, output to the specific output signal. For the item included in the MONITOR, when the CRC (LATCH) and the CRC (LAST UPDATE) are same, ON is output, and when not same, OFF is output. For the item not included in the MONITOR, OFF is output.

Item	Specific output signal	Output value
Total safety number	#52590	ON: RESULT OK OFF: RESULT NG or Out of a Monitoring target
Safety logic circuit	#52591	
Machine safety signal allocation	#52592	
Timer delay	#52593	
Safety signal board allocation	#52594	
Functional safety signal allocation	#52595	
Safety circuit expanded signal allocation	#52596	
Timer	#52597	
Safety circuit signal display setting	#52600	
Tool	#52601	
Tool interference	#52602	
Home position calibration	#52603	
Axis range limit	#52604	
Axis speed monitor	#52605	
Robot range limit	#52606	
Speed limit	#52607	
Tool angle monitor	#52610	
Tool change monitor / Tool number select	#52611	
Functional definition parameter	#52612	
System definition parameter	#52613	
Servo parameter	#52614	
Servo motor parameter	#52615	
Robot match parameter	#52616	
Coordinate origin parameter	#52617	
Motion function parameter	#52620	
Robot expand parameter	#52621	
Safety function parameter	#52622	
Safety logic circuit (System)	#52623	
System match parameter	#52624	

8 Specific Output Signal

Signals shown below are output to the concurrent I/O while the functional safety is used.



Signals output to the concurrent I/O are auxiliary signals only to check the status of the functional safety.

To implement the safety monitoring, use the safety output signal. (Refer to *chapter 5 "Safety Signal"* .)

- 52010 to 52047

Outputs the monitoring status (valid/invalid) of each condition file of the axis range limit function.

ON: Monitoring is valid

OFF: Monitoring is invalid

52017	52016	52015	52014	52013	52012	52011	52010
SOUT#1608	SOUT#1607	SOUT#1606	SOUT#1605	SOUT#1604	SOUT#1603	SOUT#1602	SOUT#1601
Axis range limit							
Condition file 8	Condition file 7	Condition file 6	Condition file 5	Condition file 4	Condition file 3	Condition file 2	Condition file 1
Valid/Invalid							

52027	52026	52025	52024	52023	52022	52021	52020
SOUT#1616	SOUT#1615	SOUT#1614	SOUT#1613	SOUT#1612	SOUT#1611	SOUT#1610	SOUT#1609
Axis range limit	Axis range limit						
Condition file 16	Condition file 15	Condition file 14	Condition file 13	Condition file 12	Condition file 11	Condition file 10	Condition file 9
Valid/Invalid	Valid/Invalid						

52037	52036	52035	52034	52033	52032	52031	52030
SOUT#1624	SOUT#1623	SOUT#1622	SOUT#1621	SOUT#1620	SOUT#1619	SOUT#1618	SOUT#1617
Axis range limit							
Condition file 24	Condition file 23	Condition file 22	Condition file 21	Condition file 20	Condition file 19	Condition file 18	Condition file 17
Valid/Invalid							

52047	52046	52045	52044	52043	52042	52041	52040
SOUT#1632	SOUT#1631	SOUT#1630	SOUT#1629	SOUT#1628	SOUT#1627	SOUT#1626	SOUT#1625
Axis range limit							
Condition file 32	Condition file 31	Condition file 30	Condition file 29	Condition file 28	Condition file 27	Condition file 26	Condition file 25
Valid/Invalid							

8 Specific Output Signal

- 52050 to 52087
Outputs the monitoring status (valid/invalid) of each condition file of the axis speed monitor function.
ON: Monitoring is valid
OFF: Monitoring is invalid

52057	52056	52055	52054	52053	52052	52051	52050
SOUT#1640	SOUT#1639	SOUT#1638	SOUT#1637	SOUT#1636	SOUT#1635	SOUT#1634	SOUT#1633
Axis speed monitor Condition file 8 Valid/Invalid	Axis speed monitor Condition file 7 Valid/Invalid	Axis speed monitor Condition file 6 Valid/Invalid	Axis speed monitor Condition file 5 Valid/Invalid	Axis speed monitor Condition file 4 Valid/Invalid	Axis speed monitor Condition file 3 Valid/Invalid	Axis speed monitor Condition file 2 Valid/Invalid	Axis speed monitor Condition file 1 Valid/Invalid

52067	52066	52065	52064	52063	52062	52061	52060
SOUT#1648	SOUT#1647	SOUT#1646	SOUT#1645	SOUT#1644	SOUT#1643	SOUT#1642	SOUT#1641
Axis speed monitor Condition file 16 Valid/Invalid	Axis speed monitor Condition file 15 Valid/Invalid	Axis speed monitor Condition file 14 Valid/Invalid	Axis speed monitor Condition file 13 Valid/Invalid	Axis speed monitor Condition file 12 Valid/Invalid	Axis speed monitor Condition file 11 Valid/Invalid	Axis speed monitor Condition file 10 Valid/Invalid	Axis speed monitor Condition file 9 Valid/Invalid

52077	52076	52075	52074	52073	52072	52071	52070
SOUT#1656	SOUT#1655	SOUT#1654	SOUT#1653	SOUT#1652	SOUT#1651	SOUT#1650	SOUT#1649
Axis speed monitor Condition file 24 Valid/Invalid	Axis speed monitor Condition file 23 Valid/Invalid	Axis speed monitor Condition file 22 Valid/Invalid	Axis speed monitor Condition file 21 Valid/Invalid	Axis speed monitor Condition file 20 Valid/Invalid	Axis speed monitor Condition file 19 Valid/Invalid	Axis speed monitor Condition file 18 Valid/Invalid	Axis speed monitor Condition file 17 Valid/Invalid

52087	52086	52085	52084	52083	52082	52081	52080
SOUT#1664	SOUT#1663	SOUT#1662	SOUT#1661	SOUT#1660	SOUT#1659	SOUT#1658	SOUT#1657
Axis speed monitor Condition file 32 Valid/Invalid	Axis speed monitor Condition file 31 Valid/Invalid	Axis speed monitor Condition file 30 Valid/Invalid	Axis speed monitor Condition file 29 Valid/Invalid	Axis speed monitor Condition file 28 Valid/Invalid	Axis speed monitor Condition file 27 Valid/Invalid	Axis speed monitor Condition file 26 Valid/Invalid	Axis speed monitor Condition file 25 Valid/Invalid

8 Specific Output Signal

• 52090 to 52127

Outputs the monitoring status (valid/invalid) of each condition file of the robot range limit function.

ON: Monitoring is valid

OFF: Monitoring is invalid

52097	52096	52095	52094	52093	52092	52091	52090
SOUT#1672	SOUT#1671	SOUT#1670	SOUT#1669	SOUT#1668	SOUT#1667	SOUT#1666	SOUT#1665
Robot range limit Condition file 8 Valid/Invalid	Robot range limit Condition file 7 Valid/Invalid	Robot range limit Condition file 6 Valid/Invalid	Robot range limit Condition file 5 Valid/Invalid	Robot range limit Condition file 4 Valid/Invalid	Robot range limit Condition file 3 Valid/Invalid	Robot range limit Condition file 2 Valid/Invalid	Robot range limit Condition file 1 Valid/Invalid

52107	52106	52105	52104	52103	52102	52101	52100
SOUT#1680	SOUT#1679	SOUT#1678	SOUT#1677	SOUT#1676	SOUT#1675	SOUT#1674	SOUT#1673
Robot range limit Condition file 16 Valid/Invalid	Robot range limit Condition file 15 Valid/Invalid	Robot range limit Condition file 14 Valid/Invalid	Robot range limit Condition file 13 Valid/Invalid	Robot range limit Condition file 12 Valid/Invalid	Robot range limit Condition file 11 Valid/Invalid	Robot range limit Condition file 10 Valid/Invalid	Robot range limit Condition file 9 Valid/Invalid

52117	52116	52115	52114	52113	52112	52111	52110
SOUT#1688	SOUT#1687	SOUT#1686	SOUT#1685	SOUT#1684	SOUT#1683	SOUT#1682	SOUT#1681
Robot range limit Condition file 24 Valid/Invalid	Robot range limit Condition file 23 Valid/Invalid	Robot range limit Condition file 22 Valid/Invalid	Robot range limit Condition file 21 Valid/Invalid	Robot range limit Condition file 20 Valid/Invalid	Robot range limit Condition file 19 Valid/Invalid	Robot range limit Condition file 18 Valid/Invalid	Robot range limit Condition file 17 Valid/Invalid

52127	52126	52125	52124	52123	52122	52121	52120
SOUT#1696	SOUT#1695	SOUT#1694	SOUT#1693	SOUT#1692	SOUT#1691	SOUT#1690	SOUT#1689
Robot range limit Condition file 32 Valid/Invalid	Robot range limit Condition file 31 Valid/Invalid	Robot range limit Condition file 30 Valid/Invalid	Robot range limit Condition file 29 Valid/Invalid	Robot range limit Condition file 28 Valid/Invalid	Robot range limit Condition file 27 Valid/Invalid	Robot range limit Condition file 26 Valid/Invalid	Robot range limit Condition file 25 Valid/Invalid

8 Specific Output Signal

- 52130 to 52167
Outputs the monitoring status (valid/invalid) of each condition file of the speed limit function.
ON: Monitoring is valid
OFF: Monitoring is invalid

52137	52136	52135	52134	52133	52132	52131	52130
SOUT#1704	SOUT#1703	SOUT#1702	SOUT#1701	SOUT#1700	SOUT#1699	SOUT#1698	SOUT#1697
Speed limit Condition file 8 Valid/Invalid	Speed limit Condition file 7 Valid/Invalid	Speed limit Condition file 6 Valid/Invalid	Speed limit Condition file 5 Valid/Invalid	Speed limit Condition file 4 Valid/Invalid	Speed limit Condition file 3 Valid/Invalid	Speed limit Condition file 2 Valid/Invalid	Speed limit Condition file 1 Valid/Invalid

52147	52146	52145	52144	52143	52142	52141	52140
SOUT#1712	SOUT#1711	SOUT#1710	SOUT#1709	SOUT#1708	SOUT#1707	SOUT#1706	SOUT#1705
Speed limit Condition file 16 Valid/Invalid	Speed limit Condition file 15 Valid/Invalid	Speed limit Condition file 14 Valid/Invalid	Speed limit Condition file 13 Valid/Invalid	Speed limit Condition file 12 Valid/Invalid	Speed limit Condition file 11 Valid/Invalid	Speed limit Condition file 10 Valid/Invalid	Speed limit Condition file 9 Valid/Invalid

52157	52156	52155	52154	52153	52152	52151	52150
SOUT#1720	SOUT#1719	SOUT#1718	SOUT#1717	SOUT#1716	SOUT#1715	SOUT#1714	SOUT#1713
Speed limit Condition file 24 Valid/Invalid	Speed limit Condition file 23 Valid/Invalid	Speed limit Condition file 22 Valid/Invalid	Speed limit Condition file 21 Valid/Invalid	Speed limit Condition file 20 Valid/Invalid	Speed limit Condition file 19 Valid/Invalid	Speed limit Condition file 18 Valid/Invalid	Speed limit Condition file 17 Valid/Invalid

52167	52166	52165	52164	52163	52162	52161	52160
SOUT#1728	SOUT#1727	SOUT#1726	SOUT#1725	SOUT#1724	SOUT#1723	SOUT#1722	SOUT#1721
Speed limit Condition file 32 Valid/Invalid	Speed limit Condition file 31 Valid/Invalid	Speed limit Condition file 30 Valid/Invalid	Speed limit Condition file 29 Valid/Invalid	Speed limit Condition file 28 Valid/Invalid	Speed limit Condition file 27 Valid/Invalid	Speed limit Condition file 26 Valid/Invalid	Speed limit Condition file 25 Valid/Invalid

8 Specific Output Signal

• 52130 to 52167

Outputs the monitoring status (valid/invalid) of each condition file of the tool angle monitor function.

ON: Monitoring is valid

OFF: Monitoring is invalid

52177	52176	52175	52174	52173	52172	52171	52170
SOUT#1736	SOUT#1735	SOUT#1734	SOUT#1733	SOUT#1732	SOUT#1731	SOUT#1730	SOUT#1729
Tool angle monitor Condition file 8 Valid/Invalid	Tool angle monitor Condition file 7 Valid/Invalid	Tool angle monitor Condition file 6 Valid/Invalid	Tool angle monitor Condition file 5 Valid/Invalid	Tool angle monitor Condition file 4 Valid/Invalid	Tool angle monitor Condition file 3 Valid/Invalid	Tool angle monitor Condition file 2 Valid/Invalid	Tool angle monitor Condition file 1 Valid/Invalid

52187	52186	52185	52184	52183	52182	52181	52180
SOUT#1744	SOUT#1743	SOUT#1742	SOUT#1741	SOUT#1740	SOUT#1739	SOUT#1738	SOUT#1737
Tool angle monitor Condition file 16 Valid/Invalid	Tool angle monitor Condition file 15 Valid/Invalid	Tool angle monitor Condition file 14 Valid/Invalid	Tool angle monitor Condition file 13 Valid/Invalid	Tool angle monitor Condition file 12 Valid/Invalid	Tool angle monitor Condition file 11 Valid/Invalid	Tool angle monitor Condition file 10 Valid/Invalid	Tool angle monitor Condition file 9 Valid/Invalid

52197	52196	52195	52194	52193	52192	52191	52190
SOUT#1752	SOUT#1751	SOUT#1750	SOUT#1749	SOUT#1748	SOUT#1747	SOUT#1746	SOUT#1745
Tool angle monitor Condition file 24 Valid/Invalid	Tool angle monitor Condition file 23 Valid/Invalid	Tool angle monitor Condition file 22 Valid/Invalid	Tool angle monitor Condition file 21 Valid/Invalid	Tool angle monitor Condition file 20 Valid/Invalid	Tool angle monitor Condition file 19 Valid/Invalid	Tool angle monitor Condition file 18 Valid/Invalid	Tool angle monitor Condition file 17 Valid/Invalid

52207	52206	52205	52204	52203	52202	52201	52200
SOUT#1760	SOUT#1759	SOUT#1758	SOUT#1757	SOUT#1756	SOUT#1755	SOUT#1754	SOUT#1753
Tool angle monitor Condition file 32 Valid/Invalid	Tool angle monitor Condition file 31 Valid/Invalid	Tool angle monitor Condition file 30 Valid/Invalid	Tool angle monitor Condition file 29 Valid/Invalid	Tool angle monitor Condition file 28 Valid/Invalid	Tool angle monitor Condition file 27 Valid/Invalid	Tool angle monitor Condition file 26 Valid/Invalid	Tool angle monitor Condition file 25 Valid/Invalid

8 Specific Output Signal

- 52210 to 52367
Outputs the monitoring status (valid/invalid) of each condition file of the tool change monitor function.
ON: Monitoring is valid
OFF: Monitoring is invalid

52217	52216	52215	52214	52213	52212	52211	52210
SOUT#1768	SOUT#1767	SOUT#1766	SOUT#1765	SOUT#1764	SOUT#1763	SOUT#1762	SOUT#1761
Tool change monitor(R1) Condition file 8 Valid/Invalid	Tool change monitor(R1) Condition file 7 Valid/Invalid	Tool change monitor(R1) Condition file 6 Valid/Invalid	Tool change monitor(R1) Condition file 5 Valid/Invalid	Tool change monitor(R1) Condition file 4 Valid/Invalid	Tool change monitor(R1) Condition file 3 Valid/Invalid	Tool change monitor(R1) Condition file 2 Valid/Invalid	Tool change monitor(R1) Condition file 1 Valid/Invalid

52227	52226	52225	52224	52223	52222	52221	52220
SOUT#1776	SOUT#1775	SOUT#1774	SOUT#1773	SOUT#1772	SOUT#1771	SOUT#1770	SOUT#1769
Tool change monitor(R1) Condition file 16 Valid/Invalid	Tool change monitor(R1) Condition file 15 Valid/Invalid	Tool change monitor(R1) Condition file 14 Valid/Invalid	Tool change monitor(R1) Condition file 13 Valid/Invalid	Tool change monitor(R1) Condition file 12 Valid/Invalid	Tool change monitor(R1) Condition file 11 Valid/Invalid	Tool change monitor(R1) Condition file 10 Valid/Invalid	Tool change monitor(R1) Condition file 9 Valid/Invalid

52237	52236	52235	52234	52233	52232	52231	52230
SOUT#1784	SOUT#1783	SOUT#1782	SOUT#1781	SOUT#1780	SOUT#1779	SOUT#1778	SOUT#1777
Tool change monitor(R2) Condition file 8 Valid/Invalid	Tool change monitor(R2) Condition file 7 Valid/Invalid	Tool change monitor(R2) Condition file 6 Valid/Invalid	Tool change monitor(R2) Condition file 5 Valid/Invalid	Tool change monitor(R2) Condition file 4 Valid/Invalid	Tool change monitor(R2) Condition file 3 Valid/Invalid	Tool change monitor(R2) Condition file 2 Valid/Invalid	Tool change monitor(R2) Condition file 1 Valid/Invalid

52247	52246	52245	52244	52243	52242	52241	52240
SOUT#1792	SOUT#1791	SOUT#1790	SOUT#1789	SOUT#1788	SOUT#1787	SOUT#1786	SOUT#1785
Tool change monitor(R2) Condition file 16 Valid/Invalid	Tool change monitor(R2) Condition file 15 Valid/Invalid	Tool change monitor(R2) Condition file 14 Valid/Invalid	Tool change monitor(R2) Condition file 13 Valid/Invalid	Tool change monitor(R2) Condition file 12 Valid/Invalid	Tool change monitor(R2) Condition file 11 Valid/Invalid	Tool change monitor(R2) Condition file 10 Valid/Invalid	Tool change monitor(R2) Condition file 9 Valid/Invalid

52257	52256	52255	52254	52253	52252	52251	52250
SOUT#1800	SOUT#1799	SOUT#1798	SOUT#1797	SOUT#1796	SOUT#1795	SOUT#1794	SOUT#1793
Tool change monitor(R3) Condition file 8 Valid/Invalid	Tool change monitor(R3) Condition file 7 Valid/Invalid	Tool change monitor(R3) Condition file 6 Valid/Invalid	Tool change monitor(R3) Condition file 5 Valid/Invalid	Tool change monitor(R3) Condition file 4 Valid/Invalid	Tool change monitor(R3) Condition file 3 Valid/Invalid	Tool change monitor(R3) Condition file 2 Valid/Invalid	Tool change monitor(R3) Condition file 1 Valid/Invalid

8 Specific Output Signal

52267	52266	52265	52264	52263	52262	52261	52260
SOUT#1808	SOUT#1807	SOUT#1806	SOUT#1805	SOUT#1804	SOUT#1803	SOUT#1802	SOUT#1801
Tool change monitor(R3) Condition file 16 Valid/Invalid	Tool change monitor(R3) Condition file 15 Valid/Invalid	Tool change monitor(R3) Condition file 14 Valid/Invalid	Tool change monitor(R3) Condition file 13 Valid/Invalid	Tool change monitor(R3) Condition file 12 Valid/Invalid	Tool change monitor(R3) Condition file 11 Valid/Invalid	Tool change monitor(R3) Condition file 10 Valid/Invalid	Tool change monitor(R3) Condition file 9 Valid/Invalid

52277	52276	52275	52274	52273	52272	52271	52270
SOUT#1816	SOUT#1815	SOUT#1814	SOUT#1813	SOUT#1812	SOUT#1811	SOUT#1810	SOUT#1809
Tool change monitor(R4) Condition file 8 Valid/Invalid	Tool change monitor(R4) Condition file 7 Valid/Invalid	Tool change monitor(R4) Condition file 6 Valid/Invalid	Tool change monitor(R4) Condition file 5 Valid/Invalid	Tool change monitor(R4) Condition file 4 Valid/Invalid	Tool change monitor(R4) Condition file 3 Valid/Invalid	Tool change monitor(R4) Condition file 2 Valid/Invalid	Tool change monitor(R4) Condition file 1 Valid/Invalid

52287	52286	52285	52284	52283	52282	52281	52280
SOUT#1824	SOUT#1823	SOUT#1822	SOUT#1821	SOUT#1820	SOUT#1819	SOUT#1818	SOUT#1817
Tool change monitor(R4) Condition file 16 Valid/Invalid	Tool change monitor(R4) Condition file 15 Valid/Invalid	Tool change monitor(R4) Condition file 14 Valid/Invalid	Tool change monitor(R4) Condition file 13 Valid/Invalid	Tool change monitor(R4) Condition file 12 Valid/Invalid	Tool change monitor(R4) Condition file 11 Valid/Invalid	Tool change monitor(R4) Condition file 10 Valid/Invalid	Tool change monitor(R4) Condition file 9 Valid/Invalid

52297	52296	52295	52294	52293	52292	52291	52290
SOUT#1832	SOUT#1831	SOUT#1830	SOUT#1829	SOUT#1828	SOUT#1827	SOUT#1826	SOUT#1825
Tool change monitor(R5) Condition file 8 Valid/Invalid	Tool change monitor(R5) Condition file 7 Valid/Invalid	Tool change monitor(R5) Condition file 6 Valid/Invalid	Tool change monitor(R5) Condition file 5 Valid/Invalid	Tool change monitor(R5) Condition file 4 Valid/Invalid	Tool change monitor(R5) Condition file 3 Valid/Invalid	Tool change monitor(R5) Condition file 2 Valid/Invalid	Tool change monitor(R5) Condition file 1 Valid/Invalid

52307	52306	52305	52304	52303	52302	52301	52300
SOUT#1840	SOUT#1839	SOUT#1838	SOUT#1837	SOUT#1836	SOUT#1835	SOUT#1834	SOUT#1833
Tool change monitor(R5) Condition file 16 Valid/Invalid	Tool change monitor(R5) Condition file 15 Valid/Invalid	Tool change monitor(R5) Condition file 14 Valid/Invalid	Tool change monitor(R5) Condition file 13 Valid/Invalid	Tool change monitor(R5) Condition file 12 Valid/Invalid	Tool change monitor(R5) Condition file 11 Valid/Invalid	Tool change monitor(R5) Condition file 10 Valid/Invalid	Tool change monitor(R5) Condition file 9 Valid/Invalid

52317	52316	52315	52314	52313	52312	52311	52310
SOUT#1848	SOUT#1847	SOUT#1846	SOUT#1845	SOUT#1844	SOUT#1843	SOUT#1842	SOUT#1841
Tool change monitor(R6) Condition file 8 Valid/Invalid	Tool change monitor(R6) Condition file 7 Valid/Invalid	Tool change monitor(R6) Condition file 6 Valid/Invalid	Tool change monitor(R6) Condition file 5 Valid/Invalid	Tool change monitor(R6) Condition file 4 Valid/Invalid	Tool change monitor(R6) Condition file 3 Valid/Invalid	Tool change monitor(R6) Condition file 2 Valid/Invalid	Tool change monitor(R6) Condition file 1 Valid/Invalid

8 Specific Output Signal

52327	52326	52325	52324	52323	52322	52321	52320
SOUT#1856	SOUT#1855	SOUT#1854	SOUT#1853	SOUT#1852	SOUT#1851	SOUT#1850	SOUT#1849
Tool change monitor(R6) Condition file 16 Valid/Invalid	Tool change monitor(R6) Condition file 15 Valid/Invalid	Tool change monitor(R6) Condition file 14 Valid/Invalid	Tool change monitor(R6) Condition file 13 Valid/Invalid	Tool change monitor(R6) Condition file 12 Valid/Invalid	Tool change monitor(R6) Condition file 11 Valid/Invalid	Tool change monitor(R6) Condition file 10 Valid/Invalid	Tool change monitor(R6) Condition file 9 Valid/Invalid

52347	52346	52345	52344	52343	52342	52341	52340
SOUT#1872	SOUT#1871	SOUT#1870	SOUT#1869	SOUT#1868	SOUT#1867	SOUT#1866	SOUT#1865
Tool change monitor(R7) Condition file 8 Valid/Invalid	Tool change monitor(R7) Condition file 7 Valid/Invalid	Tool change monitor(R7) Condition file 6 Valid/Invalid	Tool change monitor(R7) Condition file 5 Valid/Invalid	Tool change monitor(R7) Condition file 4 Valid/Invalid	Tool change monitor(R7) Condition file 3 Valid/Invalid	Tool change monitor(R7) Condition file 2 Valid/Invalid	Tool change monitor(R7) Condition file 1 Valid/Invalid

52357	52356	52355	52354	52353	52352	52351	52350
SOUT#1880	SOUT#1879	SOUT#1878	SOUT#1877	SOUT#1876	SOUT#1875	SOUT#1874	SOUT#1873
Tool change monitor(R7) Condition file 16 Valid/Invalid	Tool change monitor(R7) Condition file 15 Valid/Invalid	Tool change monitor(R7) Condition file 14 Valid/Invalid	Tool change monitor(R7) Condition file 13 Valid/Invalid	Tool change monitor(R7) Condition file 12 Valid/Invalid	Tool change monitor(R7) Condition file 11 Valid/Invalid	Tool change monitor(R7) Condition file 10 Valid/Invalid	Tool change monitor(R7) Condition file 9 Valid/Invalid

52357	52356	52355	52354	52353	52352	52351	52350
SOUT#1880	SOUT#1879	SOUT#1878	SOUT#1877	SOUT#1876	SOUT#1875	SOUT#1874	SOUT#1873
Tool change monitor(R8) Condition file 8 Valid/Invalid	Tool change monitor(R8) Condition file 7 Valid/Invalid	Tool change monitor(R8) Condition file 6 Valid/Invalid	Tool change monitor(R8) Condition file 5 Valid/Invalid	Tool change monitor(R8) Condition file 4 Valid/Invalid	Tool change monitor(R8) Condition file 3 Valid/Invalid	Tool change monitor(R8) Condition file 2 Valid/Invalid	Tool change monitor(R8) Condition file 1 Valid/Invalid

52367	52366	52365	52364	52363	52362	52361	52360
SOUT#1888	SOUT#1887	SOUT#1886	SOUT#1885	SOUT#1884	SOUT#1883	SOUT#1882	SOUT#1881
Tool change monitor(R8) Condition file 16 Valid/Invalid	Tool change monitor(R8) Condition file 15 Valid/Invalid	Tool change monitor(R8) Condition file 14 Valid/Invalid	Tool change monitor(R8) Condition file 13 Valid/Invalid	Tool change monitor(R8) Condition file 12 Valid/Invalid	Tool change monitor(R8) Condition file 11 Valid/Invalid	Tool change monitor(R8) Condition file 10 Valid/Invalid	Tool change monitor(R8) Condition file 9 Valid/Invalid

8 Specific Output Signal

• 52370 to 52407

Outputs the monitoring result for each condition file of the axis range limit function.

For details of the output value, refer to *chapter 5.5 "Safety Signal Output Value"*.

52377	52376	52375	52374	52373	52372	52371	52370
SOUT#1896	SOUT#1895	SOUT#1894	SOUT#1893	SOUT#1892	SOUT#1891	SOUT#1890	SOUT#1889
Axis range limit Condition file 8 Monitoring result	Axis range limit Condition file 7 Monitoring result	Axis range limit Condition file 6 Monitoring result	Axis range limit Condition file 5 Monitoring result	Axis range limit Condition file 4 Monitoring result	Axis range limit Condition file 3 Monitoring result	Axis range limit Condition file 2 Monitoring result	Axis range limit Condition file 1 Monitoring result

52387	52386	52385	52384	52383	52382	52381	52380
SOUT#1904	SOUT#1903	SOUT#1902	SOUT#1901	SOUT#1900	SOUT#1899	SOUT#1898	SOUT#1897
Axis range limit Condition file 16 Monitoring result	Axis range limit Condition file 15 Monitoring result	Axis range limit Condition file 14 Monitoring result	Axis range limit Condition file 13 Monitoring result	Axis range limit Condition file 12 Monitoring result	Axis range limit Condition file 11 Monitoring result	Axis range limit Condition file 10 Monitoring result	Axis range limit Condition file 9 Monitoring result

52397	52396	52395	52394	52393	52392	52391	52390
SOUT#1912	SOUT#1911	SOUT#1910	SOUT#1909	SOUT#1908	SOUT#1907	SOUT#1906	SOUT#1905
Axis range limit Condition file 24 Monitoring result	Axis range limit Condition file 23 Monitoring result	Axis range limit Condition file 22 Monitoring result	Axis range limit Condition file 21 Monitoring result	Axis range limit Condition file 20 Monitoring result	Axis range limit Condition file 19 Monitoring result	Axis range limit Condition file 18 Monitoring result	Axis range limit Condition file 17 Monitoring result

52407	52406	52405	52404	52403	52402	52401	52400
SOUT#1920	SOUT#1919	SOUT#1918	SOUT#1917	SOUT#1916	SOUT#1915	SOUT#1914	SOUT#1913
Axis range limit Condition file 32 Monitoring result	Axis range limit Condition file 31 Monitoring result	Axis range limit Condition file 30 Monitoring result	Axis range limit Condition file 29 Monitoring result	Axis range limit Condition file 28 Monitoring result	Axis range limit Condition file 27 Monitoring result	Axis range limit Condition file 26 Monitoring result	Axis range limit Condition file 25 Monitoring result

8 Specific Output Signal

• 52410 to 52447

Outputs the monitoring result for each condition file of the axis speed monitor function.

For details of the output value, refer to *chapter 5.5 "Safety Signal Output Value"*.

52417	52416	52415	52414	52413	52412	52411	52410
SOUT#1928	SOUT#1927	SOUT#1926	SOUT#1925	SOUT#1924	SOUT#1923	SOUT#1922	SOUT#1921
Axis speed monitor Condition file 8 Monitoring result	Axis speed monitor Condition file 7 Monitoring result	Axis speed monitor Condition file 6 Monitoring result	Axis speed monitor Condition file 5 Monitoring result	Axis speed monitor Condition file 4 Monitoring result	Axis speed monitor Condition file 3 Monitoring result	Axis speed monitor Condition file 2 Monitoring result	Axis speed monitor Condition file 1 Monitoring result

52427	52426	52425	52424	52423	52422	52421	52420
SOUT#1936	SOUT#1935	SOUT#1934	SOUT#1933	SOUT#1932	SOUT#1931	SOUT#1930	SOUT#1929
Axis speed monitor Condition file 16 Monitoring result	Axis speed monitor Condition file 15 Monitoring result	Axis speed monitor Condition file 14 Monitoring result	Axis speed monitor Condition file 13 Monitoring result	Axis speed monitor Condition file 12 Monitoring result	Axis speed monitor Condition file 11 Monitoring result	Axis speed monitor Condition file 10 Monitoring result	Axis speed monitor Condition file 9 Monitoring result

52437	52436	52435	52434	52433	52432	52431	52430
SOUT#1944	SOUT#1943	SOUT#1942	SOUT#1941	SOUT#1940	SOUT#1939	SOUT#1938	SOUT#1937
Axis speed monitor Condition file 24 Monitoring result	Axis speed monitor Condition file 23 Monitoring result	Axis speed monitor Condition file 22 Monitoring result	Axis speed monitor Condition file 21 Monitoring result	Axis speed monitor Condition file 20 Monitoring result	Axis speed monitor Condition file 19 Monitoring result	Axis speed monitor Condition file 18 Monitoring result	Axis speed monitor Condition file 17 Monitoring result

52447	52446	52445	52444	52443	52442	52441	52440
SOUT#1952	SOUT#1951	SOUT#1950	SOUT#1949	SOUT#1948	SOUT#1947	SOUT#1946	SOUT#1945
Axis speed monitor Condition file 32 Monitoring result	Axis speed monitor Condition file 31 Monitoring result	Axis speed monitor Condition file 30 Monitoring result	Axis speed monitor Condition file 29 Monitoring result	Axis speed monitor Condition file 28 Monitoring result	Axis speed monitor Condition file 27 Monitoring result	Axis speed monitor Condition file 26 Monitoring result	Axis speed monitor Condition file 25 Monitoring result

8 Specific Output Signal

• 52450 to 52487

Outputs the monitoring result for each condition file of robot range limit function.

For details of the output value, refer to *chapter 5.5 "Safety Signal Output Value"*.

52457	52456	52455	52454	52453	52452	52451	52450
SOUT#1960	SOUT#1959	SOUT#1958	SOUT#1957	SOUT#1956	SOUT#1955	SOUT#1954	SOUT#1953
Robot range limit Condition file 8 Monitoring result	Robot range limit Condition file 7 Monitoring result	Robot range limit Condition file 6 Monitoring result	Robot range limit Condition file 5 Monitoring result	Robot range limit Condition file 4 Monitoring result	Robot range limit Condition file 3 Monitoring result	Robot range limit Condition file 2 Monitoring result	Robot range limit Condition file 1 Monitoring result

52467	52466	52465	52464	52463	52462	52461	52460
SOUT#1968	SOUT#1967	SOUT#1966	SOUT#1965	SOUT#1964	SOUT#1963	SOUT#1962	SOUT#1961
Robot range limit Condition file 16 Monitoring result	Robot range limit Condition file 15 Monitoring result	Robot range limit Condition file 14 Monitoring result	Robot range limit Condition file 13 Monitoring result	Robot range limit Condition file 12 Monitoring result	Robot range limit Condition file 11 Monitoring result	Robot range limit Condition file 10 Monitoring result	Robot range limit Condition file 9 Monitoring result

52477	52476	52475	52474	52473	52472	52471	52470
SOUT#1976	SOUT#1975	SOUT#1974	SOUT#1973	SOUT#1972	SOUT#1971	SOUT#1970	SOUT#1969
Robot range limit Condition file 24 Monitoring result	Robot range limit Condition file 23 Monitoring result	Robot range limit Condition file 22 Monitoring result	Robot range limit Condition file 21 Monitoring result	Robot range limit Condition file 20 Monitoring result	Robot range limit Condition file 19 Monitoring result	Robot range limit Condition file 18 Monitoring result	Robot range limit Condition file 17 Monitoring result

52487	52486	52485	52484	52483	52482	52481	52480
SOUT#1984	SOUT#1983	SOUT#1982	SOUT#1981	SOUT#1980	SOUT#1979	SOUT#1978	SOUT#1977
Robot range limit Condition file 32 Monitoring result	Robot range limit Condition file 31 Monitoring result	Robot range limit Condition file 30 Monitoring result	Robot range limit Condition file 29 Monitoring result	Robot range limit Condition file 28 Monitoring result	Robot range limit Condition file 27 Monitoring result	Robot range limit Condition file 26 Monitoring result	Robot range limit Condition file 25 Monitoring result

8 Specific Output Signal

• 52490 to 52527

Outputs the monitoring result for each condition file of speed limit function.

For details of the output value, refer to *chapter 5.5 "Safety Signal Output Value"*.

52497	52496	52495	52494	52493	52492	52491	52490
SOUT#1992	SOUT#1991	SOUT#1990	SOUT#1989	SOUT#1988	SOUT#1987	SOUT#1986	SOUT#1985
Speed limit Condition file 8 Monitoring result	Speed limit Condition file 7 Monitoring result	Speed limit Condition file 6 Monitoring result	Speed limit Condition file 5 Monitoring result	Speed limit Condition file 4 Monitoring result	Speed limit Condition file 3 Monitoring result	Speed limit Condition file 2 Monitoring result	Speed limit Condition file 1 Monitoring result

52507	52506	52505	52504	52503	52502	52501	52500
SOUT#2000	SOUT#1999	SOUT#1998	SOUT#1997	SOUT#1996	SOUT#1995	SOUT#1994	SOUT#1993
Speed limit Condition file 16 Monitoring result	Speed limit Condition file 15 Monitoring result	Speed limit Condition file 14 Monitoring result	Speed limit Condition file 13 Monitoring result	Speed limit Condition file 12 Monitoring result	Speed limit Condition file 11 Monitoring result	Speed limit Condition file 9 Monitoring result	Speed limit Condition file 8 Monitoring result

52517	52516	52515	52514	52513	52512	52511	52510
SOUT#2008	SOUT#2007	SOUT#2006	SOUT#2005	SOUT#2004	SOUT#2003	SOUT#2002	SOUT#2001
Speed limit Condition file 24 Monitoring result	Speed limit Condition file 23 Monitoring result	Speed limit Condition file 22 Monitoring result	Speed limit Condition file 21 Monitoring result	Speed limit Condition file 20 Monitoring result	Speed limit Condition file 19 Monitoring result	Speed limit Condition file 18 Monitoring result	Speed limit Condition file 17 Monitoring result

52527	52526	52525	52524	52523	52522	52521	52520
SOUT#2016	SOUT#2015	SOUT#2014	SOUT#2013	SOUT#2012	SOUT#2011	SOUT#2010	SOUT#2009
Speed limit Condition file 32 Monitoring result	Speed limit Condition file 31 Monitoring result	Speed limit Condition file 30 Monitoring result	Speed limit Condition file 29 Monitoring result	Speed limit Condition file 28 Monitoring result	Speed limit Condition file 27 Monitoring result	Speed limit Condition file 26 Monitoring result	Speed limit Condition file 25 Monitoring result

8 Specific Output Signal

• 52530 to 52567

Outputs the monitoring result for each condition file of tool angle monitor function.

For details of the output value, refer to *chapter 5.5 "Safety Signal Output Value"*.

52537	52536	52535	52534	52533	52532	52531	52530
SOUT#2024	SOUT#2023	SOUT#2022	SOUT#2021	SOUT#2020	SOUT#2019	SOUT#2018	SOUT#2017
Tool angle monitor Condition file 8 Monitoring result	Tool angle monitor Condition file 7 Monitoring result	Tool angle monitor Condition file 6 Monitoring result	Tool angle monitor Condition file 5 Monitoring result	Tool angle monitor Condition file 4 Monitoring result	Tool angle monitor Condition file 3 Monitoring result	Tool angle monitor Condition file 2 Monitoring result	Tool angle monitor Condition file 1 Monitoring result

52547	52546	52545	52544	52543	52542	52541	52540
SOUT#2032	SOUT#2031	SOUT#2030	SOUT#2029	SOUT#2028	SOUT#2027	SOUT#2026	SOUT#2025
Tool angle monitor Condition file 16 Monitoring result	Tool angle monitor Condition file 15 Monitoring result	Tool angle monitor Condition file 14 Monitoring result	Tool angle monitor Condition file 13 Monitoring result	Tool angle monitor Condition file 12 Monitoring result	Tool angle monitor Condition file 11 Monitoring result	Tool angle monitor Condition file 10 Monitoring result	Tool angle monitor Condition file 9 Monitoring result

52557	52556	52555	52554	52553	52552	52551	52550
SOUT#2040	SOUT#2039	SOUT#2038	SOUT#2037	SOUT#2036	SOUT#2035	SOUT#2034	SOUT#2033
Tool angle monitor Condition file 24 Monitoring result	Tool angle monitor Condition file 23 Monitoring result	Tool angle monitor Condition file 22 Monitoring result	Tool angle monitor Condition file 21 Monitoring result	Tool angle monitor Condition file 20 Monitoring result	Tool angle monitor Condition file 19 Monitoring result	Tool angle monitor Condition file 18 Monitoring result	Tool angle monitor Condition file 17 Monitoring result

52567	52566	52565	52564	52563	52562	52561	52560
SOUT#2048	SOUT#2047	SOUT#2046	SOUT#2045	SOUT#2044	SOUT#2043	SOUT#2042	SOUT#2041
Tool angle monitor Condition file 32 Monitoring result	Tool angle monitor Condition file 31 Monitoring result	Tool angle monitor Condition file 30 Monitoring result	Tool angle monitor Condition file 29 Monitoring result	Tool angle monitor Condition file 28 Monitoring result	Tool angle monitor Condition file 27 Monitoring result	Tool angle monitor Condition file 26 Monitoring result	Tool angle monitor Condition file 25 Monitoring result

8 Specific Output Signal

- 52570 to 52577
For R1 to R8, outputs the monitoring result of the tool change monitor function.
ON: Normal
OFF: Abnormal

52577	52576	52575	52574	52573	52572	52571	52570
SOUT#2056	SOUT#2055	SOUT#2054	SOUT#2053	SOUT#2052	SOUT#2051	SOUT#2050	SOUT#2049
Tool change monitor (R8) Monitoring result	Tool change monitor (R7) Monitoring result	Tool change monitor (R6) Monitoring result	Tool change monitor (R5) Monitoring result	Tool change monitor (R4) Monitoring result	Tool change monitor (R3) Monitoring result	Tool change monitor (R2) Monitoring result	Tool change monitor (R1) Monitoring result

- 52580 to 52583
Outputs the status of the settings of the function disable mode.
- 52585
The comparison result of the following two tool files: the tool file that was last saved on the safety board and the tool file to use normally is output (TOOL.CND). ON is for the mismatch, and OFF is for the match.

		52585		52583	52582	52581	52580
		SOUT#2062		SOUT#2060	SOUT#2059	SOUT#2058	SOUT#2057
		Tool file		Tool change monitor	Tool angle monitor	Robot range limit	Axis speed monitor
		Comparison mismatch		Function disable mode	Function disable mode	Function disable mode	Function disable mode

8 Specific Output Signal

• 52590 to 52645

The result of the data monitoring in the total CRC confirmation window is output. If the item is included in the monitoring target and is normal, ON is output, if it is abnormal, OFF is output, if it is not included in the monitoring target, OFF is output.

52597	52596	52595	52594	52593	52592	52591	52590
SOUT#2072	SOUT#2071	SOUT#2070	SOUT#2069	SOUT#2068	SOUT#2067	SOUT#2066	SOUT#2065
Timer setting Monitoring result	Safety logic circuit expanded signal allocation Monitoring result	Functional safety signal allocation Monitoring result	Safety signal board allocation Monitoring result	Timer delay setting Monitoring result	Machine safety signal allocation Monitoring result	Safety logic circuit Monitoring result	Total safety number Monitoring result

52607	52606	52605	52604	52603	52602	52601	52600
SOUT#2080	SOUT#2079	SOUT#2078	SOUT#2077	SOUT#2076	SOUT#2075	SOUT#2074	SOUT#2073
Speed limit Monitoring result	Robot range limit Monitoring result	Axis speed monitor Monitoring result	Axis range limit Monitoring result	Home position calibration Monitoring result	Tool interference file Monitoring result	Tool file Monitoring result	Safety logic circuit signal display setting Monitoring result

52617	52616	52615	52614	52613	52612	52611	52610
SOUT#2088	SOUT#2087	SOUT#2086	SOUT#2085	SOUT#2084	SOUT#2083	SOUT#2082	SOUT#2081
Coordinate origin parameter Monitoring result	Robot match parameter Monitoring result	Servo motor parameter Monitoring result	Servo parameter Monitoring result	System definition parameter Monitoring result	Functional definition parameter Monitoring result	Tool change monitor/ Tool number select Monitoring result	Tool angle monitor Monitoring result

					52622	52621	52620
					SOUT#2091	SOUT#2090	SOUT#2089
					Safety function parameter Monitoring result	Robot expand parameter Monitoring result	Motion function parameter Monitoring result

8 Specific Output Signal

		52635	52634	52633	52632	52631	52630
		SOUT#2102	SOUT#2101	SOUT#2100	SOUT#2099	SOUT#2098	SOUT#2097
		Tool change monitor/Tool number select All files are invalid.	Tool angle monitor All files are invalid.	Speed limit All files are invalid.	Robot range limit All files are invalid.	Axis speed monitor All files are invalid.	Axis range limit All files are invalid.

		52645	52644	52643	52642	52641	52640
		SOUT#2110	SOUT#2109	SOUT#2108	SOUT#2107	SOUT#2106	SOUT#2105
		Tool change monitor/Tool number select All files are set to default.	Tool angle monitor All files are set to default.	Speed limit All files are set to default.	Robot range limit All files are set to default.	Axis speed monitor All files are set to default.	Axis range limit All files are set to default.

9	Restriction
9.1	Functions Cannot Be Used Concurrently with Functional Safety Function

9 Restriction

9.1 Functions Cannot Be Used Concurrently with Functional Safety Function

9.1.1 Functions Which Modifies Parameter or File during Playback Operation

As explained in *chapter 7 "Data Protection"*, data of parameters or files are saved in a duplicated manner in the safety circuit board, and are verified for safety.

When modifying these data, special procedures such as read back operations or re-setting of the FLASH data are required.

For this reason, functions that modify parameters or file when executing the play back operation cannot be used concurrently with the functional safety function.

- Speed control function
- PMT function (SETTOOL instruction) (Can be used for YAS2.80.00A(*)-00 or later.)

To use the functional safety and PMT function (SETTOOL instruction) concurrently, refer to *chapter 6.6 "Using the PMT Function Together with the Functional Safety Function"*.

9	Restriction
9.2	Functions Conditionally Used Concurrently with Functional Safety Function

9.2 Functions Conditionally Used Concurrently with Functional Safety Function

9.2.1 Conveyor Synchronized Function, COMARC Function

To the conveyor synchronized function and COMARC function, the speed for other purposes are added along with the normal operation speed in this consequence, there may be a case where the TCP speed or the flange speed cannot be controlled as specified.

Alarms and their countermeasures

Alarm 4785: F-SAFE SPEED MONITOR ERROR

Countermeasure: Set the limit value on the condition file with the calculated value on the basis of the speed added by each function.

Alarm 4786: F-SAFE TEACH SAFETY SPEED ERROR

Countermeasure: The operation speed of the manipulator exceeds the speed limited for the teach mode (250 [mm/sec]). Input a full speed test signal and disable the teach mode speed limit.

For the details, refer to *chapter 4.4.5 "Speed Limit in Teach Mode"*.

9.2.2 Servo Float Function

The manipulator position/speed and feedback position/speed may widely differ while the servo float function is executed. At this time, results of instruction monitoring and feed back monitoring vary.

The safety monitoring starts alarming at the earliest monitoring condition error in the instruction monitoring or feedback monitoring.

The monitoring is normally executed even in the system where the servo float function is available if this function is not executed (FLOATOF).

9.2.3 Motor Gun Function

The safety monitoring for the motor gun axis is not available. Functions such as the robot range limit function for the manipulator with the motor gun are available.

9.2.4 MotoPlus Function and MotoFit Function

When using the path correction function or the increment level movement function in the MotoPlus function or the Motofit function, the speed limit function is not available.

9.2.5 T-axis Endless Function, External Axis Endless Function

Safety monitoring cannot be performed for the axis which performs endless operation. For the axis which does not perform endless operation, safety monitoring is possible.

9	Restriction
9.2	Functions Conditionally Used Concurrently with Functional Safety Function

9.2.6 Gun Change Function and Group Change Function

With the functional safety, the position and the motion speed of the manipulator are calculated based on the feedback from the encoder, to perform a safety monitoring operation.


Thus, safety monitoring for a gun-change axis or a group-change axis whose communication with the encoder is temporarily disconnected cannot be performed.

However, the robot range monitoring, etc. for the manipulator which includes a gun-change axis or a group-change axis can be performed.

9.2.7 Multi Layer Function

When using the multi layer function, the tool angle monitor function cannot be used.

When the angle of the ground installation of the manipulator is except for 0° , the functional safety function is not available.

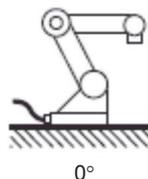

9.3 Restriction of Operation

When the functional safety function is available, operable security mode for the following data varies.

Data	Operation	Security (When functional safety function is available)	Security (When functional safety function is not available)
Tool file	Editing on the tool file window	Safety ¹⁾	Editing
	Tool calibration	Safety	Editing
	Automatic measurement of the tool load and the center of gravity	Safety	Editing
	Loading from the external memory device	Safety	Editing
	File initialization in the maintenance mode	Safety	Editing
Tool interference file	Editing on the tool interference file window	Safety ¹⁾	Editing
	Loading from the external memory device	Safety	Editing
	File initialization in the maintenance mode	Safety	Editing
Home position	Edit on the home position window	Safety	Management
	Loading from the external memory device	Safety	Management
	File initialization in the maintenance mode	Safety	Management
	Zeroing function	Safety	Management
Each parameter ²⁾	Loading from the external memory device	Safety	Management
	File initialization in the maintenance mode	Safety	Management

1 This setting can be changed. For the details, refer to *chapter 6.5 "Security Level Setting for Tool File and Tool Interference Files"*.

2 Object parameters: ALL, RC, SD, RO, FD, SV, SVM, MF, RE, FMS

9.3.1 File/Parameter Loading

After loading the data related to the functional safety, re-set the data by following the procedures described in *chapter 7.2 "FLASH Data Reset"*. (After loading the data related to the functional safety, the message "Select 'Safety Board FLASH Reset' in the maintenance mode." appears.)

The following restrictions apply until the power supply to the YRC1000 is turned OFF.

- The servo cannot be turned ON.
- All of the safety monitoring functions of the functional safety are disabled.

10 Error

Errors related to the settings of the functional safety are listed in the following.

These errors warn the operator that it is impossible to advance to the next operation due to an incorrect operation or setting.

Error No.	Data	Error Message	Contents
1140	-	No input signals are set.	
1141	-	Overlapped input signals exist.	
1142	-	Overlapped output signals exist.	
1143	-	The signal which cannot be used is set up.	
1150	*	There are abnormal values in the file.	
	1		FILE NO.
	2		FILE SET STATUS
	3		FILE VALID CONDITION
	4		ALARM SET
	5		STOP METHOD
	6		Control GROUP
	7		Robot range limit: MONITOR TARGET
	8		Robot range limit: COORDINATE
	9		Robot range limit: SHAPE TYPE
	10		Range combination: INPUT FILE1, INPUT FILE2 and OUTPUT FILE
11		Range combination: LOGIC	
1151	*	Check the numeric value settings.	
	1		Axis range limit: the valid axis can be set by maximum < minimum.
	2		Robot range limit: set the "Z UPPER < Z LOWER" when the creating method is the prism.
	4		Robot range limit: set the same coordinate at the two vertices of the plane monitoring.

Error No.	Data	Error Message	Contents
1152	*	The set values are out of range.	
	1		Axis range limit: maximum value and minimum value
	2		Axis speed monitor: speed
	3		Axis speed monitor: acceptable range
	4		Speed limit: limit speed (Robot)
	5		Speed limit: limit speed (Station)
	6		Speed limit: detection delay time
	7		Speed limit: acceptable range
	8		Robot range limit: used point number
	9		Robot range limit: X and Y coordinates
	10		Robot range limit: Z coordinate
	11		Approach warning buzzer: buzzer occurring distance
	12		Approach warning buzzer: universal output number
	13		Tool angle monitor: reference angle
	14		Tool angle monitor: limit angle
16		Tool change monitor: tool number	
17		Tool change monitor: detection delay time	
1160	*	The selected control group cannot be applied to functional safety.	
	2		The target group of the group change
	3		The target group of the gun change
	4		The group with the endless axis
	5		The group with the speed control axis
	6		The group with unsetting of the current position set up parameter
	7		The group with unsetting of the approximation model
	8		The group is not the monitoring target of the functional safety.
	9		The group with the functional safety monitoring invalid axis
1161	*	The axis that cannot be applied to functional safety exist.	
	10 to 17		The axis motion range limit and the axis speed monitor are valid, and the axes are endless axes (10+axis number).
	20 to 27		The axis motion range limit and the axis speed monitor are valid, and the axes are speed control axes (20+axis number).
	30 to 37		The axis motion range limit and the axis speed monitor are valid, and the axes are functional safety monitoring invalid axes (30+axis number).
1162	*	The axis to which coasting distance is not set cannot be set to VALID.	
	0 to 7		The coasting values are not set when the axis is valid (axis number).

Error No.	Data	Error Message	Contents
1163	*	The group to which coasting distance is not set cannot be set to VALID.	
1170	*	Range cannot be configured with this setting.	
	1		Invalid robot range limit file number
	2		Inequality of the neighboring lines in the initial and terminal node
	3		There is the same point at the specified vertex.
	4		Lack of the setting vertex number
	5		The setting range lines are interfering each other.
	8		Inappropriate height setting
	9		Detected the non-convex range
	12		The exceeded number of the vertices
	13		Failure to create the data for the monitoring the outside of the range.
14		Failure to create the plane surface range.	
1180	-	Same file cannot be set.	
1181	-	The specified output file is under monitoring.	
1182	-	Monitor type differs between INPUT1 and INPUT2.	
1183	-	Coord type differs between INPUT1 and INPUT2.	
1184	-	The height in Z-direction differs between INPUT1 and INPUT2.	
1185	*	Range combination cannot be performed.	
	1		Inappropriate specified combination
	2		The exceeded number of the point of the intersection
	3		Failure to combine the range "AND"
	4		Failure to combine the range "OR"
1186	-	The combination use of the files where plane monitoring is set is not permitted.	
1190	-	Cannot modify this parameter.	
1191	-	Axis range limit function is temporally disabled.	
1192	-	Robot range limit function is temporally disabled.	
1194	-	Tool range limit function is temporally disable.	
1195	*	The tool No. must be the same as the registered tool No.	
	xxx		The control group for the operation target.
1196	-	Select "Safety Board FLASH Reset".	

YRC1000 OPTIONS INSTRUCTIONS

FOR FUNCTIONAL SAFETY FUNCTION

©2016 YASKAWA ELECTRIC CORPORATION
Published by YASKAWA

YASKAWA

YASKAWA ELECTRIC CORPORATION

October 2019 16-12

MANUAL NO.

HW1483576  203/203